




# DSG SERIES

## 3 TO 5 TON LIGHT COMMERCIAL PACKAGED GAS UNIT

### WIRING DIAGRAM SUPPLEMENT

#### FOR DSG MODELS WITH DDC CONTROLS

*For complete information and installation instructions for models with DDC controls,  
see manual DK-DDC-TGD-01\*.*

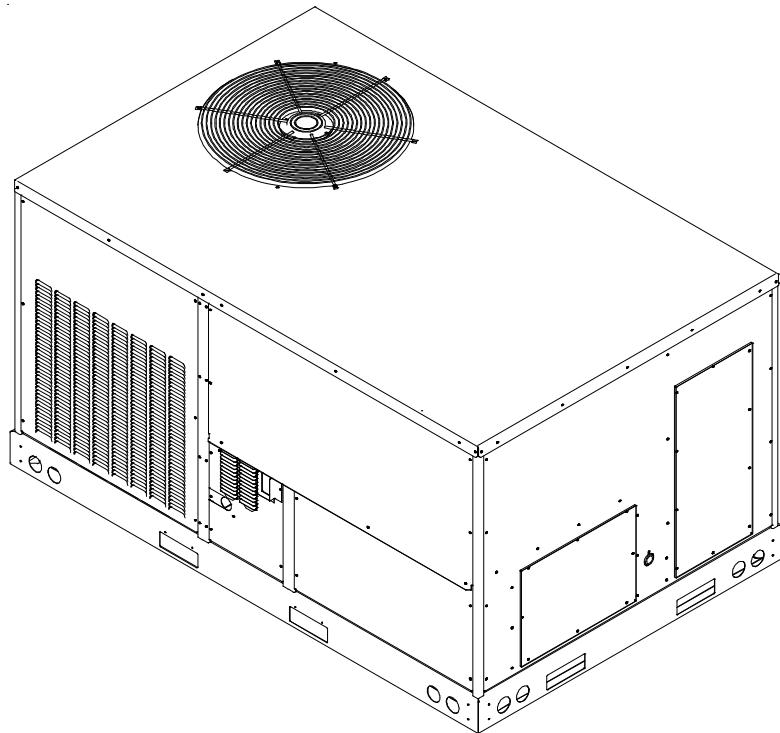

RECOGNIZE THIS SYMBOL AS A SAFETY PRECAUTION.

Our continuing commitment to quality products may mean a change in specifications without notice.




## Index

DSG[036, 048]090 DSG048115 DSG060140 [208-230V/3PH/60HZ]B*** .....	3
DSG[036, 048]090 DSG048115 DSG060140 [208-230V/3PH/60HZ]B*** .....	4
DSG[036, 048]090 DSG048115 DSG060140 [460/575V/3PH/60HZ]B*** .....	5
DSG[036, 048]090 DSG048115 DSG060140 [460/575V/3PH/60HZ]B*** .....	6
DSG036045 [208-230V/1PH/60HZ]D*** .....	7
DSG036045 [208-230V/1PH/60HZ]D*** .....	8
DSG[036, 048]090 DSG048115 [208-230V/1PH/60HZ]D*** .....	9
DSG[036, 048]090 DSG048115 [208-230V/1PH/60HZ]D*** .....	10
DSG060[090, 140][208-230V/1PH/60HZ]D*** .....	11
DSG060[090, 140][208-230V/1PH/60HZ]D*** .....	12
DSG036045 [208-230V/3PH/60HZ]D*** .....	13
DSG036045 [208-230V/3PH/60HZ]D*** .....	14
DSG[036, 048]090 DSG048115 [208-230V/3PH/60HZ]D*** .....	15
DSG[036, 048]090 DSG048115 [208-230V/3PH/60HZ]D*** .....	16
DSG060[090, 140][208-230V/3PH/60HZ]D*** .....	17
DSG060[090, 140] [208-230V/3PH/60HZ]D*** .....	18




**HIGH VOLTAGE!**  
DISCONNECT ALL POWER BEFORE SERVICING OR INSTALLING THIS  
UNIT. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO  
DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

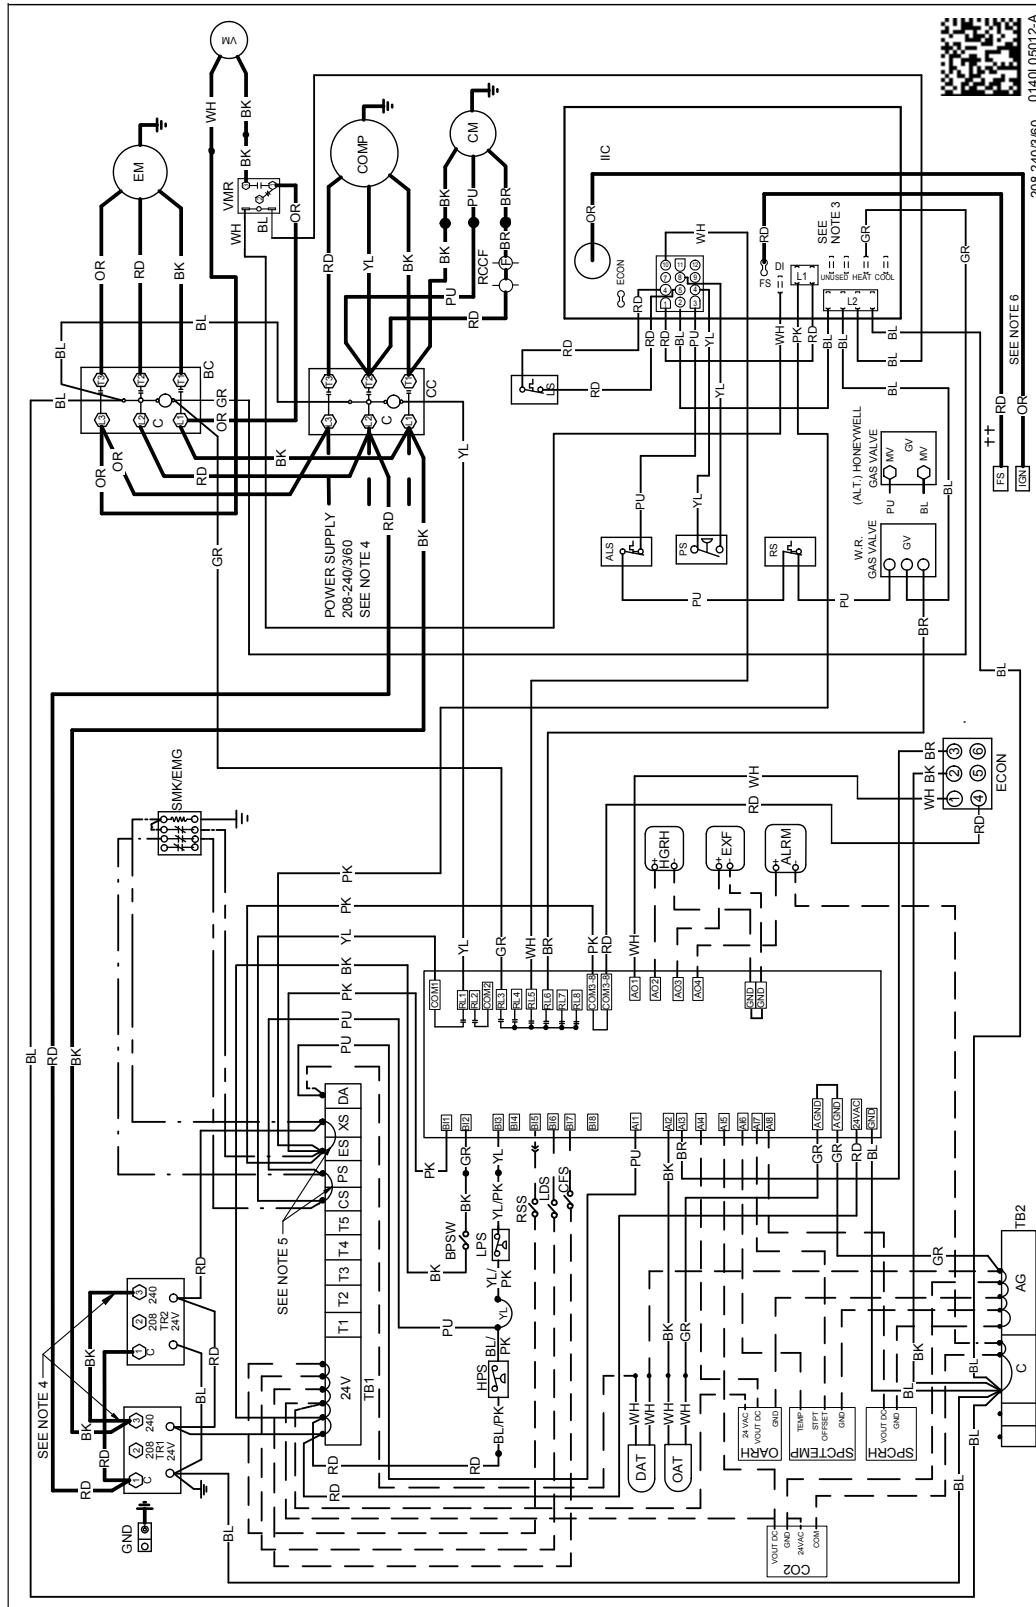

Wiring is subject to change. Always refer to the wiring diagram on the unit for the most up-to-date wiring.



**HIGH VOLTAGE!**  
DISCONNECT ALL POWER BEFORE SERVICING OR INSTALLING THIS  
UNIT. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO  
DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

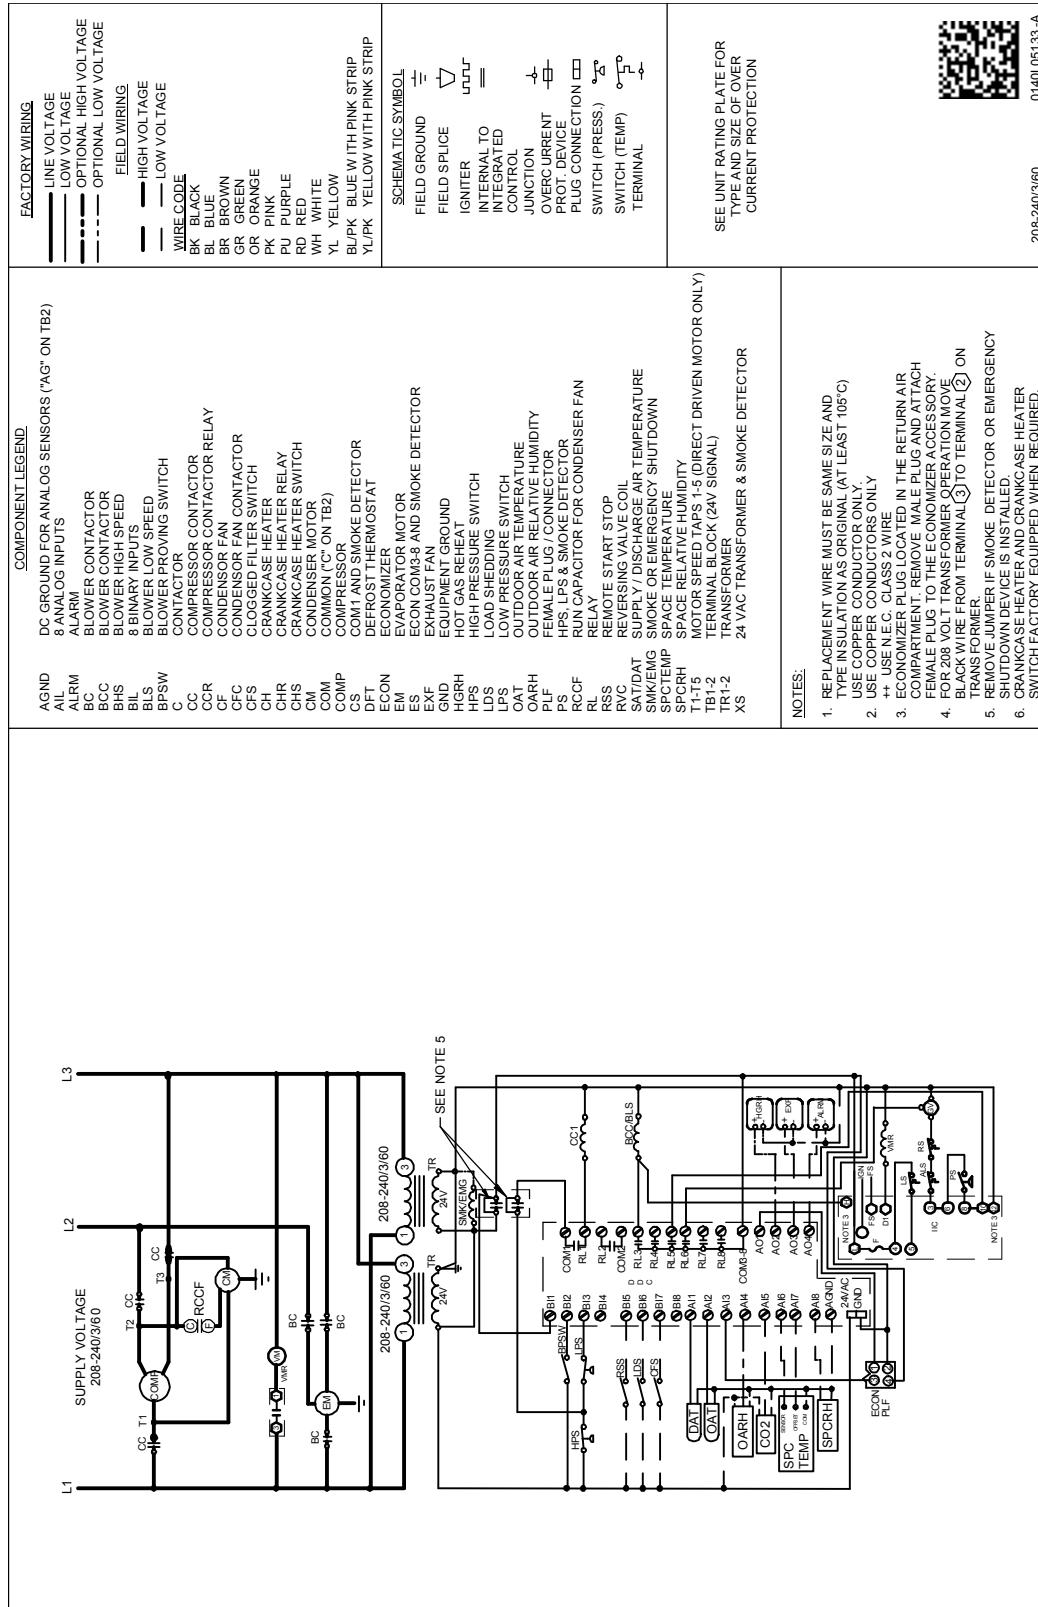


Wiring is subject to change. Always refer to the wiring diagram on the unit for the most up-to-date wiring.






**HIGH VOLTAGE!**  
DISCONNECT ALL POWER BEFORE SERVICING OR INSTALLING THIS  
UNIT. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO  
DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

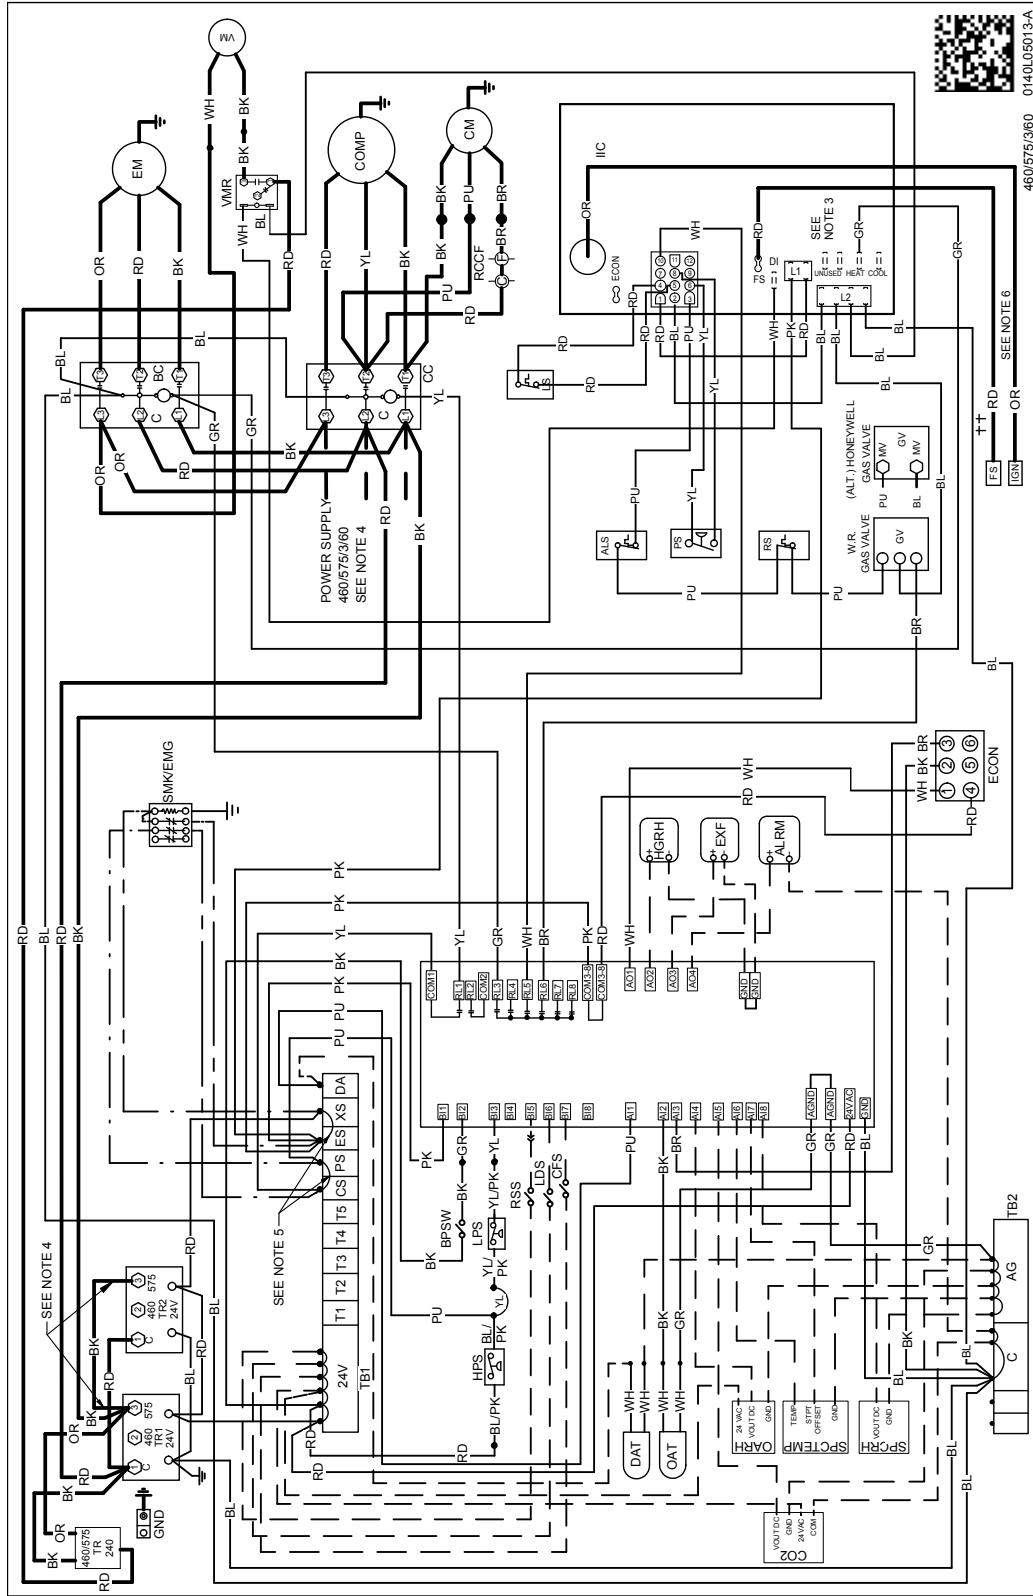


Wiring is subject to change. Always refer to the wiring diagram on the unit for the most up-to-date wiring.

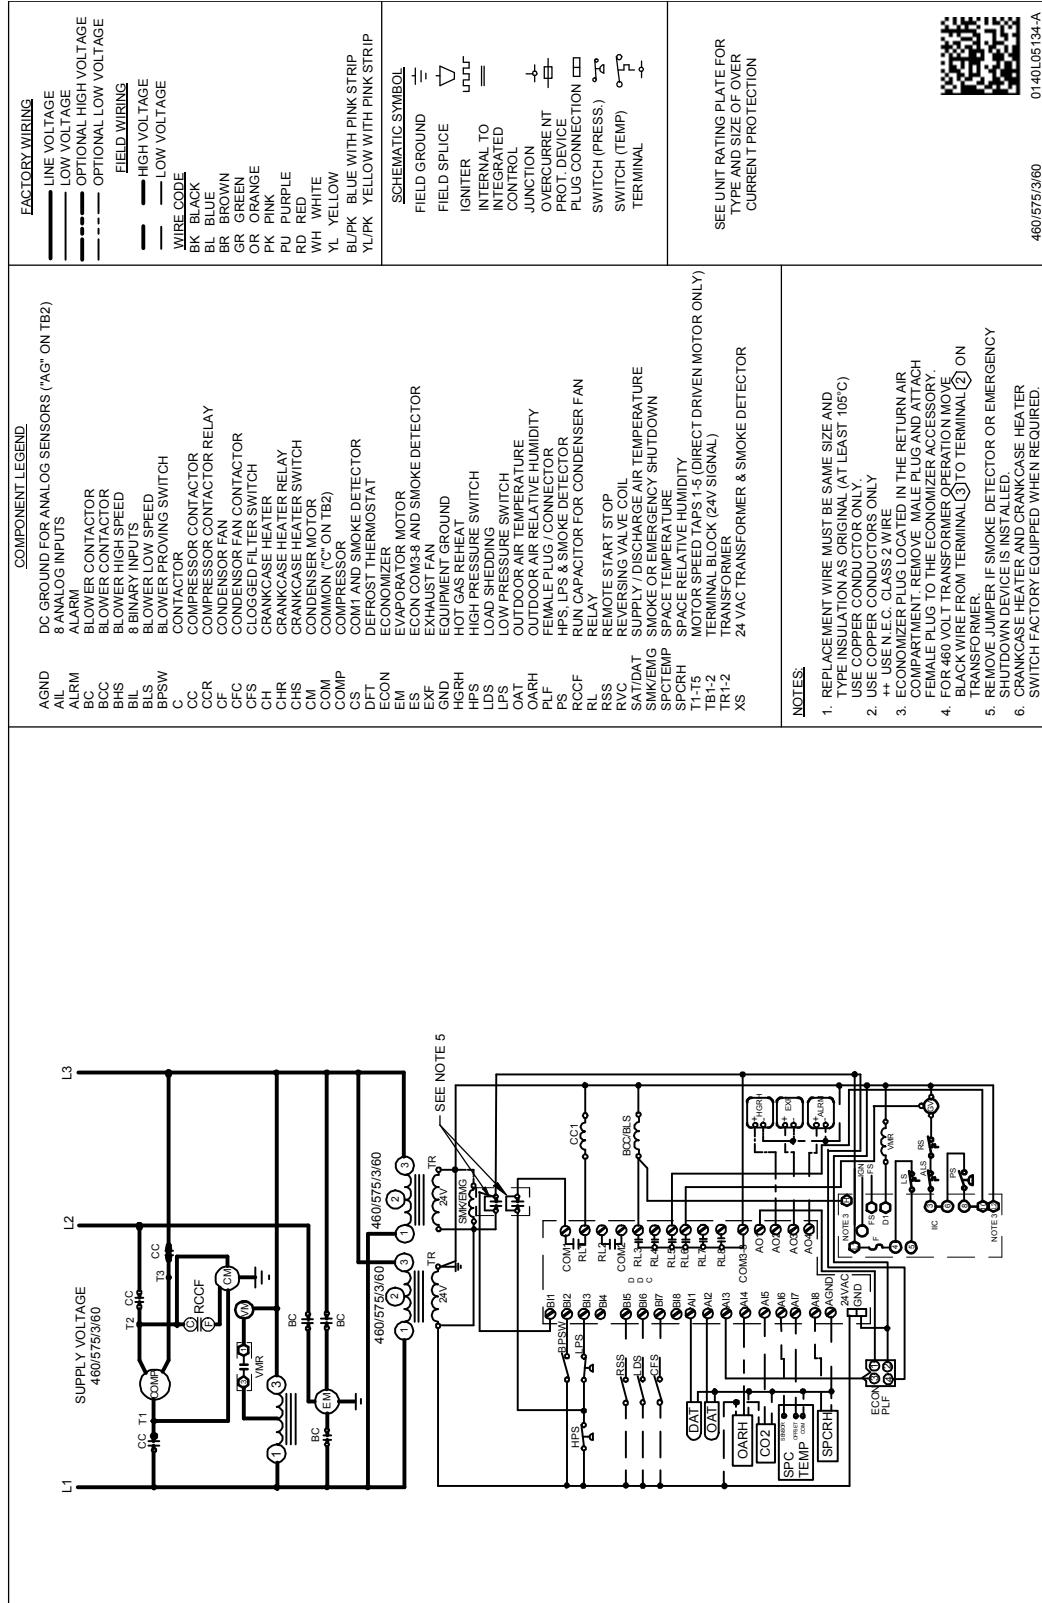

Wiring is subject to change. Always refer to the wiring diagram on the unit for the most up-to-date wiring.




**HIGH VOLTAGE!**  
DISCONNECT ALL POWER BEFORE SERVICING OR INSTALLING THIS  
UNIT. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO  
DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

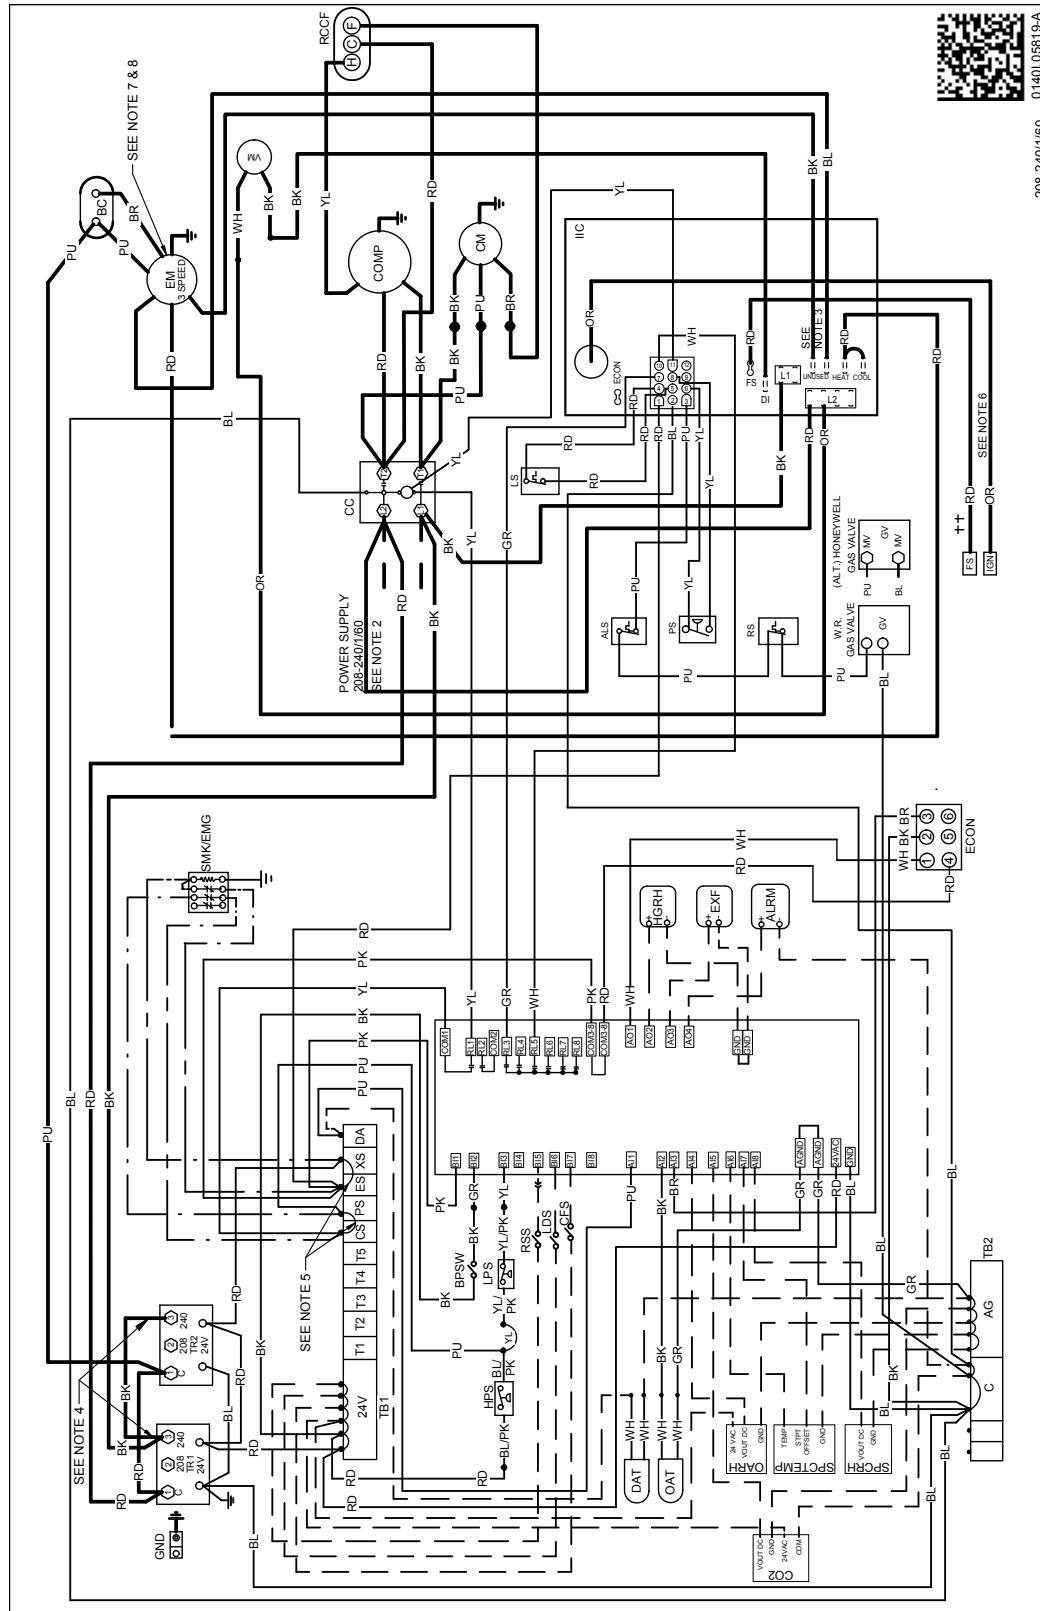

Wiring is subject to change. Always refer to the wiring diagram on the unit for the most up-to-date wiring.



Wiring is subject to change. Always refer to the wiring diagram on the unit for the most up-to-date wiring.

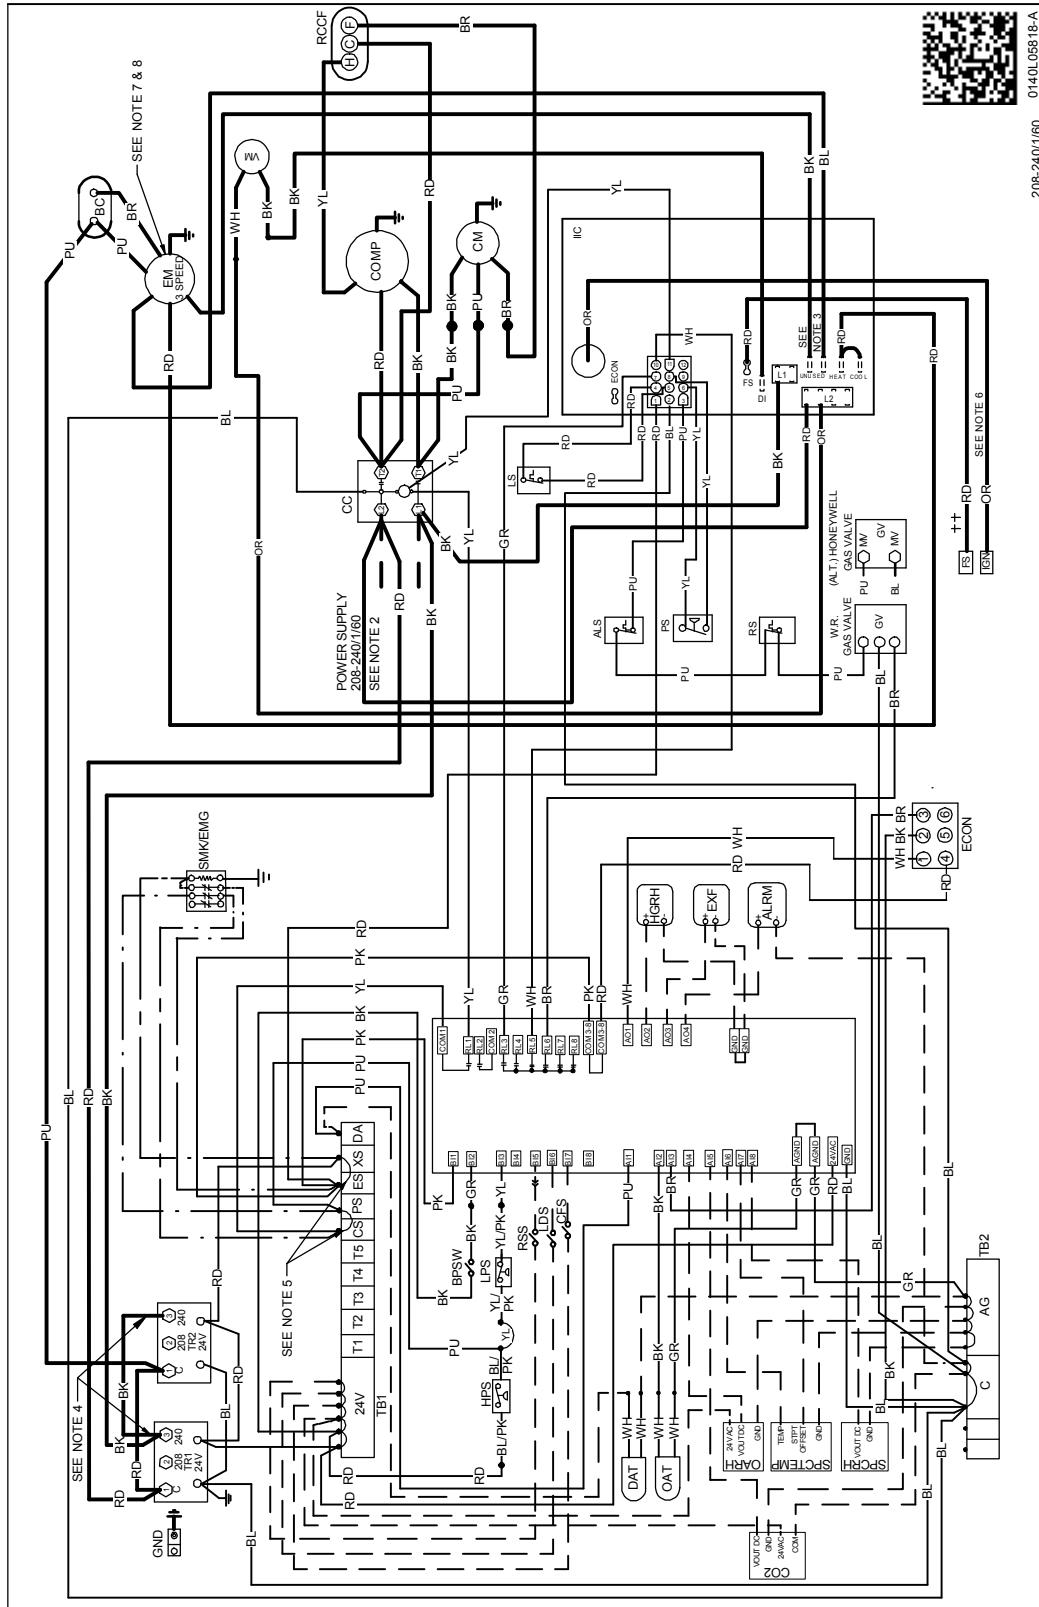

Wiring is subject to change. Always refer to the wiring diagram on the unit for the most up-to-date wiring.




**HIGH VOLTAGE!**  
DISCONNECT ALL POWER BEFORE SERVICING OR INSTALLING THIS  
UNIT. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO  
DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.



Wiring is subject to change. Always refer to the wiring diagram on the unit for the most up-to-date wiring.




**HIGH VOLTAGE!**  
DISCONNECT ALL POWER BEFORE SERVICING OR INSTALLING THIS  
UNIT. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO  
DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

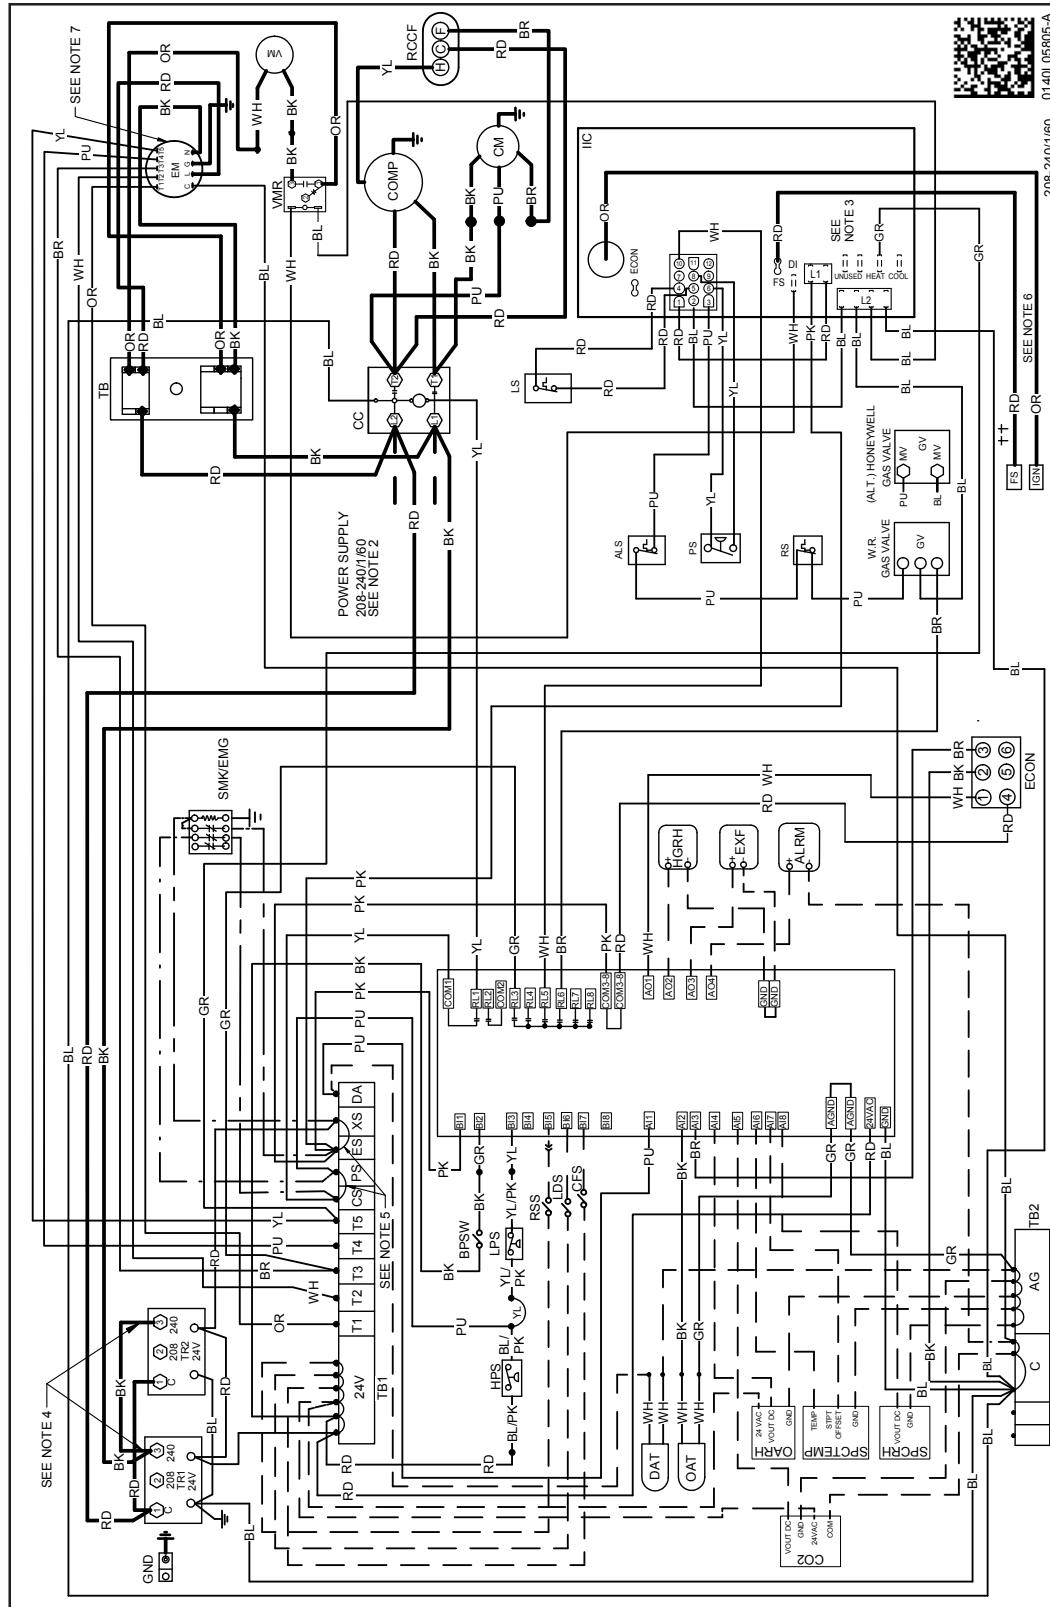

Wiring is subject to change. Always refer to the wiring diagram on the unit for the most up-to-date wiring.



**HIGH VOLTAGE!**  
DISCONNECT ALL POWER BEFORE SERVICING OR INSTALLING THIS  
UNIT. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO  
DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

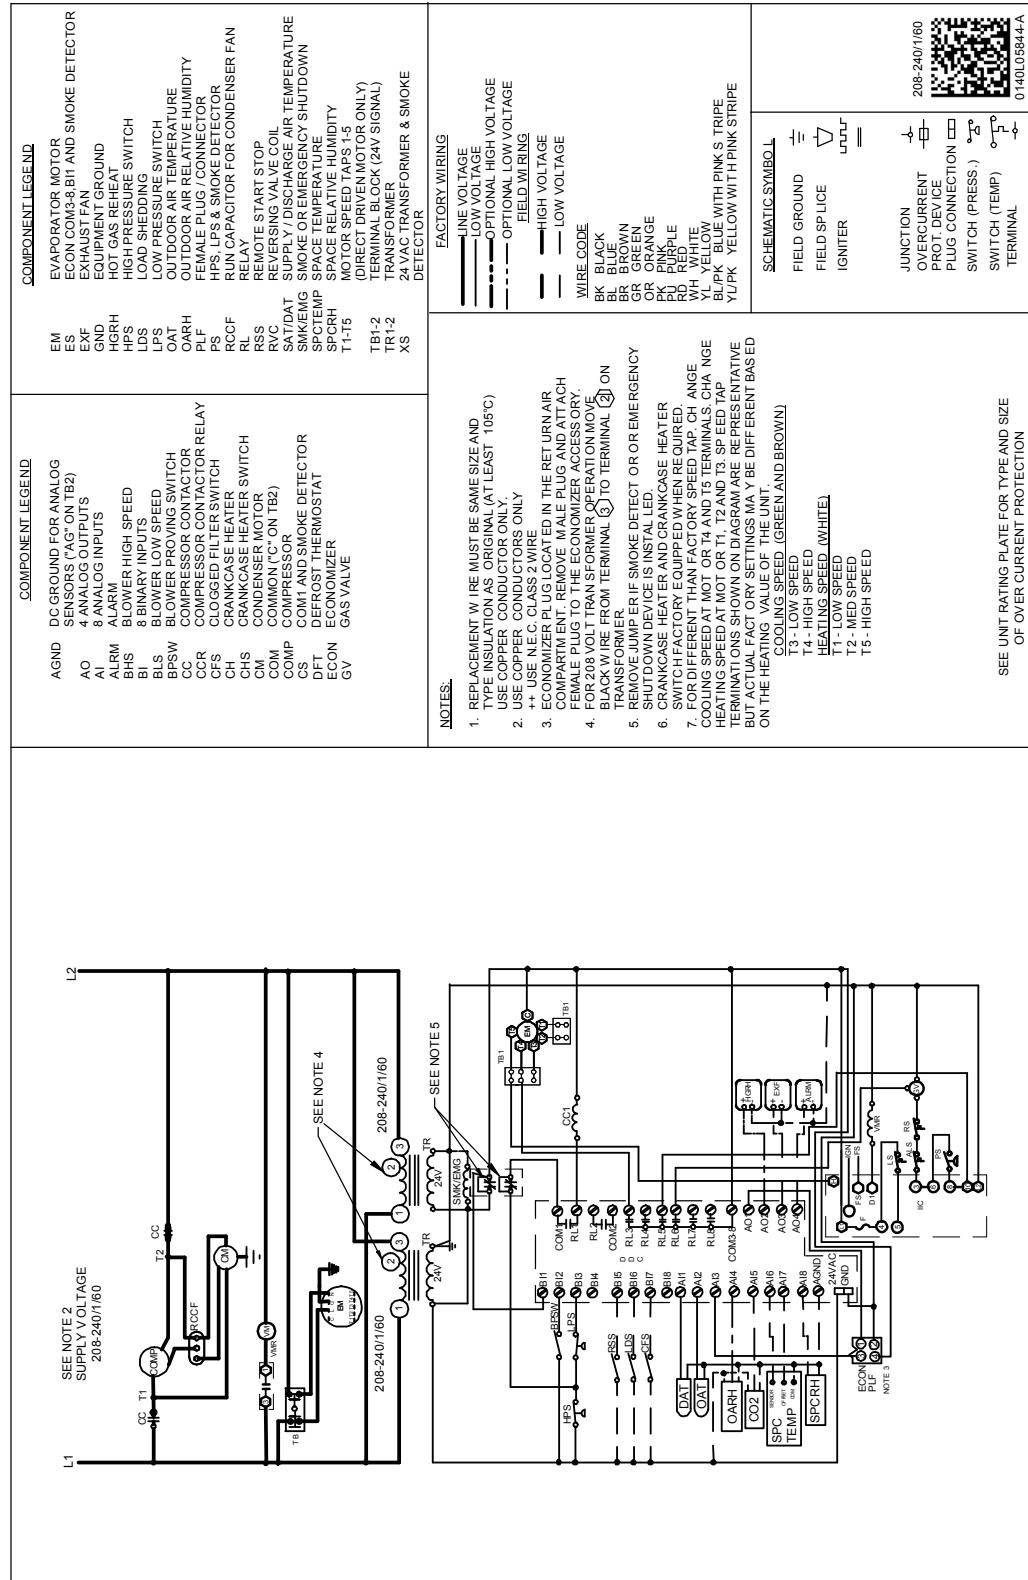

Wiring is subject to change. Always refer to the wiring diagram on the unit for the most up-to-date wiring.






**HIGH VOLTAGE!**  
DISCONNECT ALL POWER BEFORE SERVICING OR INSTALLING THIS  
UNIT. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO  
DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.



Wiring is subject to change. Always refer to the wiring diagram on the unit for the most up-to-date wiring.




**HIGH VOLTAGE!**  
DISCONNECT ALL POWER BEFORE SERVICING OR INSTALLING THIS  
UNIT. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO  
DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

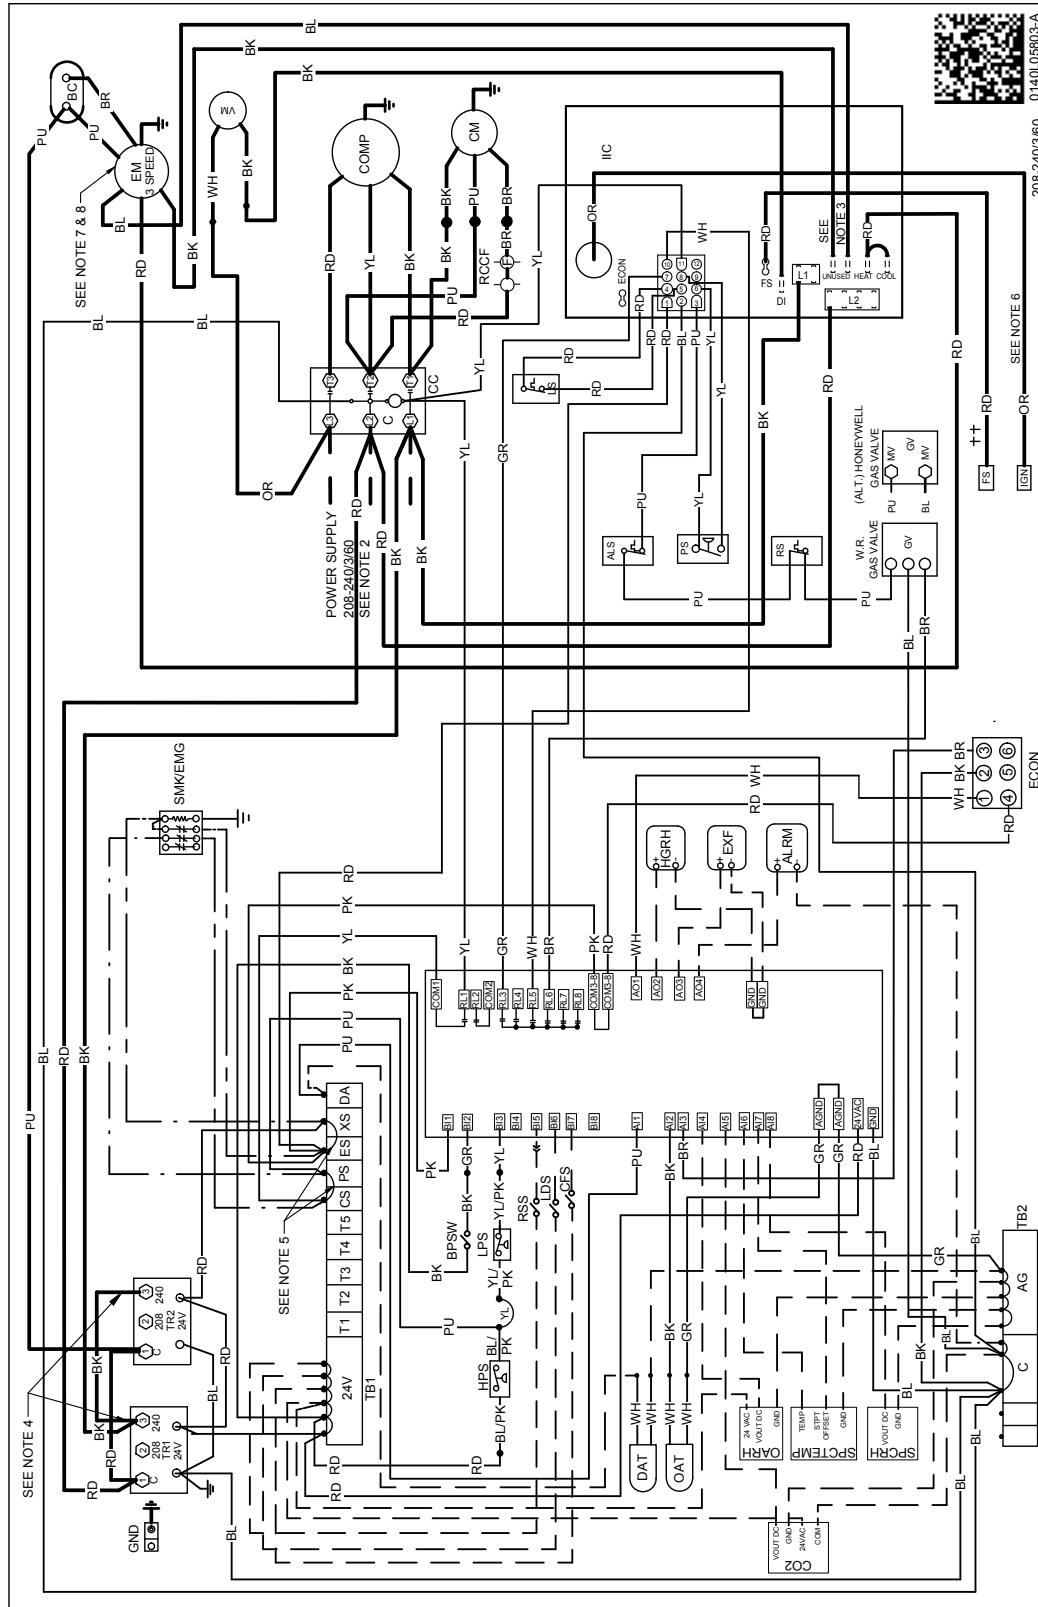

Wiring is subject to change. Always refer to the wiring diagram on the unit for the most up-to-date wiring.




**HIGH VOLTAGE!**  
**DISCONNECT ALL POWER BEFORE SERVICING OR INSTALLING THIS UNIT. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.**

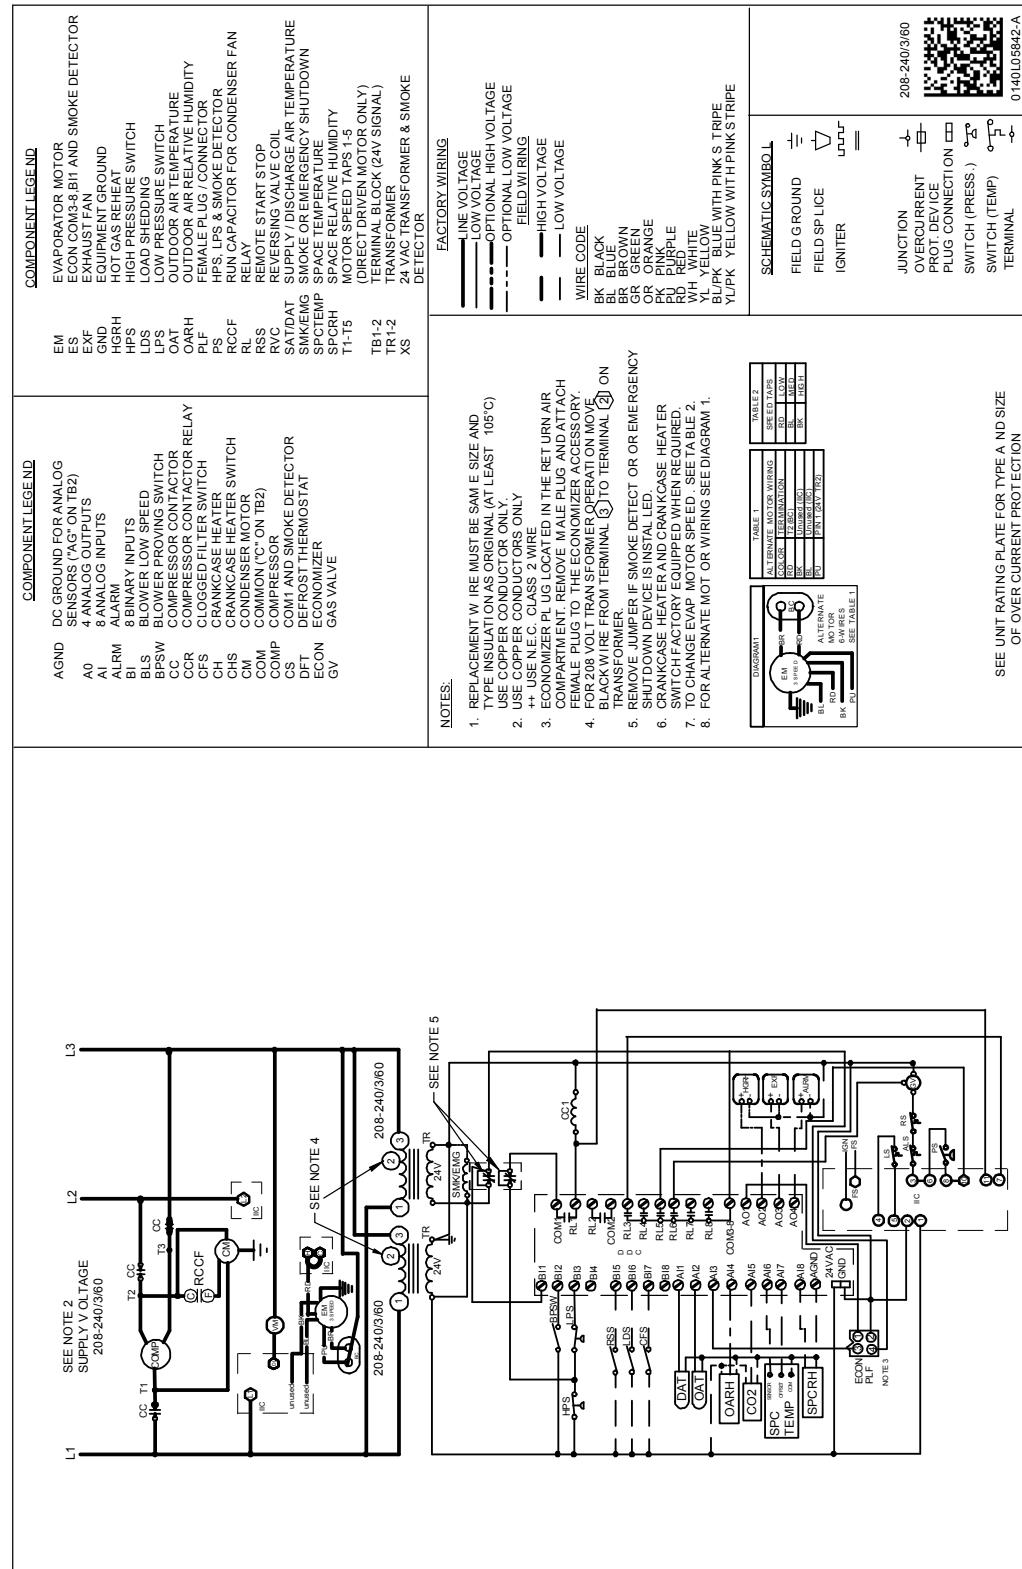

Wiring is subject to change. Always refer to the wiring diagram on the unit for the most up-to-date wiring.




**HIGH VOLTAGE!**  
DISCONNECT ALL POWER BEFORE SERVICING OR INSTALLING THIS  
UNIT. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO  
DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

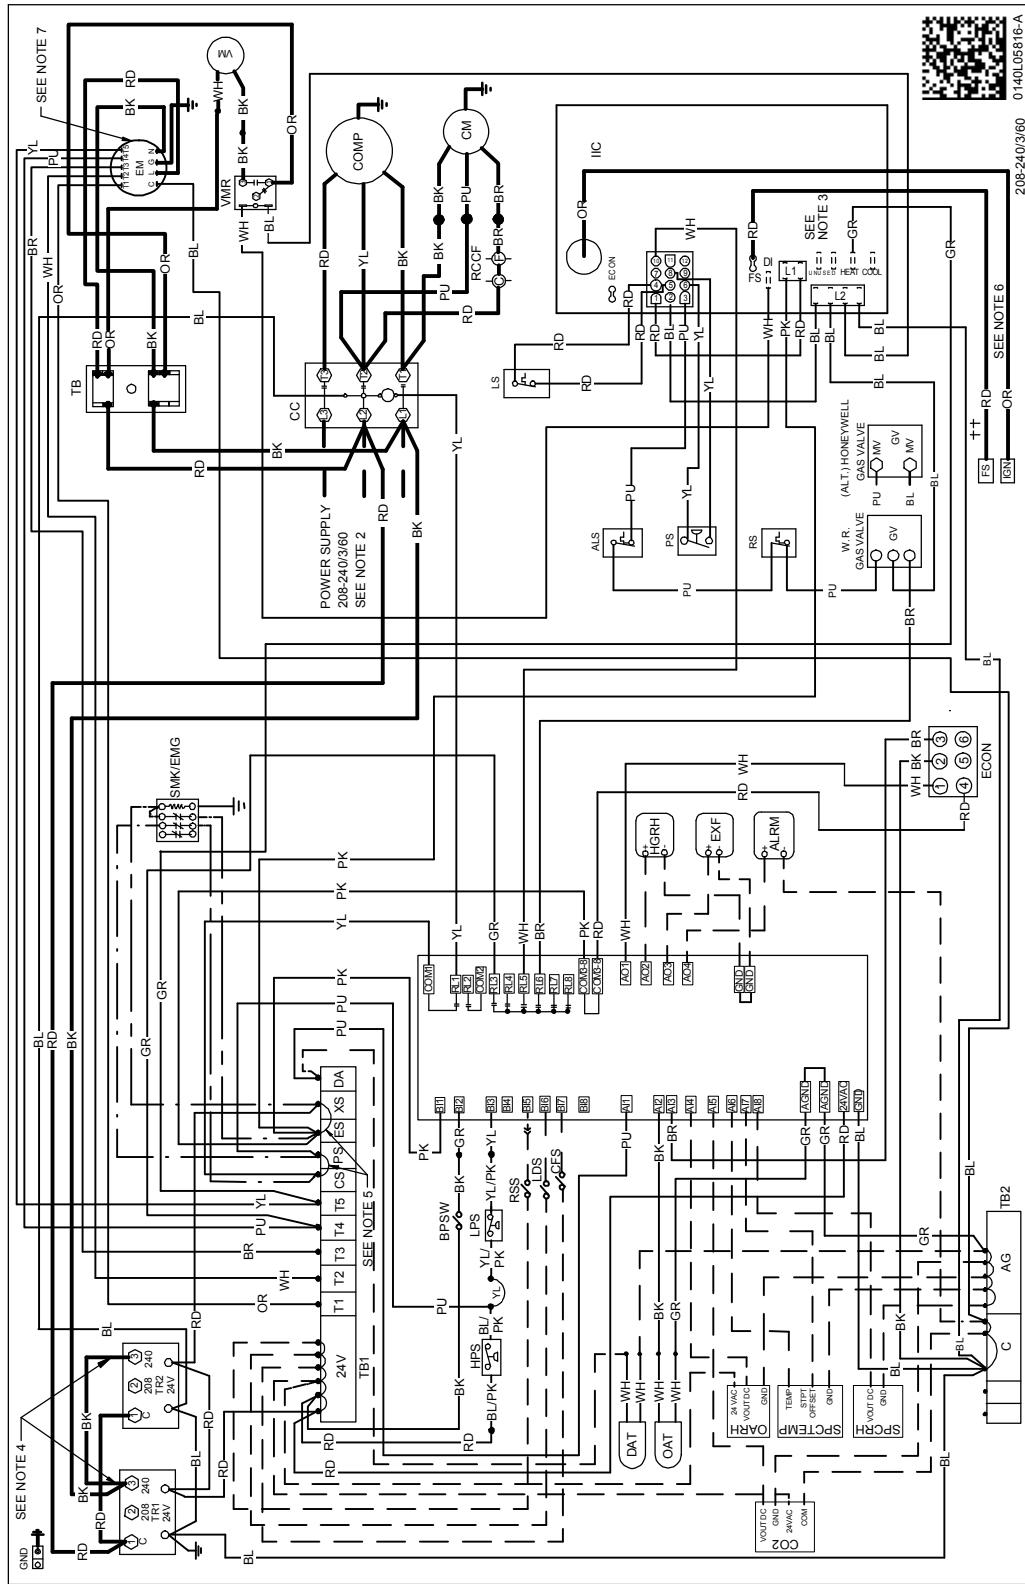

Wiring is subject to change. Always refer to the wiring diagram on the unit for the most up-to-date wiring.



**HIGH VOLTAGE!**  
DISCONNECT ALL POWER BEFORE SERVICING OR INSTALLING THIS  
UNIT. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO  
DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

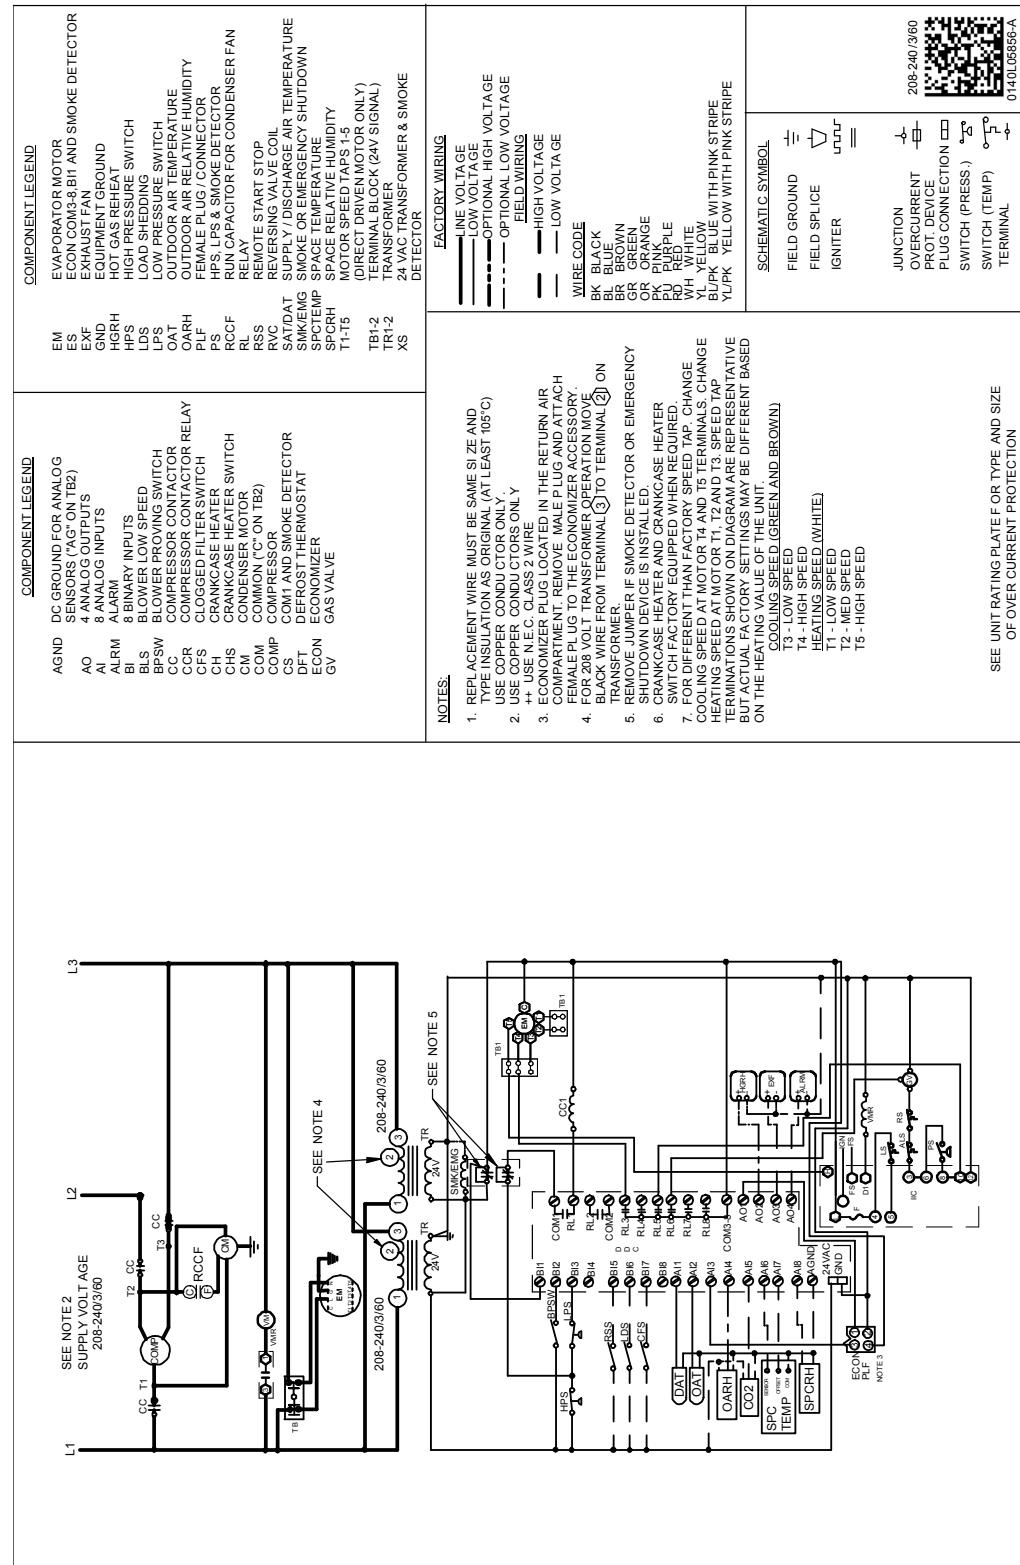

Wiring is subject to change. Always refer to the wiring diagram on the unit for the most up-to-date wiring.

**THIS PAGE LEFT BLANK  
INTENTIONALLY.**

Our continuing commitment to quality products may mean a change in specifications without notice.

© 2016 **DAIKIN COMPANY, L.P.**

5151 San Felipe St., Suite 500, Houston, TX 77056  
[www.daikincomfort.com](http://www.daikincomfort.com)