

**548J*14D
SINGLE PACKAGE ROOFTOP
HEAT PUMP
WITH WITH PURON® (R-410A) REFRIGERANT
SIZE 14**



Installation Instructions

NOTE: Read the entire instruction manual before starting the installation.


TABLE OF CONTENTS

SAFETY CONSIDERATIONS	1	Unit without Thru-Base Conversion Kit	16
INSTALLATION	4	Heat Anticipator Settings	16
Jobsite Survey	4	Electric Heaters	16
Step 1 - Plan for Unit Location	4	Single Point Boxes	17
Roof Mount	5	Heater Low-Voltage Control Connections	17
Step 2 - Plan for Sequence of Unit Installation	5	Outdoor Air Enthalpy Control	18
Curb-Mount Installation	5	Differential Enthalpy Control	18
Pad-Mount Installation	5	Return Air Enthalpy Sensor	18
Frame-Mount Installation	5	RTU-MP Control System	19
Step 3 - Inspect Unit	5	Supply Air Temperature (SAT) Sensor	21
Step 4 - Provide Unit Support	5	Outdoor Air Temperature (OAT) Sensor	22
Roof Curb Mount	5	EconoMiSer2	22
Slab Mount (Horizontal Units Only)	5	Field Connections	22
Alternate Unit Support	5	Space Temperature (SPT) Sensors	22
Step 5 - Field Fabricate Ductwork	7	Economizer Controls	23
For Units with Accessory Electric Heaters	7	Indoor Air Quality (CO ₂) Sensor	23
Step 6 - Rig and Place Unit	7	Outdoor Air Quality Sensor	24
Step 7 - Convert to Horizontal & Connect Ductwork ..	8	Connecting Discrete Inputs	24
Step 8 - Install Outside Air Hood	8	Communication Wiring - Protocols	25
Economizer Hood Removal and Setup	8	General	25
Two Position Damper Hood Removal and Setup ..	9	Local Access	25
Economizer Hood and Two-Position Hood	10	RTU-MP Troubleshooting	25
Step 9 - Install External Condensate Trap and Line ..	10	Smoke Detectors	27
Step 10 - Make Electrical Connections	11	System	27
Field Power Supply	11	Controller	27
Units without Factory-Installed Disconnect	13	Sensor	27
Units with Factory-Installed Disconnect	13	Smoke Detector Locations	28
Convenience Outlets	13	Supply Air	28
Factory-Option Thru-Base Connections	15	Return Air without Economizer	28
Units without Thru-Base Connections	15	Return Air with Economizer	28
Field Control Wiring	15	Step 11 - Adjust Factory-Installed Options	32
Thermostat	15	Step 12 - Install Accessories	33

SAFETY CONSIDERATIONS

Improper installation, adjustment, alteration, service, maintenance, or use can cause explosion, fire, electrical shock or other conditions which may cause personal injury or property damage. Consult a qualified installer, service agency, or your distributor or branch for information or assistance. The qualified installer or agency must use factory-authorized kits or accessories when modifying this product. Refer to the individual instructions packaged with the kits or accessories when installing.

Follow all safety codes. Wear safety glasses and work gloves. Use quenching cloths for brazing operations and have a fire extinguisher available. Read these instructions thoroughly and follow all warnings or cautions attached to the unit. Consult local building codes and appropriate national electrical codes (in USA, ANSI/NFPA70, National Electrical Code (NEC); in Canada, CSA C22.1) for special requirements.

It is important to recognize safety information. This is the safety-alert symbol . When you see this symbol on the unit and in instructions or manuals, be alert to the potential for personal injury.

Understand the signal words DANGER, WARNING, CAUTION, and NOTE. These words are used with the safety-alert symbol. DANGER identifies the most serious hazards which **will** result in severe personal injury or death. WARNING signifies hazards which **could** result in personal injury or death. CAUTION is used to identify unsafe practices, which **may** result in minor personal injury or product and property damage. NOTE is used to highlight suggestions which **will** result in enhanced installation, reliability, or operation.

548J*14D

WARNING

ELECTRICAL SHOCK HAZARD

Failure to follow this warning could cause personal injury or death.

Before performing service or maintenance operations on unit, always turn off main power switch to unit and install lockout tag. Unit may have more than one power switch.

WARNING

UNIT OPERATION AND SAFETY HAZARD

Failure to follow this warning could cause personal injury, death and/or equipment damage.

Puron® (R-410A) refrigerant systems operate at higher pressures than standard R-22 systems. Do not use R-22 service equipment or components on Puron refrigerant equipment.

WARNING

PERSONAL INJURY AND ENVIRONMENTAL HAZARD

Failure to follow this warning could cause personal injury or death.

Relieve pressure and recover all refrigerant before system repair or final unit disposal.

Wear safety glasses and gloves when handling refrigerants. Keep torches and other ignition sources away from refrigerants and oils.



CAUTION






CUT HAZARD

Failure to follow this caution may result in personal injury.



Sheet metal parts may have sharp edges or burrs. Use care and wear appropriate protective clothing, safety glasses and gloves when handling parts and servicing heat pump units.

NOTES:

1. DIMENSIONS ARE IN INCHES, DIMENSIONS IN [] ARE IN MILLIMETERS.
2.  CENTER OF GRAVITY
3.  DIRECTION OF AIR FLOW

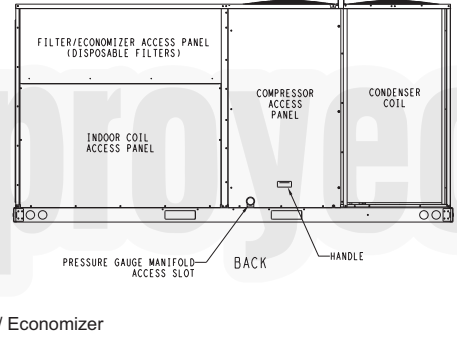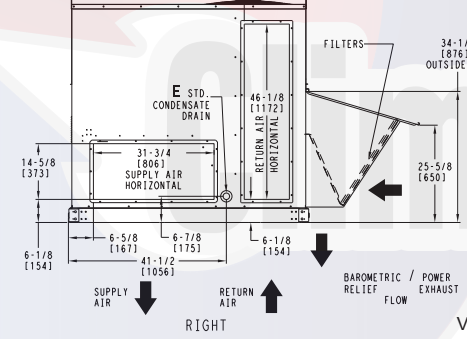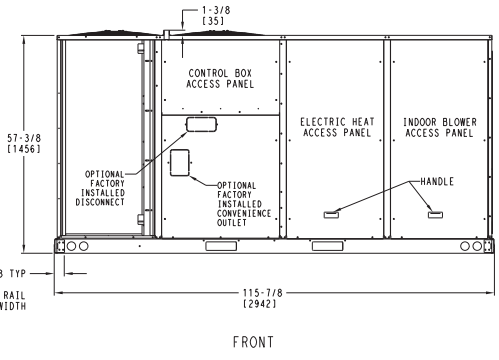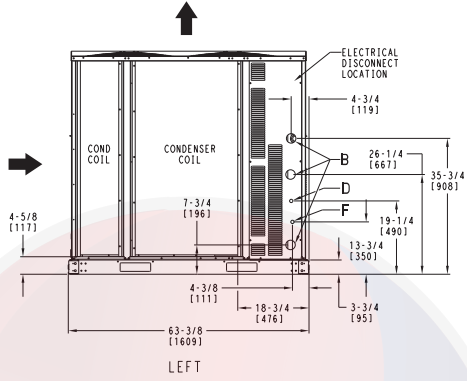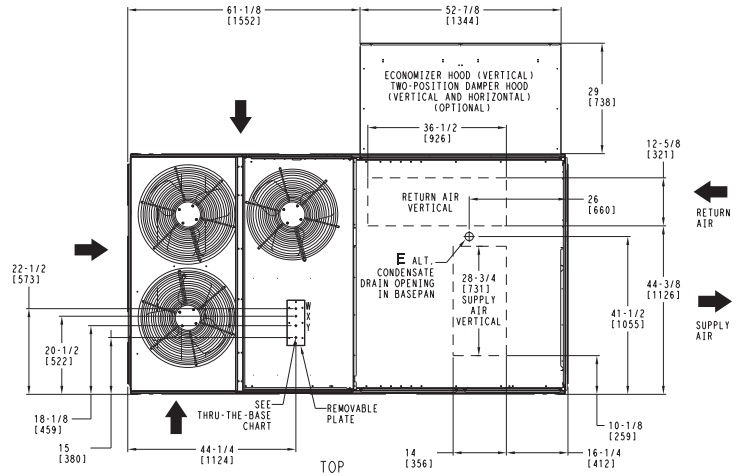

Vertical Connections / Economizer

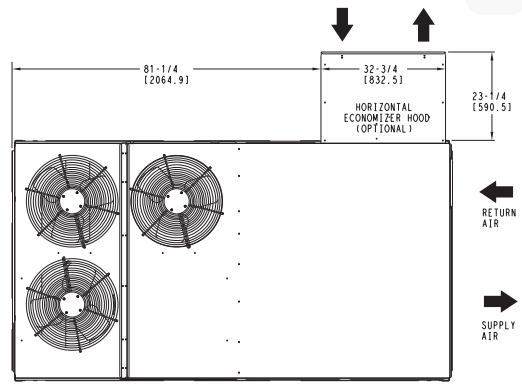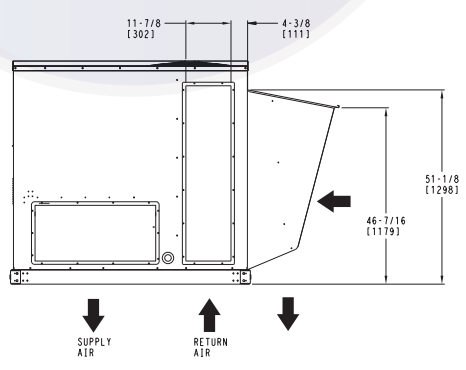

Horizontal Connections / Economizer

CONNECTION SIZES	
B	2 1/2" (64) DIA POWER SUPPLY HOLE
D	7/8" (22) DIA FIELD CONTROL WIRING HOLE
E	3/4"-14 NPT CONDENSATE DRAIN
F	7/8" (22) DIA FIELD CONVENIENCE OUTLET HOLE

THRU-THE-BASE CHART THESE HOLES REQUIRED FOR USE CROTPMPRO03A00_006A00_007A00				
ACCESSORY NO.	THREADED CONDUIT SIZE	WIRE USE	REQ'D HOLE SIZES (MAX.)	
005	W 1/2"	ACC.	7/8" (22.2)	
	X 1/2"	24V	7/8" (22.2)	
	Y 1 1/4"	POWER	1 1/2" (38.1)	
006	W 1/2"	ACC.	7/8" (22.2)	
	X 1/2"	24V	7/8" (22.2)	
	Y 1 1/2"	POWER	2" (50.8)	
007	W 1/2"	ACC.	7/8" (22.2)	
	X 1/2"	24V	7/8" (22.2)	
	Y 2"	POWER	2 1/2" (63.5)	

FOR "THRU-THE-BASEPAN" FACTORY OPTION, FITTINGS FOR X & Y ARE PROVIDED AS SPECIFIED ON "006".

Fig. 1 - Unit Dimensional Drawing – Size 14 Unit

548J*14D

UNIT	STD UNIT WEIGHT*		CORNER WEIGHT (A)		CORNER WEIGHT (B)		CORNER WEIGHT (C)		CORNER WEIGHT (D)		C.G.		
	LBS.	KG.	LBS.	KG.	LBS.	KG.	LBS.	KG.	LBS.	KG.	X	Y	Z
548J_14	1370	623	369	168	361	164	316	144	324	147	57 1/2 [1460]	29 1/2 [750]	24 [610]

*- STANDARD UNIT WEIGHT IS WITHOUT ELECTRIC HEAT AND WITHOUT PACKAGING.
FOR OTHER OPTIONS AND ACCESSORIES REFER TO THE PRODUCT DATA CATALOG.

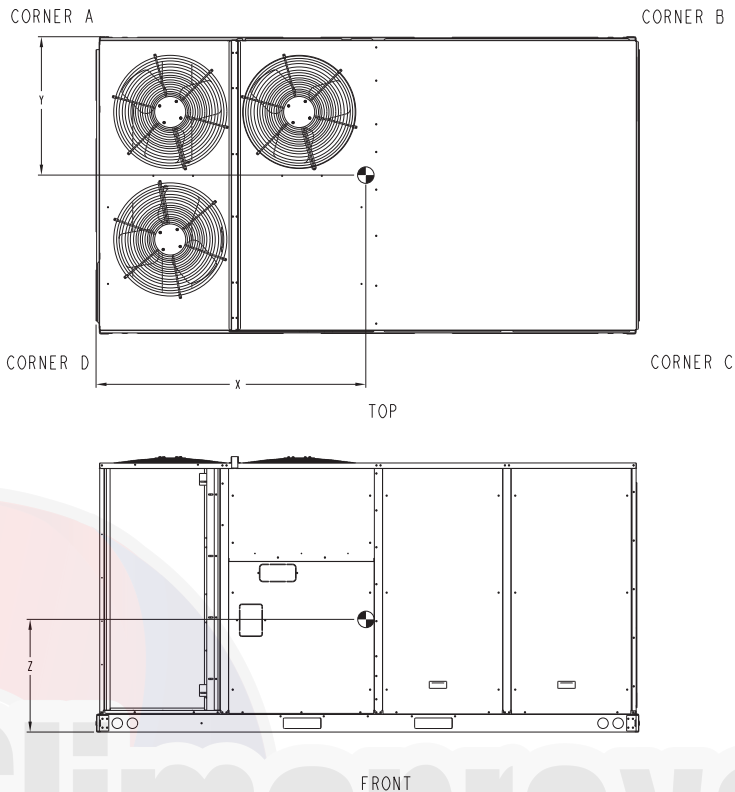


Fig. 1 - Unit Dimensional Drawing – Size 14 Unit (cont.)

C10364

INSTALLATION

Jobsite Survey

Complete the following checks before installation.

1. Consult local building codes and the NEC (National Electrical Code) ANSI/NFPA 70 for special installation requirements.
2. Determine unit location (from project plans) or select unit location.
3. Check for possible overhead obstructions which may interfere with unit lifting or rigging.


Step 1 — Plan for Unit Location

Select a location for the unit and its support system (curb or other) that provides for at least the minimum clearances required for safety. This includes the clearance to combustible surfaces, unit performance and service access below, around and above unit as specified in unit drawings. See Fig. 2.

NOTE: Consider also the effect of adjacent units.

Unit may be installed directly on wood flooring or on Class A, B, or C roof-covering material when roof curb is used.

Do not install unit in an indoor location. Do not locate air inlets near exhaust vents, relief valves, or other sources of contaminated air.

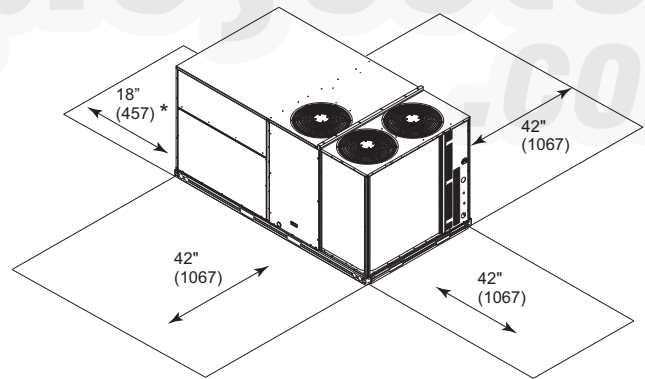

* Required bottom condensate drain connection.
Otherwise, 36" (914mm) for condensate connection.

C09897

Fig. 2 - Service Clearance Dimensional Drawing

Although unit is weatherproof, avoid locations that permit water from higher level runoff and overhangs to fall onto the unit.

Select a unit mounting system that provides adequate height to allow for removal and disposal of frost and ice that will form during the heating-defrost mode as well as allow installation of condensate trap per requirements. Refer to Step 9 — Install External Condensate Trap and Line – for required trap dimensions.

Roof Mount —

Check building codes for weight distribution requirements. Unit operating weight is shown in Table 1.

Table 1 – Operating Weights

548J*14D	UNITS LB (KG)
Component	14D
Base Unit	1370 (620)
Economizer	
Vertical	100 (45)
Horizontal	115 (52)
Powered Outlet	32 (15)
Curb	
14-in/356 mm	180 (82)
24-in/610 mm	235 (107)

Step 2 — Plan for Sequence of Unit Installation

The support method used for this unit will dictate different sequences for the steps of unit installation. For example, on curb-mounted units, some accessories must be installed on the unit before the unit is placed on the curb. Review the following for recommended sequences for installation steps.

Curb-mounted installation —

- Install curb
- Install field-fabricated ductwork inside curb
- Install accessory thru-base service connection package (affects curb and unit) (refer to accessory installation instructions for details)
- Prepare bottom condensate drain connection to suit planned condensate line routing (refer to Step 9 for details)
- Rig and place unit
- Install outdoor air hood
- Install condensate line trap and piping
- Make electrical connections
- Install other accessories

Pad-mounted installation —

- Prepare pad and unit supports
- Check and tighten the bottom condensate drain connection plug
- Rig and place unit
- Convert unit to side duct connection arrangement
- Install field-fabricated ductwork at unit duct openings
- Install outdoor air hood
- Install condensate line trap and piping
- Make electrical connections
- Install other accessories

Frame-mounted installation —

Frame-mounted applications generally follow the sequence for a curb installation. Adapt as required to suit specific installation plan.

Step 3 — Inspect Unit

Inspect unit for transportation damage. File any claim with transportation agency.

Confirm before installation of unit that voltage, amperage and circuit protection requirements listed on unit data plate agree with power supply provided.

Step 4 — Provide Unit Support

Roof Curb Mount —

Accessory roof curb details and dimensions are shown in Fig. 3. Assemble and install accessory roof curb in accordance with instructions shipped with the curb.

NOTE: The gasketing of the unit to the roof curb is critical for a watertight seal. Install gasket supplied with the roof curb as shown in Fig. 5. Improperly applied gasket can also result in air leaks and poor unit performance.

Curb should be level. This is necessary for unit drain to function properly. Unit leveling tolerances are shown in Fig. 4. Refer to Accessory Roof Curb Installation Instructions for additional information as required.

Install insulation, cant strips, roofing felt, and counter flashing as shown. *Ductwork must be attached to curb and not to the unit.*

If electric and control wiring is to be routed through the basepan, attach the accessory thru-the-base service connections to the basepan in accordance with the accessory installation instructions.

Slab Mount (Horizontal Units Only) —

Provide a level concrete slab that extends a minimum of 6 in. (150 mm) beyond unit cabinet. Install a gravel apron in front of condenser coil air inlet to prevent grass and foliage from obstructing airflow.

NOTE: Horizontal units may be installed on a roof curb if required.

Alternate Unit Support (In Lieu of Curb or Slab Mount) —

A non-combustible sleeper rail can be used in the unit curb support area. If sleeper rails cannot be used, support the long sides of the unit with a minimum of 3 equally spaced 4-in. x 4-in. (102 mm x 102 mm) pads on each side.

UNITED TECHNOLOGIES STRACHUSE, NY 13321
 P.O. BOX 4809 THIS DOCUMENT IS THE PROPERTY OF CARRIER CORPORATION AND IS DELIVERED UPON THE EXPRESS CONDITION THAT THE SUBMISSION OF THESE DRAWINGS OR DOCUMENTS DOES NOT CONSTITUTE PART PERFORMANCE OR ACCEPTANCE OF CONTRACT.

- NOTES:**
1. ROOFCURB ACCESSORY IS SHIPPED DISASSEMBLED.
 2. INSULATED PANELS: 1/2" THK. NEOPRENE FOAM, 1.0# DENSITY.
 3. DIMENSIONS IN PARENTS ARE IN MILLIMETERS.
 4. DIMENSIONS IN BRACKETS ARE IN INCHES.
 5. ATTACH DUCTWORK TO CURB (FLANGES OF DUCT REST ON CURB).
 6. SERVICE CLEARANCE 4 FT ON EACH SIDE.
 7. DIRECTION OF AIR FLOW.
 8. "L" & "S" DESIGNATIONS DENOTE LOCATION OF COMMON CROSS RAIL. (POSITION "S" FOR SMALL DUCT OPENING CURB).

ROOFCURB ACCESSORY #	A
CRRFCURB072A00	14" [356]
CRRFCURB073A00	24" [610]

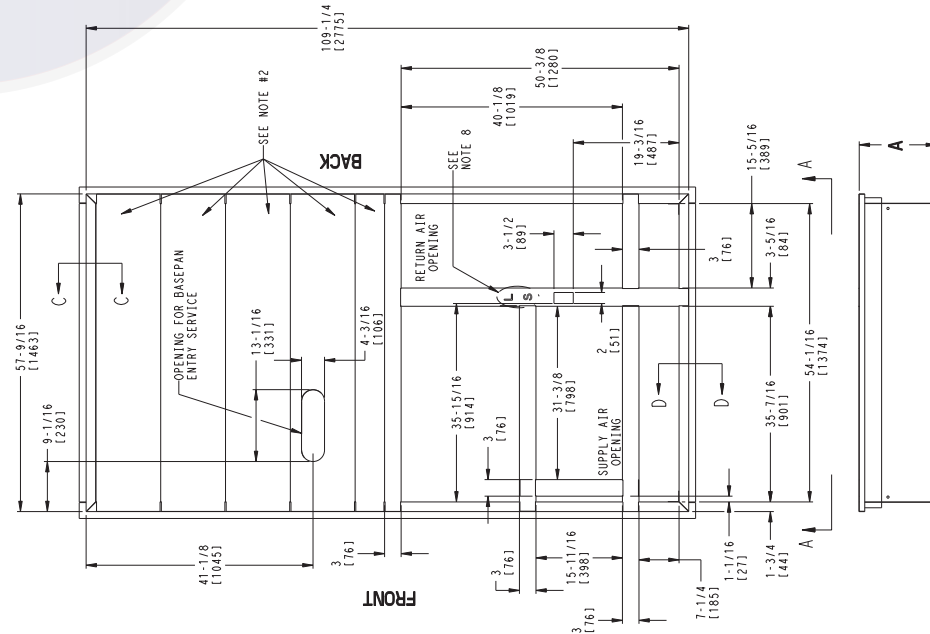
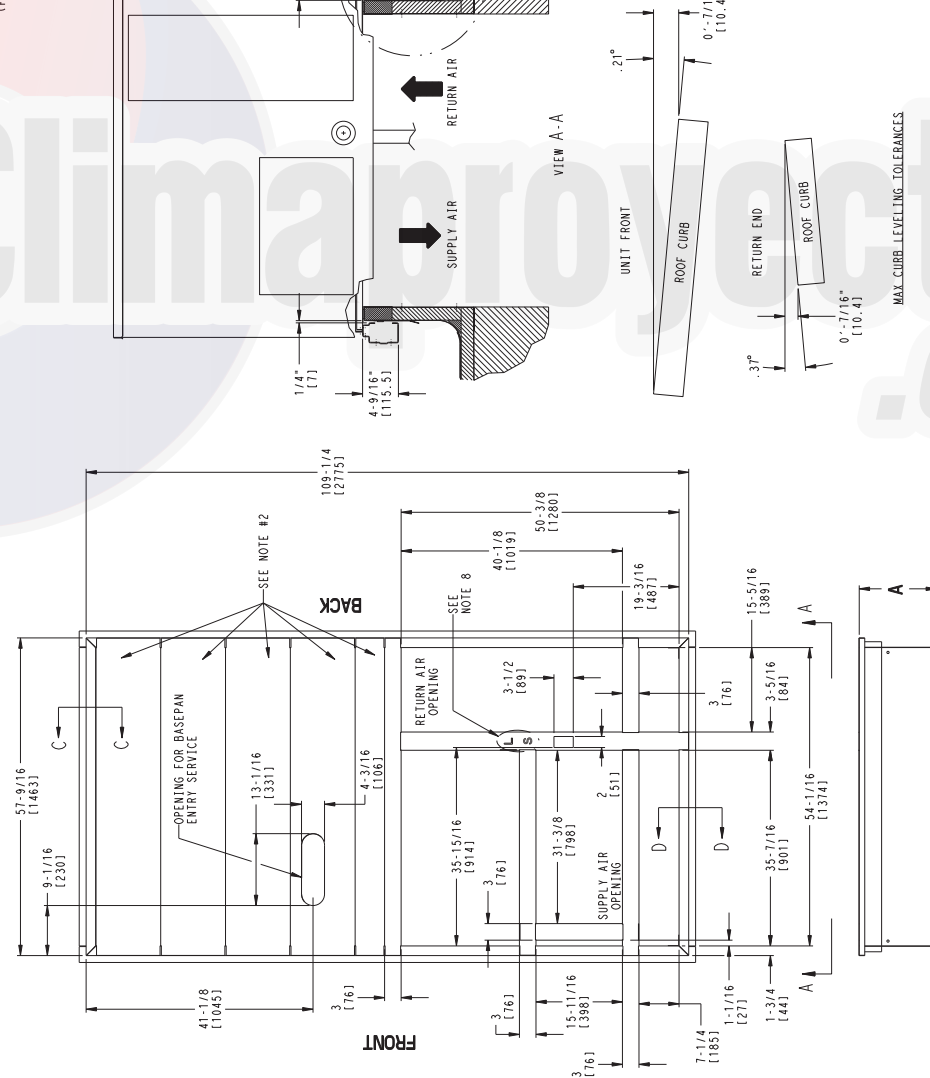
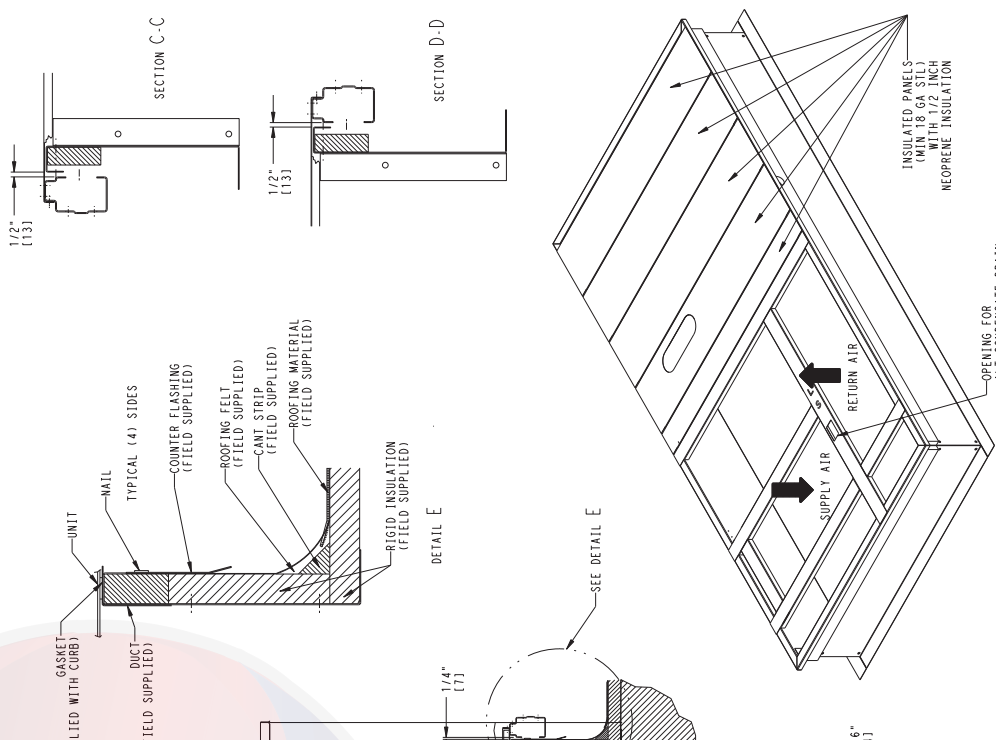


Fig. 3 - Roof Curb Details

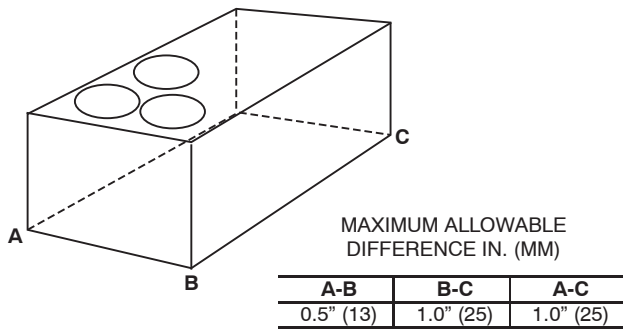


Fig. 4 - Unit Leveling Tolerances

C10001

Step 5 — Field Fabricate Ductwork

Cabinet return-air static pressure (a negative condition) shall not exceed 0.35 in. wg (87 Pa) with economizer or 0.45 in. wg (112 Pa) without economizer.

For vertical ducted applications, secure all ducts to roof curb and building structure. *Do not connect ductwork to unit.*

Insulate and weatherproof all external ductwork, joints, and roof openings with counter flashing and mastic in accordance with applicable codes.

Ducts passing through unconditioned spaces must be insulated and covered with a vapor barrier.

If a plenum return is used on a vertical unit, the return should be ducted through the roof deck to comply with applicable fire codes.

For Units with Accessory Electric Heaters —

All installations require a minimum clearance to combustible surfaces of 1-in (25 mm) from duct for first 12-in (305 mm) away from unit.

⚠ CAUTION

PROPERTY DAMAGE HAZARD

Failure to follow this caution may result in damage to roofing materials.

Membrane roofs can be cut by sharp sheet metal edges. Be careful when placing any sheet metal parts on such roof.

Step 6 — Rig and Place Unit

When the unit is ready to be rigged and no longer will be lifted by a fork truck, the wood protector under the basepan must be removed. Remove 4 screws from each base rail. Wood protector will drop to the ground. See instructions on the unit base rails.

Keep unit upright and do not drop. Spreader bars are required. Rollers may be used to move unit across a roof. Level by using unit frame as a reference. See Table 1 and Fig. 5 for additional information.

Lifting holes are provided in base rails as shown in Fig. 5. Refer to rigging instructions on unit.


⚠ CAUTION

UNIT DAMAGE HAZARD

Failure to follow this caution may result in equipment damage.

All panels must be in place when rigging. Unit is not designed for handling by fork truck.

Before setting the unit onto the curb, recheck gasketing on curb.

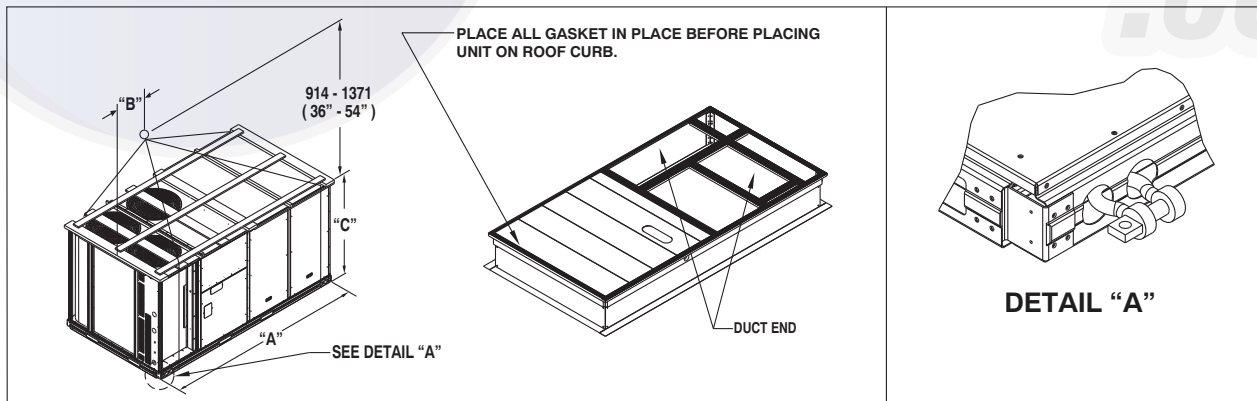

C10281

UNIT	MAX WEIGHT		DIMENSIONS					
			A		B		C	
	LB	KG	IN	MM	IN	MM	IN	MM
548J*14D	2015	916	116.0	2945	55.5	1410	59.5	1510

NOTES:

- SPREADER BARS REQUIRED — Top damage will occur if spreader bars are not used.
- Dimensions in () are in millimeters.
- Hook rigging shackles through holes in base rail, as shown in detail "A." Holes in base rails are centered around the unit center of gravity. Use wooden top to prevent rigging straps from damaging unit.

Fig. 5 - Rigging Details

Positioning on Curb —

For full perimeter curbs CRRFCURB072A00 and 073A00, the clearance between the roof curb and the front and rear base rails should be $\frac{1}{4}$ in (6.4 mm). The clearance between the curb and the end base rails should be $\frac{1}{2}$ in (13 mm). For retrofit applications with curbs CRRFCURB003A01 and 4A01, the unit should be positioned as shown in Fig. 6. Maintain the 15.5 in (394 mm) and $8\frac{5}{8}$ in (220 mm) clearances and allow the $22\frac{5}{16}$ in (567 mm) dimension to float if necessary.

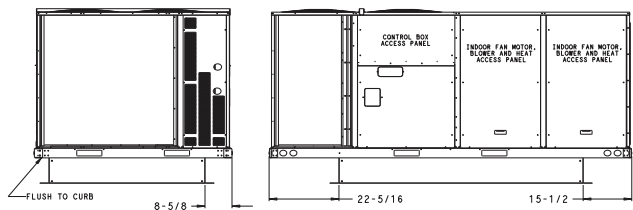


Fig. 6 - Retrofit Installation Dimensions

If the alternative condensate drain location through the bottom of the unit is used in conjunction with a retrofit curb, the hole in the curb must be moved 12.5 in (320 mm) towards the end of the unit.

Although unit is weatherproof, guard against water from higher level runoff and overhangs.

Remove all shipping materials and top skid. Remove extra center post from the condenser end of the unit so that the condenser end of the unit matches Fig. 16 - 18. Recycle or dispose of all shipping materials.

Step 7 — Convert to Horizontal and Connect Ductwork (when required)

Unit is shipped in the vertical duct configuration. Unit *without* factory-installed economizer or return air smoke detector option may be field-converted to horizontal ducted configuration using accessory CRDUCTCV001A00. To convert to horizontal configuration, remove screws from side duct opening covers and remove covers.

Discard the supply duct cover. Install accessory CRDUCTCV001A00 to cover the vertical supply duct opening. Use the return duct cover removed from the end panel to cover the vertical return duct opening.

Field-supplied flanges should be attached to horizontal duct openings and all ductwork should be secured to the flanges. Insulate and weatherproof all external ductwork, joints, and roof or building openings with counter flashing and mastic in accordance with applicable codes.

Do not cover or obscure visibility to the unit's informative data plate when insulating horizontal ductwork.

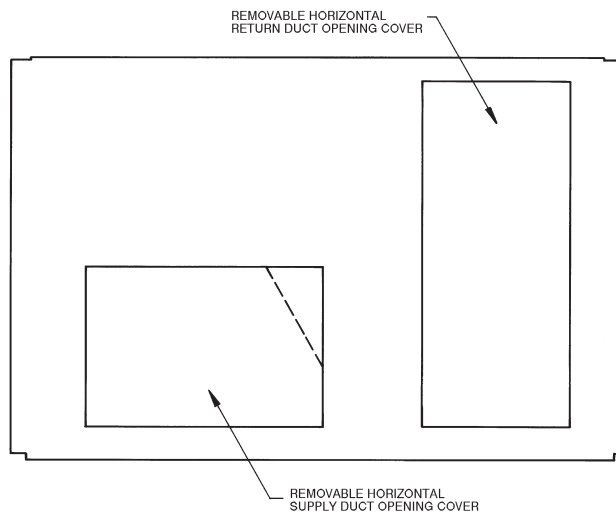


Fig. 7 - Horizontal Conversion Panels

Step 8 — Install Outside Air Hood

Economizer Hood Removal and Setup - Factory Option —

1. The hood is shipped in knock-down form and located in the return air compartment. It is attached to the economizer using two plastic tie-wraps.
2. To gain access to the hood, remove the filter access panel. (See Fig. 8.)
3. Locate and cut the (2) plastic tie-wraps, being careful to not damage any wiring. (See Fig. 9.)
4. Carefully lift the hood assembly through the filter access opening and assemble per the steps outlined in *Economizer Hood and Two-Position Hood* on page 10.

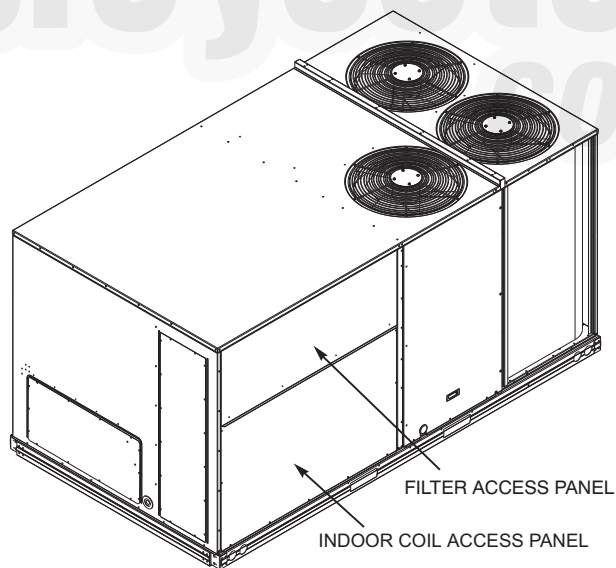


Fig. 8 - Typical Access Panel Locations

C10004

C10003

C06108

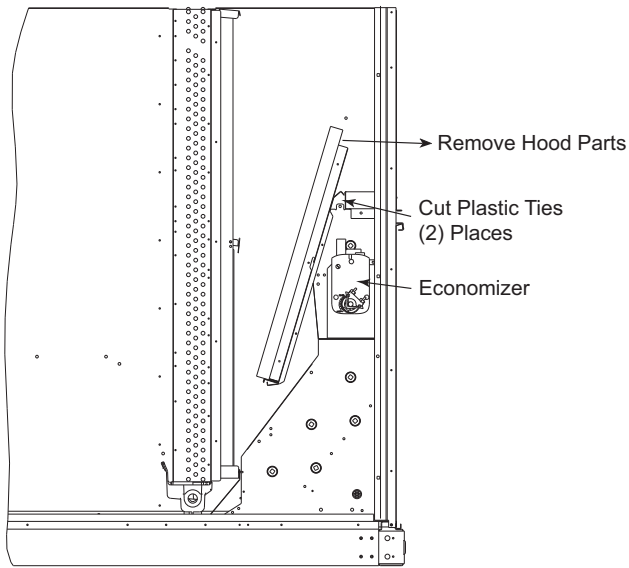


Fig. 9 - Economizer Wiring

C10005

Two Position Damper Hood Removal and Setup - Factory Option —

1. The hood is shipped in knock-down form and assembled to a metal support tray using plastic stretch wrap. Located in the return air compartment, the assembly's metal tray is attached to the basepan and also attached to the damper using two plastic tie-wraps.
2. To gain access to the hood, remove the filter access panel. (See Fig. 8.)
3. Locate the (2) screws holding the metal tray to the basepan and remove. In order to remove the screws, it may be necessary to remove the panel underneath the two-position damper. Remove the two screws. Locate and cut the (2) plastic tie-wraps securing the assembly to the damper. (See Fig. 10.) Be careful to not damage any wiring or cut tie-wraps securing any wiring.
4. Carefully lift the hood assembly (with metal tray) through the filter access opening and assemble per the steps outlined in *Economizer Hood and Two-Position Hood* on page 10.
5. If removed, reattach the panel under the damper.

548J*14D

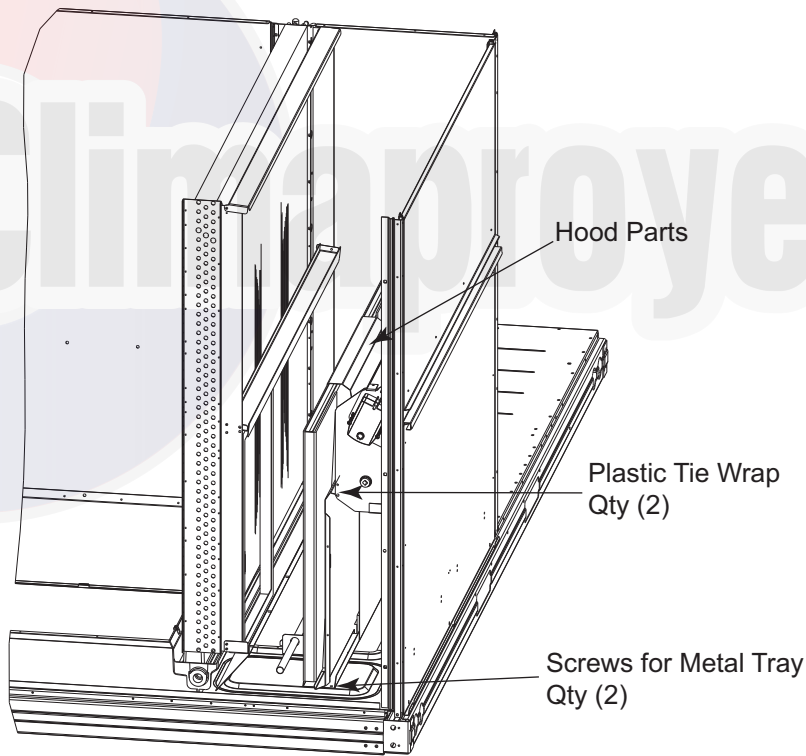



Fig. 10 - Damper Assembly

C10006

Economizer Hood and Two-Position Hood —

NOTE: If the power exhaust accessory is to be installed on the unit, the hood shipped with the unit will not be used and must be discarded. Save the aluminum filter for use in the power exhaust hood assembly.


1. The indoor coil access panel will be used as the top of the hood. If the panel is still attached to the unit, remove the screws along the sides and bottom of the panel. See Fig. 11.

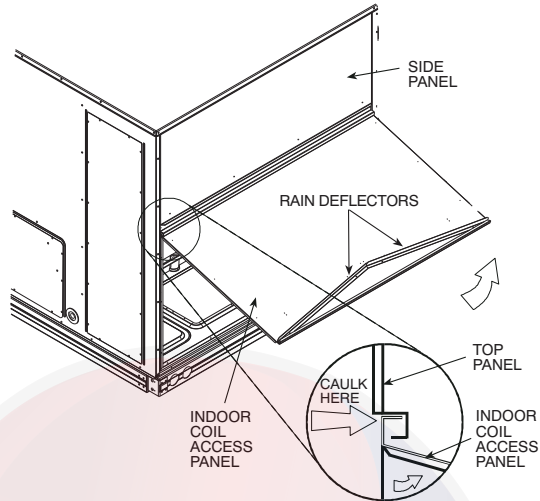

C10007

Fig. 11 - Indoor Coil Access Panel Relocation

2. Swing out indoor coil access panel and insert the hood sides under the panel (hood top). **Be careful not to lift the panel too far as it might fall out.** Use the screws provided to attach the hood sides to the hood top. Use screws provided to attach the hood sides to the unit. See Fig. 12.

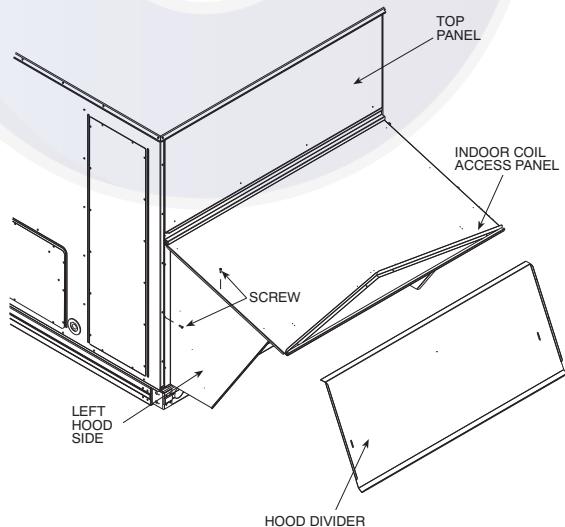


C10008

Fig. 12 - Economizer Hood Construction

3. Remove the shipping tape holding the economizer barometric relief damper in place.
4. Insert the hood divider between the hood sides. See Fig. 12 and 13. Secure hood divider with 3 screws on each hood side. The hood divider is also used as the bottom filter rack for the aluminum filter.

5. Attach the post that separates the filters with the screws provided.
6. Open the filter clips which are located underneath the hood top. Insert the aluminum filters into the bottom filter rack (hood divider). Push the filter into position past the open filter clips. Close the filter clips to lock the filters into place. See Fig. 13.
7. Install the two rain deflectors on the edge of the hood top as shown in Fig. 11.

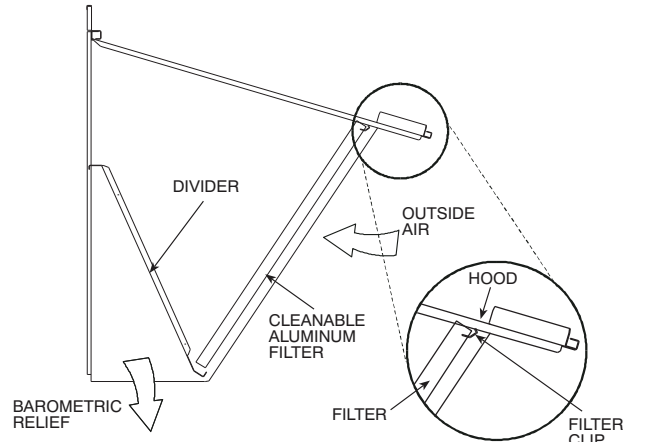

C10009

Fig. 13 - Economizer Filter Installation


8. Caulk the ends of the joint between the unit top panel and the hood top as shown in Fig. 11.
9. Replace the filter access panel.

Step 9 — Install External Condensate Trap and Line

The unit has one $\frac{3}{4}$ -in. condensate drain connection on the end of the condensate pan and an alternate connection on the bottom. See Fig. 14. Unit airflow configuration does not determine which drain connection to use. Either drain connection can be used with vertical or horizontal applications.

When using the standard side drain connection, ensure the red plug in the alternate bottom connection is tight. Do this before setting the unit in place. The red drain pan can be tightened with a $\frac{1}{2}$ -in. square socket drive extension.


To use the alternate bottom drain connection, remove the red drain plug from the bottom connection (use a $\frac{1}{2}$ -in. square socket drive extension) and install it in the side drain connection.

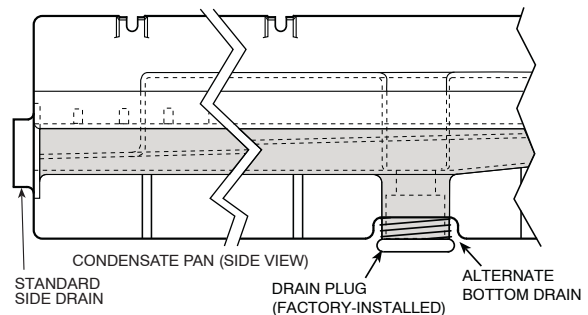

C08021

Fig. 14 - Condensate Drain Pan (Side View)

The piping for the condensate drain and external trap can be completed after the unit is in place. See Fig. 15.

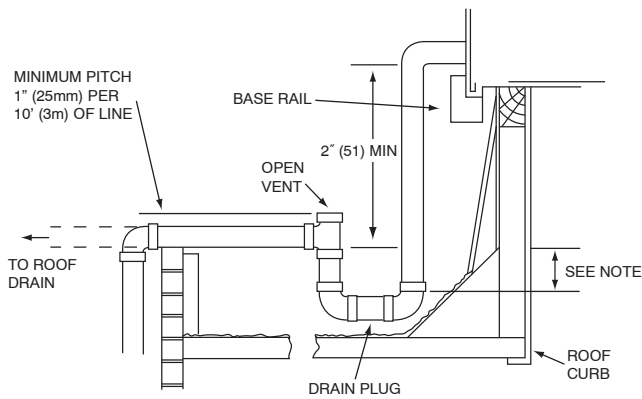

NOTE: Trap should be deep enough to offset maximum unit static difference. A 4" (102) trap is recommended

C08022

Fig. 15 - Condensate Drain Piping Details

All units must have an external trap for condensate drainage. Install a trap at least 4-in. (102 mm) deep and protect against freeze-up. If drain line is installed downstream from the external trap, pitch the line away from the unit at 1-in. per 10 ft (25 mm in 3 m) of run. Do not use a pipe size smaller than the unit connection ($3/4$ -in.).

Step 10 — Make Electrical Connections

⚠ WARNING

ELECTRICAL SHOCK HAZARD


Failure to follow this warning could result in personal injury or death.

Do not use gas piping as an electrical ground. Unit cabinet must have an uninterrupted, unbroken electrical ground to minimize the possibility of personal injury if an electrical fault should occur. This ground may consist of electrical wire connected to unit ground lug in control compartment, or conduit approved for electrical ground when installed in accordance with NEC (National Electrical Code); ANSI/NFPA 70, latest edition (in Canada, Canadian Electrical Code CSA [Canadian Standards Association] C22.1), and local electrical codes.

NOTE: Check all factory and field electrical connections for tightness. Field-supplied wiring shall conform with the limitations of 63°F (33°C) rise.


Field Power Supply —

For those units without through-the-curb power, conduit must be used to route the main power from the condenser end of the unit to either the factory option disconnect, the bottom of the control box or the single point box accessory. 1" conduit is provided behind the access panel located under the control box. For those units that require conduit larger than 1", it must be field supplied. Figures 16, 17 and 18 show the various wire routings.

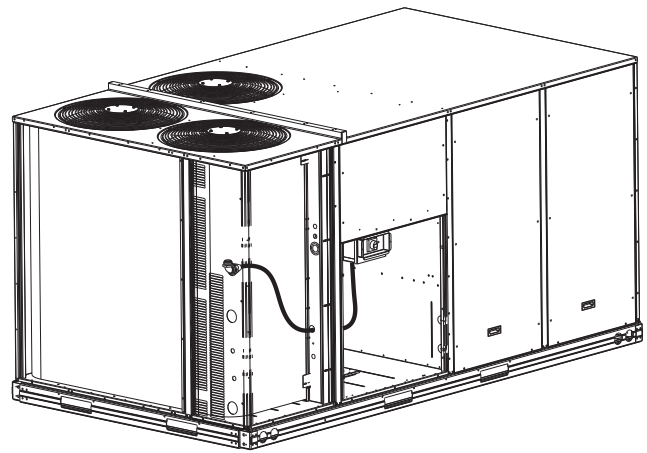


C10010

Fig. 16 - Conduit into Factory Option Disconnect

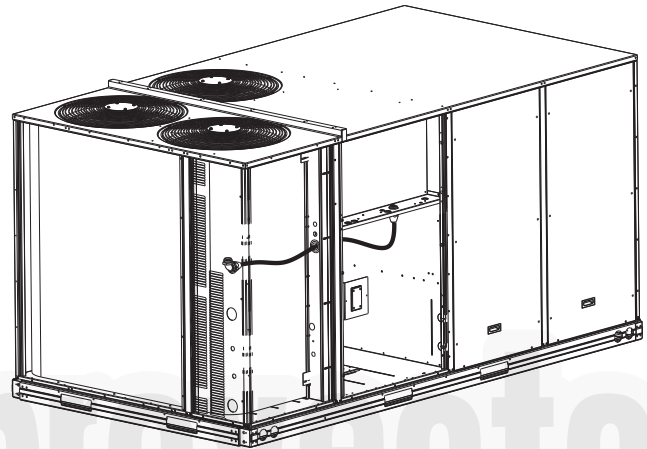

C10011

Fig. 17 - Conduit into Control Box

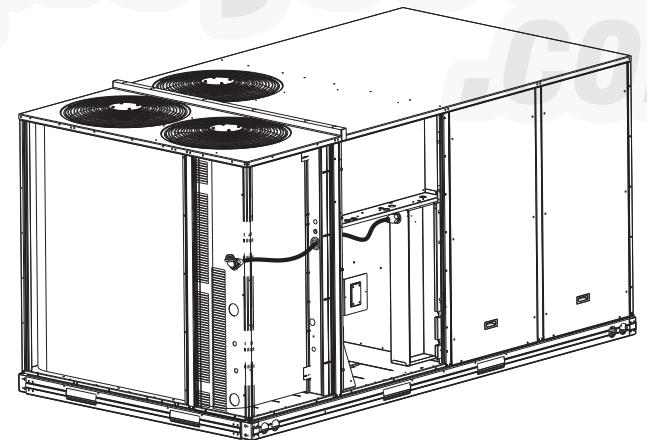

C10012

Fig. 18 - Conduit into Single Point Box

If the field disconnect is larger than 100A, it must be attached to the unit using accessory CRDISBKT001A00 (see Fig. 19). Follow the instructions provided with this accessory. For smaller field disconnects, be sure to use $1/2$ " screws to mount the disconnect directly to the end panel (see Fig. 20). In either case, set the disconnect vertical location on the unit so that a 90° fitting can be used to connect the conduit to the disconnect.

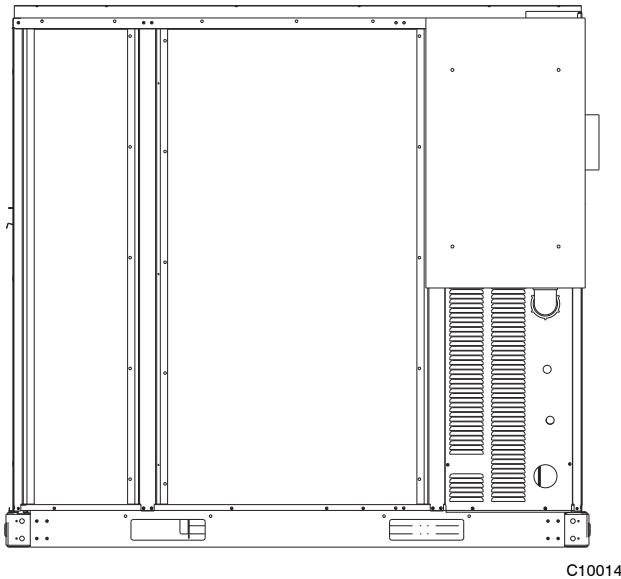


Fig. 19 - Mounting Position for Field Disconnects (over 100A)

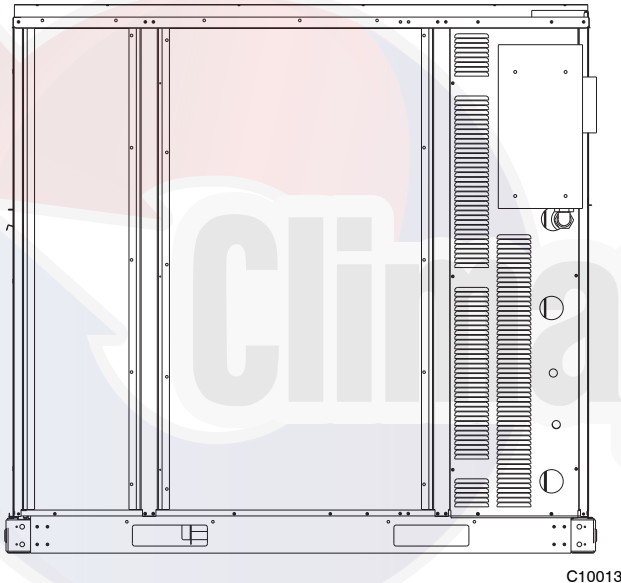


Fig. 20 - Mounting Position for Field Disconnects (up to 100A)

All units except 208/230-v units are factory wired for the voltage shown on the nameplate. *If the 208/230-v unit is to be connected to a 208-v power supply, the control transformer must be rewired by moving the black wire with the $\frac{1}{4}$ -in. female spade connector from the 230-v connection and moving it to the 200-v $\frac{1}{4}$ -in. male terminal on the primary side of the transformer.* Refer to unit label diagram for additional information.

Field power wires are connected to the unit at line-side pressure lugs at the main terminal block (TB1) or at factory-installed option non-fused disconnect switch. Max wire size is #2 AWG (copper only). (See Fig. 22)

NOTE: TEST LEADS - Unit may be equipped with short leads (pigtailed) on the field line connection points off the optional disconnect switch. These leads are for factory run-test purposes only; remove and discard before connecting field power wires to unit connection points.

Make field power connections directly to line connection pressure lugs only.

⚠ WARNING

FIRE HAZARD

Failure to follow this warning could result in intermittent operation or performance satisfaction. Do not connect aluminum wire between disconnect switch and furnace. Use only copper wire. (See Fig. 21.)

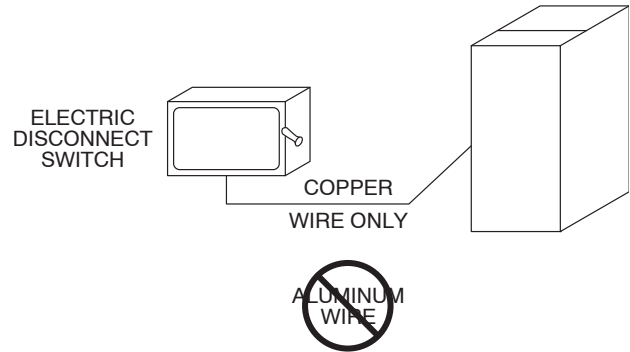


Fig. 21 - Disconnect Switch and Unit

A93033

All Units -

All field wiring must comply with the NEC and local requirements.

Size wire based on MCA (Minimum Circuit Amps) on the unit informative plate. See Fig. 22 and the unit label diagram for power wiring connections to the unit power terminal blocks and equipment ground. Maximum wire size is #2/0 AWG per pole.

Provide a ground-fault and short-circuit over-current protection device (fuse or breaker) per NEC Article 440 (or local codes). Refer to unit informative data plate for MOCP (Maximum Over-current Protection) device size.

Voltage to compressor terminals during operation must be within voltage range indicated on unit nameplate. See Table 4. On 3-phase units, voltages between phases must be balanced within 2% and the current within 10%. Use the formula shown in the legend for Table 4 (see Note 2 on page 32) to determine the percent of voltage imbalance.

⚠ CAUTION

UNIT DAMAGE HAZARD

Failure to follow this caution may result in equipment damage.

Operation on improper line voltage or excessive phase imbalance constitutes abuse and may cause damage to electrical components. Such operation would invalidate any applicable Bryant warranty.


Units Without Factory-Installed Disconnect —

When installing units, provide a disconnect switch of adequate size per NEC (National Electrical Code). Disconnect sizing data is provided on the unit informative plate. Locate on unit cabinet or within sight of the unit per national or local codes. Do not cover unit informative plate if mounting the disconnect on the unit cabinet.

Units with Factory-Installed Disconnect —

The factory-installed option disconnect switch is located in a weatherproof enclosure located under the main control box. The manual switch handle is accessible through an opening in the access panel. Discard the factory test leads (see Fig. 22). The factory disconnect is an 80A disconnect.

Units Without Disconnect Option

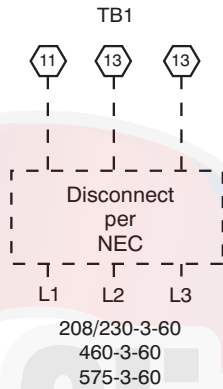

Units With Disconnect Option

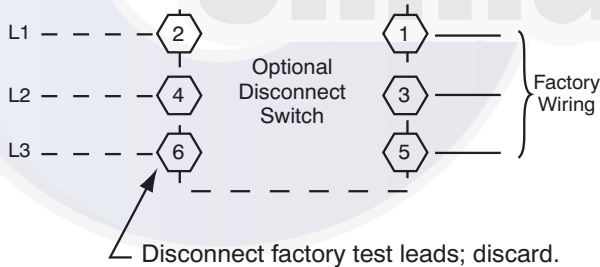


Fig. 22 - Power Wiring Connections

Convenience Outlets —

⚠ WARNING

ELECTRICAL OPERATION HAZARD

Failure to follow this warning could result in personal injury or death.

Units with convenience outlet circuits may use multiple disconnects. Check convenience outlet for power status before opening unit for service. Locate its disconnect switch, if appropriate, and open it. Tag-out this switch, if necessary.

Two types of convenience outlets are offered on 548J*14D models: non-powered and unit-powered. Both types provide

a 125-volt GFCI (ground-fault circuit-interrupter) duplex receptacle rated at 15-A behind a hinged waterproof access cover, located on the panel beneath the control box. See Fig. 23.

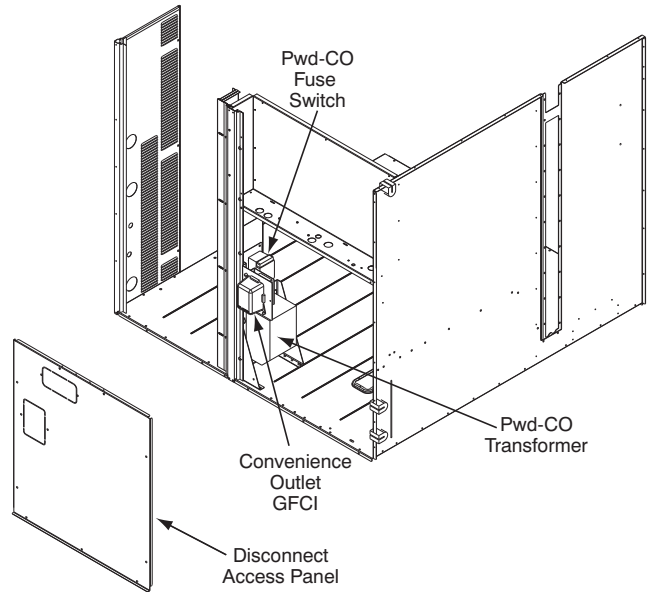


Fig. 23 - Convenience Outlet Location

Non-powered type: This type requires the field installation of a general-purpose 125-volt 15-A circuit powered from a source elsewhere in the building. Observe national and local codes when selecting wire size and conduit requirements, fuse or breaker requirements and disconnect switch size and location. Route 125-v power supply conductors into the bottom of the utility box containing the duplex receptacle.

Unit-powered type: A unit-mounted transformer is factory-installed to stepdown the main power supply voltage to the unit to 115-v at the duplex receptacle. This option also includes a manual switch with fuse, located in a utility box and mounted on a bracket behind the convenience outlet; access is through the panel beneath the control box. See Fig. 23.

The primary leads to the convenience outlet transformer are not factory-connected. Selection of primary power source is a customer-option. If local codes permit, the transformer primary leads can be connected at the line-side terminals on the unit-mounted non-fused disconnect or HACR breaker switch; this will provide service power to the unit when the unit disconnect switch or HACR switch is open. Other connection methods will result in the convenience outlet circuit being de-energized when the unit disconnect or HACR switch is open. See Fig. 24. On a unit without a unit-mounted disconnect, connect the source leads to the main terminal block (TB1).

If the convenience outlet transformer is connected to the line side of a field disconnect, the conduit provided with the unit must be used to protect the wire as they are routed from the transformer to the field disconnect. The end of the conduit with the straight connector attaches to the field disconnect. The other end does not need to connect o

C10361


C10015

the transformer; however, the conduit must be routed so that all wiring is either in the conduit or behind the access panel.

If the convenience outlet transformer is connected to the line side of the factory disconnect option, route the wires through the web bushing located on the bottom of the disconnect box. For the load side wiring to the factory option disconnect, route the wires through the hole on the right side of the disconnect. Be sure to create a drip loop at least 6" long.

Duty Cycle: the unit-powered convenience outlet has a duty cycle limitation. The transformer is intended to provide power on an intermittent basis for service tools, lamps, etc; it is not intended to provide 15-amps loading for continuous duty loads (such as electric heaters for overnight use). Observe a 50% limit on circuit loading above 8-amps (i.e., limit loads exceeding 8-amps to 30 minutes of operation every hour).

Test the GFCI receptacle by pressing the TEST button on the face of the receptacle to trip and open the receptacle. Check for proper grounding wires and power line phasing if the GFCI receptacle does not trip as required. Press the RESET button to clear the tripped condition.

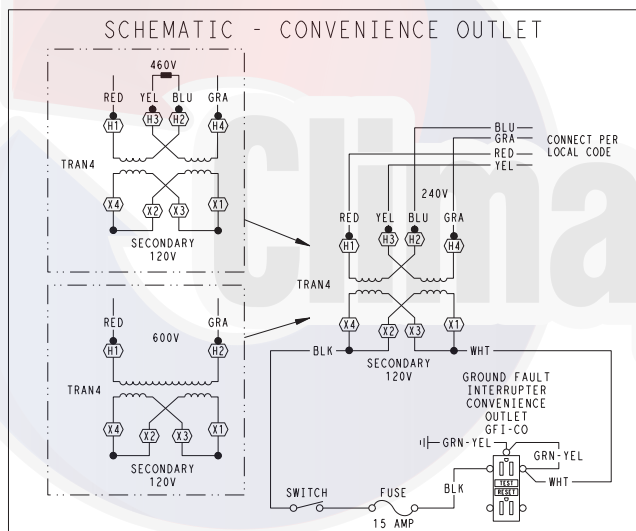

C08283

UNIT VOLTAGE	CONNECT AS	PRIMARY CONNECTIONS	TRANSFORMER TERMINALS
208, 230	240	L1: RED + YEL L2: BLU + GRA	H1 + H3 H2 + H4
460	480	L1: RED L2: Splice BLU + YEL L2: GRA	H1 H2 + H3 H4
575	600	L1: RED L2: GRA	H1 H2

Fig. 24 - Unit Powered Convenience Outlet Wiring

Fuse on power type: The factory fuse is a Bussman "Fusetron" T-15, non-renewable screw-in (Edison base) type plug fuse.

⚠ WARNING

ELECTRICAL OPERATION HAZARD

Failure to follow this warning could result in personal injury or death.

Using unit-mounted convenience outlets: Units with unit-mounted convenience outlet circuits will often require that two disconnects be opened to de-energize all power to the unit. Treat all units as electrically energized until the convenience outlet power is also checked and de-energization is confirmed. Observe National Electrical Code Article 210, Branch Circuits, for use of convenience outlets.

Installing Weatherproof Cover: A weatherproof while-in-use cover for the factory-installed convenience outlets is now required by UL standards. This cover cannot be factory-mounted due its depth; it must be installed at unit installation. For shipment, the convenience outlet is covered with a blank cover plate.

The weatherproof cover kit is shipped in the unit's control box. The kit includes the hinged cover, a backing plate and gasket.

DISCONNECT ALL POWER TO UNIT AND CONVENIENCE OUTLET.

Remove the blank cover plate at the convenience outlet; discard the blank cover.

Loosen the two screws at the GFCI duplex outlet, until approximately 1/2-in (13 mm) under screw heads are exposed. Press the gasket over the screw heads. Slip the backing plate over the screw heads at the keyhole slots and align with the gasket; tighten the two screws until snug (do not over-tighten).

Mount the weatherproof cover to the backing plate as shown in Fig. 25. Remove two slot fillers in the bottom of the cover to permit service tool cords to exit the cover. Check for full closing and latching.

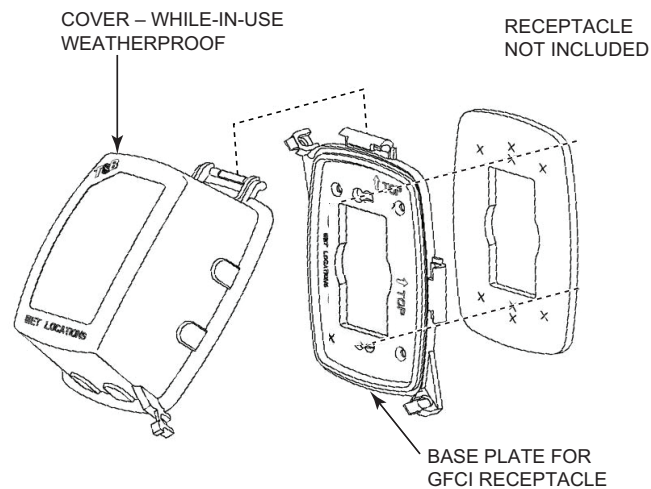


Fig. 25 - Weatherproof Cover Installation

C09022

Factory-Option Thru-Base Connections —

This service connection kit consists of a 1/2-in electrical bulkhead connector and a 1 1/2-in electrical bulkhead connector, all factory-installed to the basepan cover plate. Remove the cover plate from the shipping bracket and attach to basepan with 8 screws provided. The 1/2-in bulkhead connector enables the low-voltage control wires to pass through the basepan. The 1 1/2-in electrical bulkhead connector allows the high-voltage power wires to pass through the basepan. See Fig. 26.

Check tightness of connector lock nuts before connecting electrical conduits.

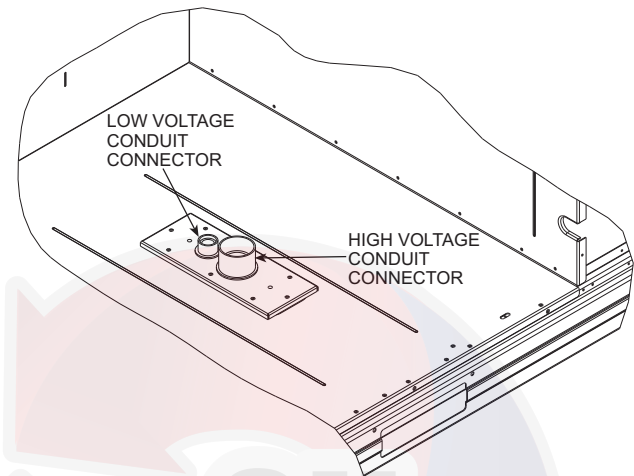


Fig. 26 - Thru-Base Connection Fittings

C10017

Field-supplied and field-installed liquidtight conduit connectors and conduit may be attached to the connectors on the basepan. Pull correctly rated high voltage and low voltage wires through appropriate conduits. Connect the power conduit to the internal disconnect (if unit is so equipped) or to the external disconnect (through unit side panel). Remove one of the two knockouts located on the bottom left side of the unit control box. Use this hole for the control conduit.

Units without Thru-Base Connections —

1. Install power wiring conduit through side panel openings. Install conduit between disconnect and control box.
2. Install power lines to terminal connections as shown in Fig. 22.

Field Control Wiring —


The 548J*14D unit requires an external temperature control device. This device can be a thermostat emulation device provided as part of a third-party Building Management System.

Thermostat —

Install a Bryant-approved accessory 2 stage Cooling/Heating thermostat according to installation instructions included with the accessory. The 548J*14D models do not require a thermostat with an O function to control the reversing valve operation. If using an electronic thermostat, configure it for “non-heat pump” operation. Locate the thermostat accessory on a solid wall in the conditioned space to sense average temperature in accordance with the thermostat installation instructions.

If the thermostat contains a logic circuit requiring 24-v power, use a thermostat cable or equivalent single leads of different colors with minimum of seven leads. If the thermostat does not require a 24-v source (no “C” connection required), use a thermostat cable or equivalent with minimum of six leads. Check the thermostat installation instructions for additional features which might require additional conductors in the cable.

For wire runs up to 50 ft. (15 m), use no. 18 AWG (American Wire Gage) insulated wire (35°C minimum). For 50 to 75 ft. (15 to 23 m), use no. 16 AWG insulated wire (35°C minimum). For over 75 ft. (23 m), use no. 14 AWG insulated wire (35°C minimum). All wire sizes larger than no. 18 AWG cannot be directly connected to the thermostat and will require a junction box and splice at the thermostat.

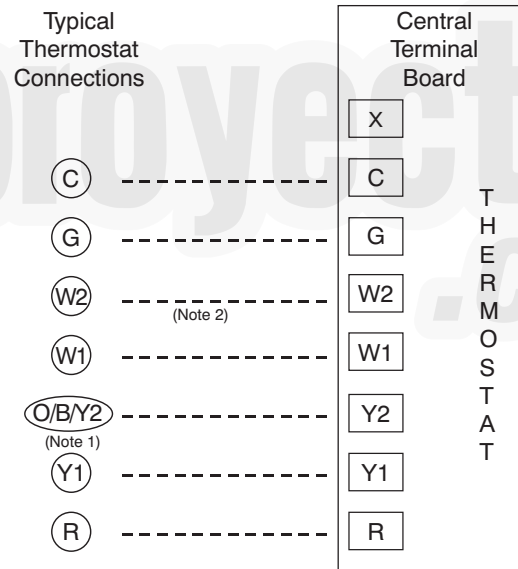

Note 1: Typical multi-function marking. Follow manufacturer's configuration instructions to select Y2. Do not configure for O output.

Note 2: W2 connection not required on units without electric heating.

--- Field Wiring

C09012

Fig. 27 - Typical Low-Voltage Control Connections

Unit without Thru-Base Connection Kit —

Pass the thermostat control wires through the bushing on the unit end panel. Route the wire through the snap-in wire tie and up to the web bushing near the control box. Route the wire through the bushing and into the bottom left side of the control box after removing one of the two knockouts in the corner of the box. Using a connector at the control box to protect the wire as it passes into the control box. Pull the wires over to the terminal strip at the upper left corner of the Central Terminal Board (CTB). Use the connector at the control box and the wire tie to ensure that the thermostat wire is tight and will not be damaged by contact with the condenser coil. See Fig. 28.

NOTE: If thru-the-bottom connections accessory is used, refer to the accessory installation instructions for information on routing power and control wiring.

Heat Anticipator Settings —

Set heat anticipator settings at 0.14 amp for the first stage and 0.14 amp for second-stage heating, when available.

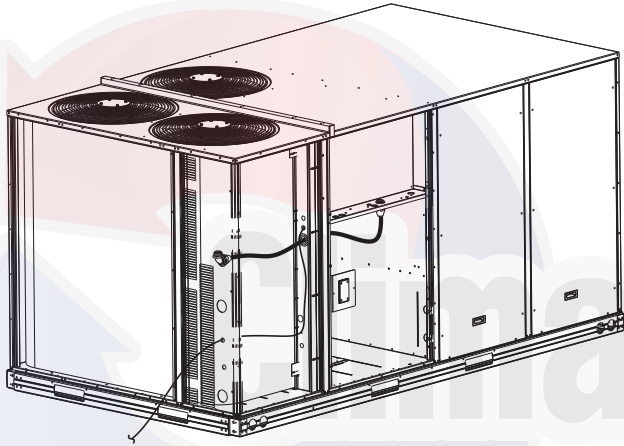


Fig. 28 - Thermostat Wire Routing

C10018

Electric Heaters

548J*14D units may be equipped with field-installed accessory electric heaters. The heaters are modular in design, with heater frames holding open coil resistance wires strung through ceramic insulators, line-break limit switches and a control contactor. One or two heater modules may be used in a unit.

Heater modules are installed in the compartment below the indoor (supply) fan outlet. Access is through the indoor access panel. Heater modules slide into the compartment on tracks along the bottom of the heater opening. See Fig. 29.

⚠ CAUTION

UNIT DAMAGE HAZARD

Failure to follow this caution may result in equipment damage.

Not all available heater modules and single point boxes may be used in every unit. Use only those heater modules that are UL listed for use in a specific size unit. Refer to the label on the unit cabinet for the list of approved heaters and single point boxes.

548J*14D

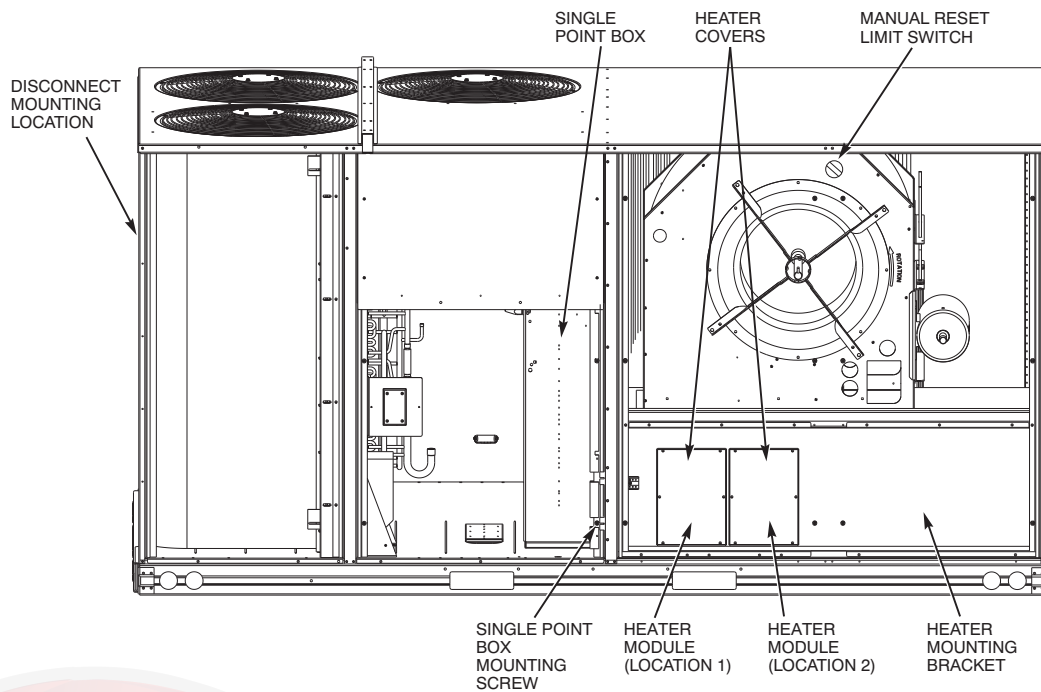


Fig. 29 - Typical Component Location

C10029

548J*14D

Single Point Boxes

When heaters are installed, power wiring to both heaters and the rest of the unit is connected via the single point box accessory, which will be installed directly under the unit control box, just to the left of the partition separating the indoor section (with electric heaters) from the outdoor section. The single point box has a hinged access cover. See Fig. 29. The single point box also includes pigtailed wires to complete the wiring between the single point box and the unit's main control box terminals. Refer to the accessory heater and Single Point Box installation instructions for details on tap connections.

Heater and Supplementary Fuses —

When the unit MOCP device value exceeds 60-A, unit-mounted supplementary fuses are required for each heater circuit. These fuses are included in accessory Single Point Boxes, with power distribution and fuse blocks.


All fuses on 548J units are 60-A. (Note that all heaters are qualified for use with a 60-A fuse, regardless of actual heater ampacity, so only 60-A fuses are necessary.)

Heater Low-Voltage Control Connections —

One or two heaters can be installed in the unit. Use the wiring procedure listed below for each heater as determined by the number of stages in the heater.


Single Stage Heaters: Single-stage heaters will have an orange and a brown control wire. Connect these to the orange and brown wires located on TB4.

Two Stage Heaters: Two-stage heaters will have orange, purple, red and brown wires. The orange and the purple are the control wires and the red and brown wires feed the safety circuit. Connect both the orange and the purple wires to the orange wire locations of TB4. Connect the red and brown wires to red and brown wires on TB4. If more than one heater is installed, repeat the wiring procedure for the second heater. The 3 locations across the top of TB4 do allow a switch to be installed in series with some of the heaters in order to add additional heater control.

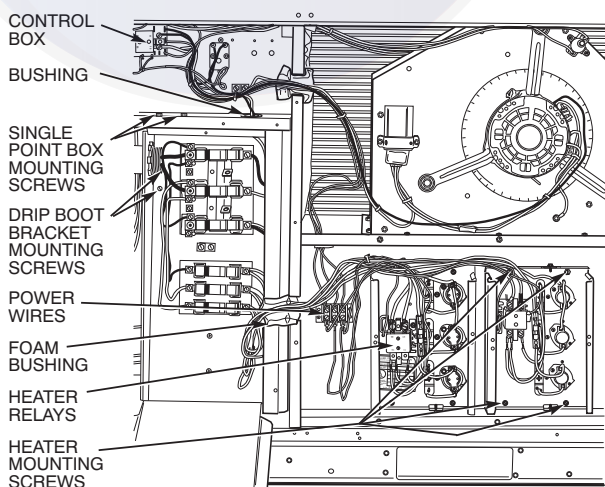

C08136

Fig. 30 - Typical Single Point Installation

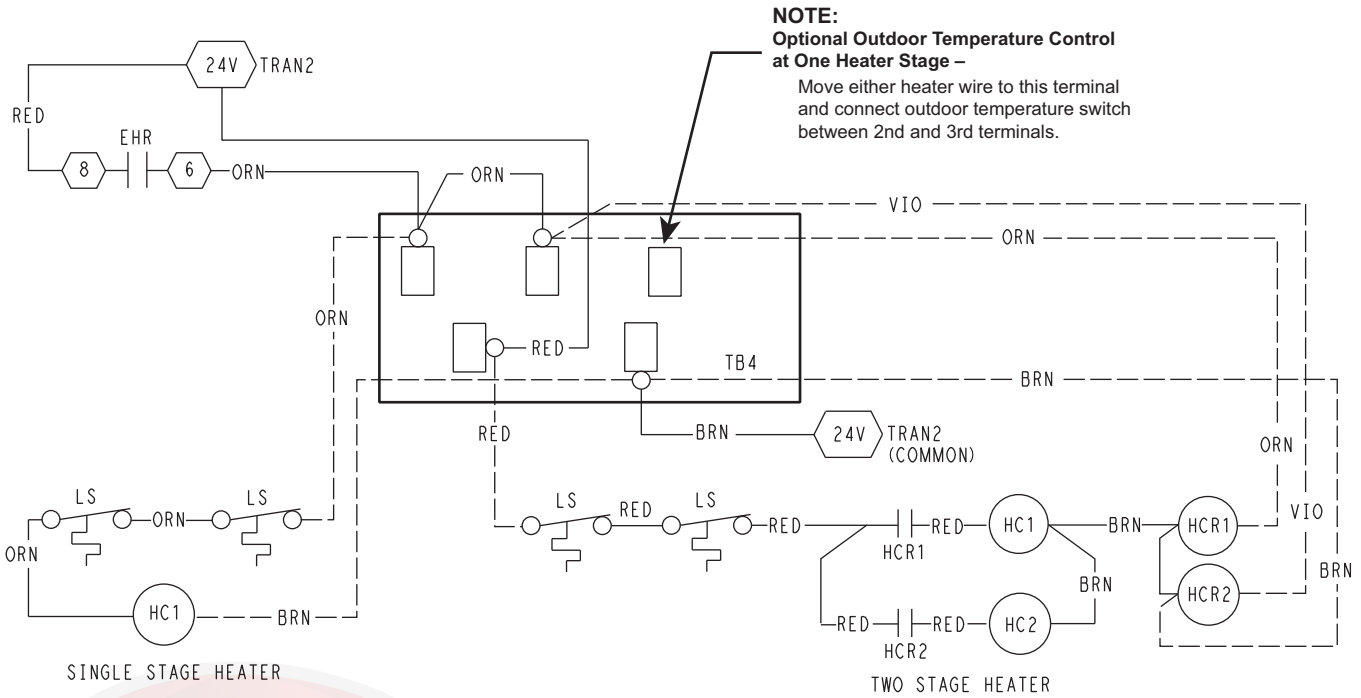

C10354

Fig. 31 - Accessory Electric Heater Control Connections

Outdoor Air Enthalpy Control (PNO 33CSENTHSW)

The enthalpy control (33CSENTHSW) is available as a field-installed accessory to be used with the EconoMi\$er2 damper system. The outdoor air enthalpy sensor is part of the enthalpy control. (The separate field-installed accessory return air enthalpy sensor (33CSENTSEN) is required for differential enthalpy control. See Fig. 32.)

Locate the enthalpy control in the economizer next to the Actuator Motor. Locate two GRA leads in the factory harness and connect the gray lead labeled “ESL” to the terminal labeled “LOW”. See Fig. 32. Connect the enthalpy control power input terminals to economizer actuator power leads RED (connect to 24V) and BLK (connect to GND).


The outdoor enthalpy changeover setpoint is set at the enthalpy controller.

Differential Enthalpy Control —

Differential enthalpy control is provided by sensing and comparing the outside air and return air enthalpy conditions. Install the outdoor air enthalpy control as described above. Add and install a return air enthalpy sensor.

Return Air Enthalpy Sensor —

Mount the return-air enthalpy sensor (33CSENTSEN) in the return-air section of the economizer. The return air sensor is wired to the enthalpy controller (33CSENTHSW). See Fig. 32.

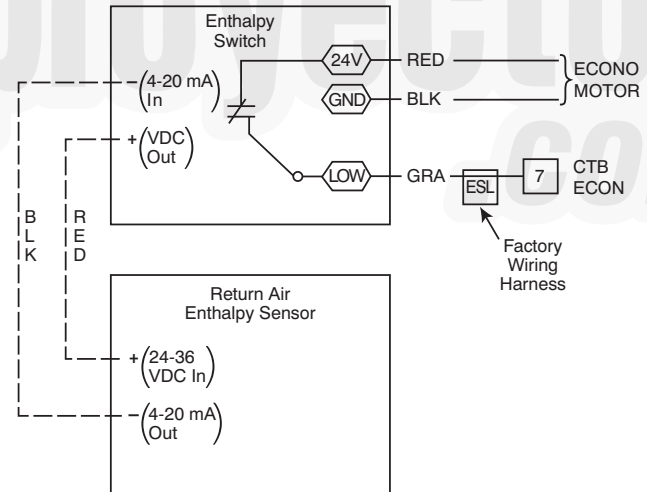

C10282

Fig. 32 - Outside and Return Air Enthalpy Sensor Wiring

RTU-MP Control System

The RTU-MP controller, see Fig. 33, provides expanded stand-alone operation of the HVAC system plus connection and control through communication with several Building Automation Systems (BAS) through popular third-party network systems. The available network systems are BACnet MP/TP, Modbus and Johnson J2. Communication with LonWorks is also possible by adding an accessory interface card to the RTU-MP. Selection of the communication protocol and baud rate are made at on-board DIP switches.

The RTU-MP control is factory-mounted in the 548J*14D unit's main control box, to the left of the CTB. See Fig. 34. Factory wiring is completed through harnesses connected to the CTB. Field connections for RTU-MP sensors will be made at the Phoenix connectors on the RTU-MP board. The factory-installed RTU-MP control includes the supply-air temperature (SAT) sensor. The outdoor air temperature (OAT) sensor is included in the FIOF/accessory EconoMiser™ 2 package.

Refer to Table 2, RTU-MP Controller Inputs and Outputs for locations of all connections to the RTU-MP board.

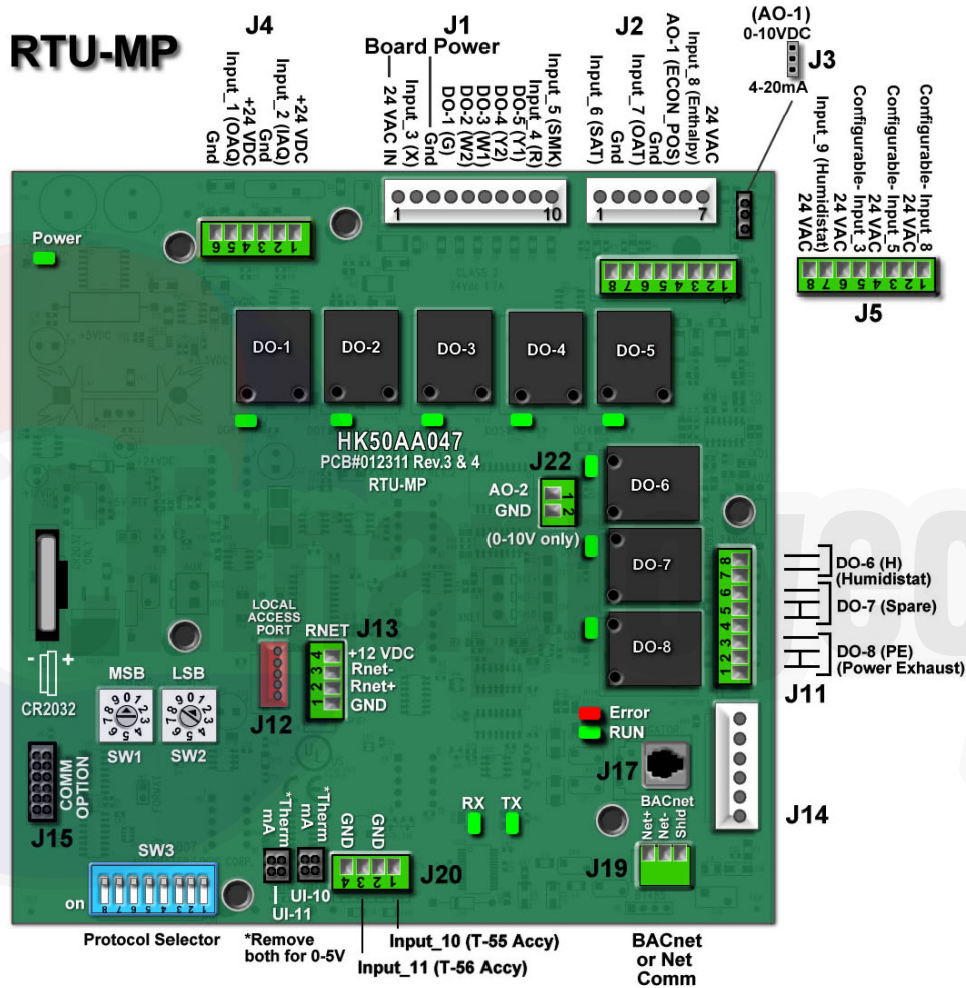


Fig. 33 - RTU-MP Multi-Protocol Control Board


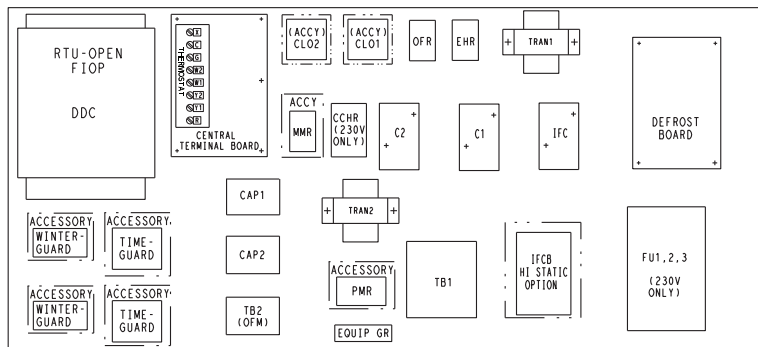


Fig. 34 - 548J*14D Control Box Component Locations

HEAT PUMP CONTROL 208/230V, 460V, 575V
3 OFM DUAL COMPRESSOR

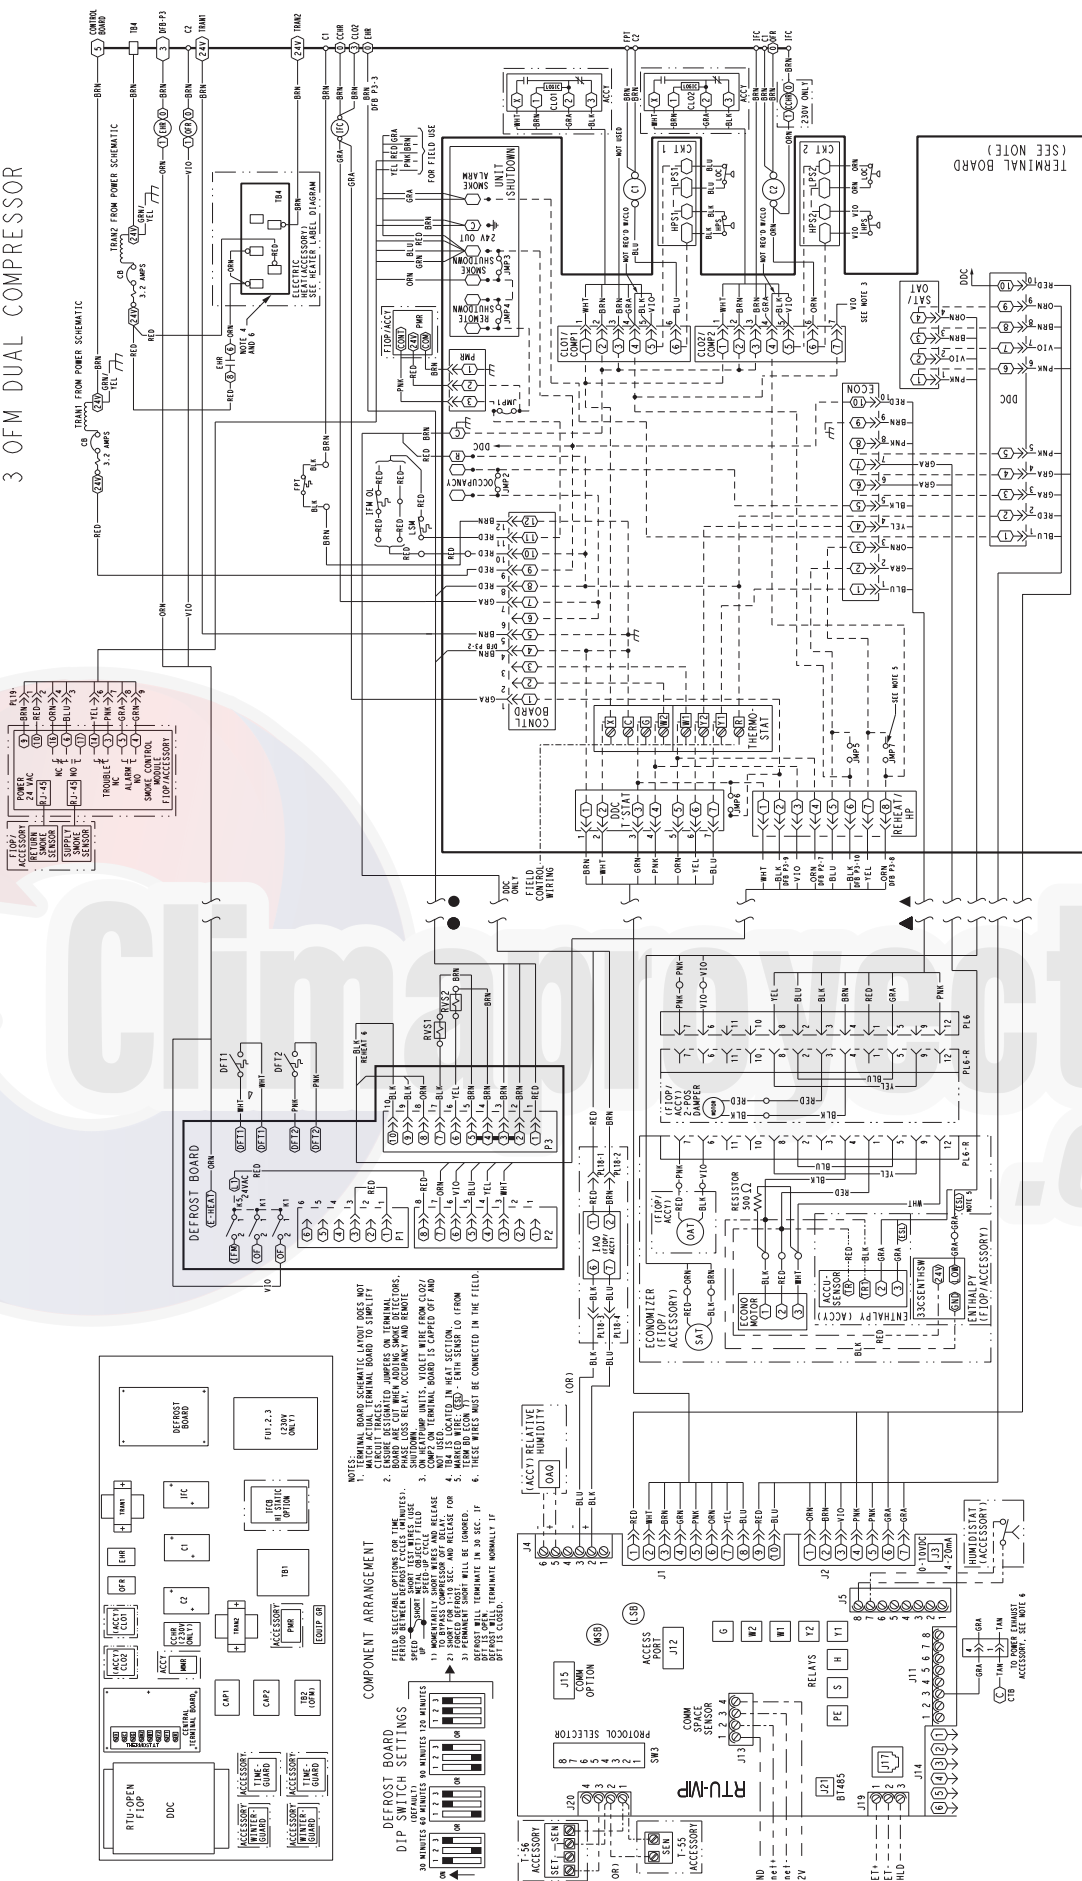

NOTES:
1. TERMINAL BOARD SCHEMATIC DOES NOT SHOW WIRING TO FIELD. WIRING TO FIELD IS SHOWN IN FIELD WIRING DIAGRAM.
2. CIRCUIT BREAKERS AND FUSES ON TERMINAL BOARD ARE TO BE INSTALLED BY THE INSTALLER.
3. BOARD ARE TO BE INSTALLED IN A DRY, VENTILATED LOCATION.
4. COMPRESSOR RELAY CONTACTS ARE TO BE WIRING TO FIELD.
5. WIRING TO FIELD IS TO BE WIRING TO FIELD.
6. THESE WIRES MUST BE CONNECTED IN THE FIELD.
7. THESE WIRES MUST BE CONNECTED IN THE FIELD.
8. THESE WIRES MUST BE CONNECTED IN THE FIELD.
9. THESE WIRES MUST BE CONNECTED IN THE FIELD.
10. THESE WIRES MUST BE CONNECTED IN THE FIELD.

COMPONENT ARRANGEMENT
DEFROST BOARD
ECONOMIZER
RELAYS
SENSORS
TERMINAL BOARD

DEFROST SWITCH SETTINGS
DIP SWITCH SETTINGS
30 MINUTES 45 MINUTES 75 MINUTES 120 MINUTES
OFF (OFF) ON (ON) OFF (OFF) ON (ON) OFF (OFF) ON (ON) OFF (OFF) ON (ON)

Fig. 35 - RTU-MP System Control Wiring Diagram

Table 2 – RTU-MP Controller Inputs and Outputs

POINT NAME	BACnet OBJECT NAME	TYPE OF I/O	CONNECTION PIN NUMBERS
INPUTS			
Space Temperature Sensor	sptsens	AI (10K Thermistor)	J20–1, 2
Supply Air Temperature	sat	AI (10K Thermistor)	J2–1, 2
Local Outside Air Temperature Sensor	oatsens	AI (10K Thermistor)	J2–3, 4
Space Temperature Offset Pot	sptpot	AI (100K Potentiometer)	J20–3
Indoor Air Quality	iaq	AI (4–20 ma)	J4–2, 3
Outdoor Air Quality	oaq	AI (4–20 ma)	J4–5, 6
Safety Chain Feedback	safety	DI (24 VAC)	J1–9
Compressor Safety	compstat	DI (24 VAC)	J1–2
Fire Shutdown	firedown	DI (24 VAC)	J1–10
Enthalpy Switch	enthalpy	DI (24 VAC)	J2–6, 7
Humidistat Input Status	humstat	DI (24 VAC)	J5–7, 8
CONFIGURABLE INPUTS*			
Space Relative Humidity	sprh	AI (4–20 ma)	J4–2,3 or J4–5,6
Outside Air Relative Humidity	oarh	AI (4–20 ma)	
Supply Fan Status	fanstat	DI (24 VAC)	J5–1,2 or J5–3,4 or J5 5,6 or J5–7,8
Filter Status	filtstat	DI (24 VAC)	
Remote Occupancy Input	remocc	DI (24 VAC)	
OUTPUTS			
Economizer Commanded Position	econcmd	4–20ma	J2–5
Supply Fan Relay State	sf	DO Relay (24VAC , 1A)	J1–4
Compressor 1 Relay State	comp_1	DO Relay (24VAC , 1A)	J1–8
Compressor 2 Relay State	comp_2	DO Relay (24VAC , 1A)	J1–7
Heat Stage 1 Relay State	heat_1	DO Relay (24VAC , 1A)	J1–6
Heat Stage 2 Relay State	heat_2	DO Relay (24VAC , 1A)	J1–5
Power Exhaust Relay State	aux_2	DO Relay (24VAC , 1A)	J11–3
Dehumidification Relay State	humizer	DO Relay (24VAC, 1A)	J11–7, 8

LEGEND

- AI – Analog Input
- AO – Analog Output
- DI – Discrete Input
- DO – Discrete Output

* These inputs (if installed) take the place of the default input on the specific channel according to schematic. Parallel pins J5–1 = J2–6, J5–3 = J1–10, J5–5 = J1–2 are used for field–installation.

The RTU-MP controller requires the use of a Bryant space sensor. A standard thermostat cannot be used with the RTU-MP system.

Supply Air Temperature (SAT) Sensor —

On FIOP-equipped 548J*14D unit, the unit is supplied with a supply-air temperature (SAT) sensor (33ZCSENSAT). This sensor is a tubular probe type, approx 6-inches (12.7 mm) in length. It is a nominal 10-k ohm thermistor.

The SAT is factory-wired. The SAT probe is wire-tied to the supply-air opening (on the horizontal opening end) in its shipping position. Remove the sensor for installation. Re-position the sensor in the flange of the supply-air opening or in the supply air duct (as required by local codes). Drill or punch a 1/2-in. hole in the flange or duct. Use two field-supplied, self-drilling screws to secure the sensor probe in a horizontal orientation. See Fig. 36.

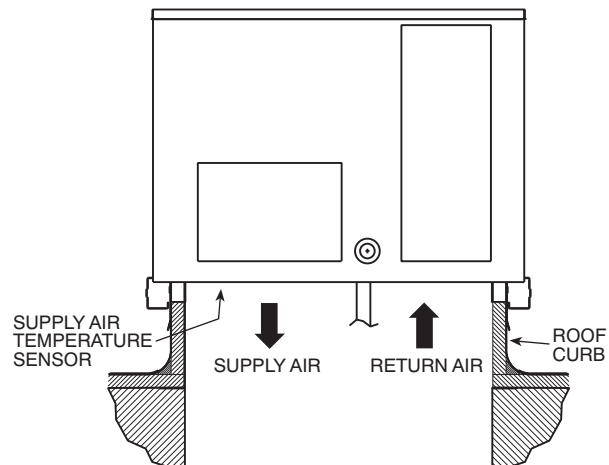


Fig. 36 - Typical Mounting Location for Supply Air Temperature (SAT) Sensor on Small Rooftop Units

C10020

548J*14D

Outdoor Air Temperature (OAT) Sensor —

The OAT is factory-mounted in the EconoMi\$er2 (FIOP or accessory). It is a nominal 10k ohm thermistor attached to an eyelet mounting ring.

EconoMi\$er2 —

The RTU-MP control is used with EconoMi\$er2 (option or accessory) for outdoor air management. The damper position is controlled directly by the RTU-MP control; EconoMi\$er2 has no internal logic device.

Outdoor air management functions can be enhanced with field-installation of these accessory control devices:

- Enthalpy control (outdoor air or differential sensors)
- Space CO₂ sensor
- Outdoor air CO₂ sensor

Field Connections

Field connections for accessory sensors and input devices are made the RTU-MP, at plugs J1, J2, J4, J5, J11 and J20. All field control wiring that connects to the RTU-MP must be routed as shown in Fig. 28. This routing provides the UL required clearance between high- and low-voltage wiring. Connect to the wires to the removable Phoenix connectors and then reconnect the connectors to the board.


Space Temperature (SPT) Sensors —

A field-supplied Bryant space temperature sensor is required with the RTU-MP to monitor space temperature. There are 3 sensors available for this application:

- 33ZCT55SPT, space temperature sensor with override button
- 33ZCT56SPT, space temperature sensor with override button and setpoint adjustment
- 33ZCT59SPT, space temperature sensor with LCD (liquid crystal display) screen, override button, and setpoint adjustment


Use 20 gauge wire to connect the sensor to the controller. The wire is suitable for distances of up to 500 ft. Use a three-conductor shielded cable for the sensor and setpoint adjustment connections. If the setpoint adjustment (slidebar) is not required, then an unshielded, 18 or 20 gauge, two-conductor, twisted pair cable may be used.

Connect T-55: See Fig. 37 for typical T-55 internal connections. Connect the T-55 SEN terminals to RTU-MP J20-1 and J20-2. See Fig. 38.

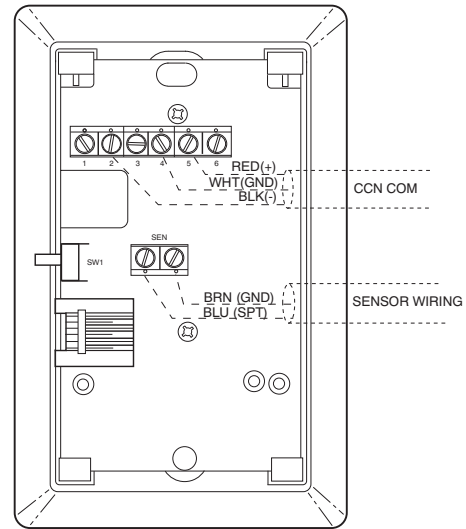

C08201


Fig. 37 - T-55 Space Temperature Sensor Wiring

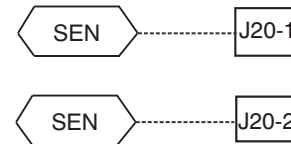

C08460


Fig. 38 - RTU-MP T-55 Sensor Connections

Connect T-56: See Fig. 39 for T-56 internal connections. Install a jumper between SEN and SET terminals as illustrated. Connect T-56 terminals to RTU-MP J20-1, J20-2 and J20-3 per Fig. 40.

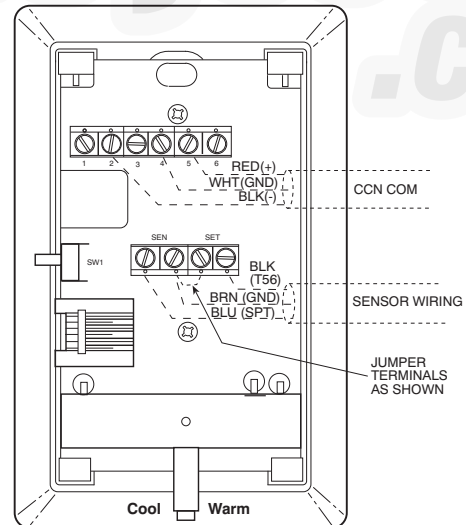

C08202


Fig. 39 - T-56 Internal Connections

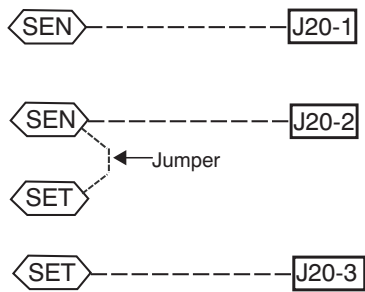

C08461

Fig. 40 - RTU-MP T-56 Sensor Connections

Connect T-59: The T-59 space sensor requires a separate, isolated power supply of 24 VAC. See Fig. 41 for internal connections at the T-59. Connect the SEN terminal (BLU) to RTU-MP J20-1. Connect the COM terminal (BRN) to J20-2. Connect the SET terminal (STO or BLK) to J20-3.

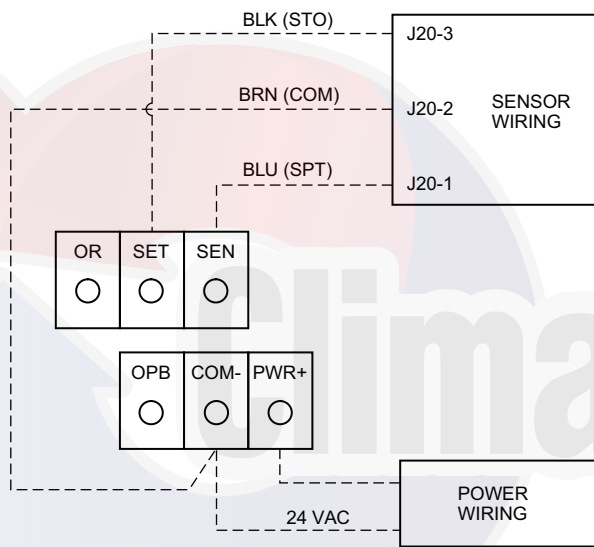

NOTE: Must use a separate isolated transformer.

C10291

Fig. 41 - Space Temperature Sensor Typical Wiring (33ZCT59SPT)

Economizer Controls —


To wire the return air enthalpy sensor, perform the following:

1. Use a 2-conductor, 18 or 20 AWG, twisted pair cable to connect the return air enthalpy sensor to the enthalpy controller.
2. Connect the field-supplied RED wire to (+) spade connector on the return air enthalpy sensor and the (+) terminal on the enthalpy controller. Connect the BLK wire to (-) spade connector on the return air enthalpy sensor and the (-) terminal on the enthalpy controller.

Indoor Air Quality (CO₂ sensor) —

The indoor air quality sensor accessory monitors space carbon dioxide (CO₂) levels. This information is used to monitor IAQ levels. Several types of sensors are available, for wall mounting in the space or in return duct, with and without LCD display, and in combination with space temperature sensors. Sensors use infrared technology to measure the levels of CO₂ present in the space air.

The CO₂ sensors are all factory set for a range of 0 to 2000 ppm and a linear mA output of 4 to 20. Refer to the instructions supplied with the CO₂ sensor for electrical requirements and terminal locations. See Fig. 42 for typical CO₂ sensor wiring schematic.

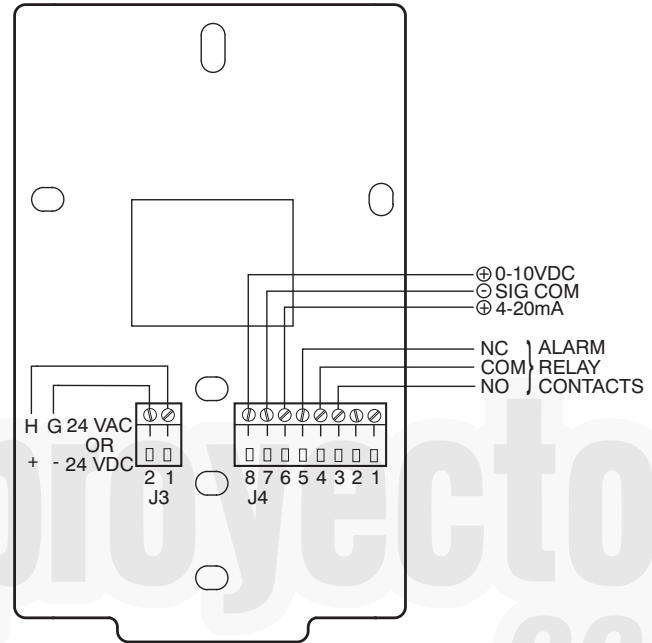

C08635

Fig. 42 - Indoor/Outdoor Air Quality (CO₂) Sensor (33ZCSENCO2) - Typical Wiring Diagram

To accurately monitor the quality of the air in the conditioned air space, locate the sensor near a return-air grille (if present) so it senses the concentration of CO₂ leaving the space. The sensor should be mounted in a location to avoid direct breath contact.


Do not mount the IAQ sensor in drafty areas such as near supply ducts, open windows, fans, or over heat sources. Allow at least 3 ft (0.9 m) between the sensor and any corner. Avoid mounting the sensor where it is influenced by the supply air; the sensor gives inaccurate readings if the supply air is blown directly onto the sensor or if the supply air does not have a chance to mix with the room air before it is drawn into the return airstream.

Wiring the Indoor Air Quality Sensor: For each sensor, use two 2-conductor 18 AWG (American Wire Gage) twisted-pair cables (unshielded) to connect the separate isolated 24 vac power source to the sensor and to connect the sensor to the control board terminals.

548J*14D

To connect the sensor to the control, identify the positive (4 to 20 mA) and ground (SIG COM) terminals on the sensor. See Fig. 42. Connect the 4-20 mA terminal to RTU-MP J4-2 and connect the SIG COM terminal to RTU-MP J4-3. See Fig. 43.

IAQ Sensor

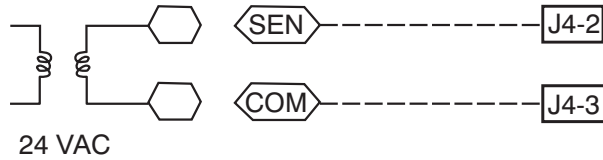


C08462

Fig. 43 - RTU-MP / Indoor CO₂ Sensor (33ZCSENCO2) Connections

Outdoor Air Quality Sensor (PNO 33ZCSENCO2 plus weatherproof enclosure) —

The outdoor air CO₂ sensor is designed to monitor carbon dioxide (CO₂) levels in the outside ventilation air and interface with the ventilation damper in an HVAC system. The OAQ sensor is packaged with an outdoor cover. See Fig. 44. The outdoor air CO₂ sensor must be located in the economizer outside air hood.

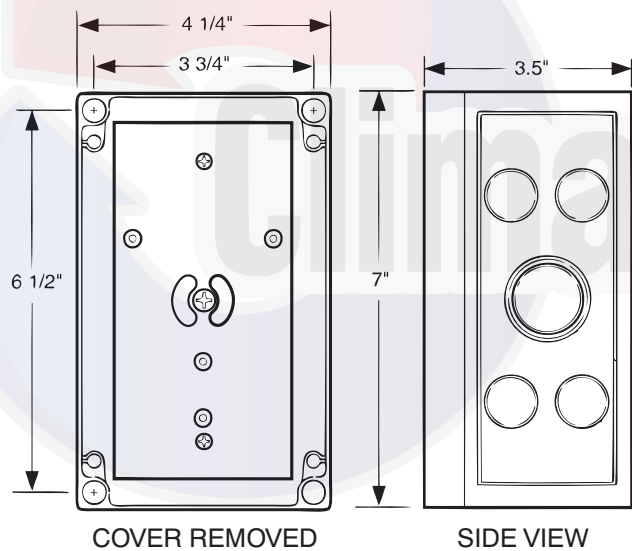


C07135

Fig. 44 - Outdoor Air Quality Sensor Cover

Wiring the Outdoor Air CO₂ Sensor: A dedicated power supply is required for this sensor. A two-wire cable is required to wire the dedicated power supply for the sensor. The two wires should be connected to the power supply and terminals 1 and 2.

To connect the sensor to the control, identify the positive (4 to 20 mA) and ground (SIG COM) terminals on the OAQ sensor. See Fig. 42. Connect the 4 to 20 mA terminal to RTU-MP J4-5. Connect the SIG COM terminal to RTU-MP J4-6. See Fig. 45.

OAQ Sensor/RH Sensor

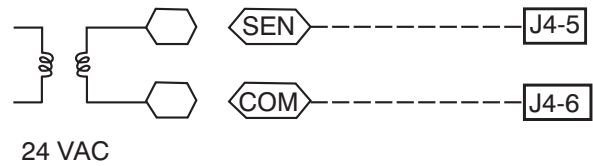

C08463

Fig. 45 - RTU-MP / Outdoor CO₂ Sensor (33ZCSENCO2) Connections

On 548J*14D units equipped with factory-installed Smoke Detector(s), the smoke detector controller implements the unit shutdown through its NC contact set connected to the unit's CTB input. The FSD function is initiated via the smoke detector's Alarm NO contact set. The RTU-MP controller communicates the smoke detector's tripped status to the BAS building control. See Fig. 35, RTU-MP System Control wiring schematic.

The Fire Shutdown Switch configuration, *MENU* → *Config* → *Inputs* → *input 5*, identifies the normally open status of this input when there is no fire alarm.

Connecting Discrete Inputs —

Filter Status: The filter status accessory is a field-installed accessory. This accessory detects plugged filters. When installing this accessory, the unit must be configured for filter status by setting *MENU* → *Config* → *Inputs* → *input 3, 5, 8, or 9* to Filter Status and normally open (N/O) or normally closed (N/C). Input 8 or 9 is recommended for easy of installation. Refer to Fig. 33 and Fig. 35 for wire terminations at J5.


Fan Status: The fan status accessory is a field-installed accessory. This accessory detects when the indoor fan is blowing air. When installing this accessory, the unit must be configured for fan status by setting *MENU* → *Config* → *Inputs* → *input 3, 5, 8, or 9* to Fan Status and normally open (N/O) or normally closed (N/C). Input 8 or 9 is recommended for easy of installation. Refer to Fig. 33 and Fig. 35 for wire terminations at J5.

Remote Occupancy: The remote occupancy accessory is a field-installed accessory. This accessory overrides the unoccupied mode and puts the unit in occupied mode. When installing this accessory, the unit must be configured for remote occupancy by setting *MENU* → *Config* → *Inputs* → *input 3, 5, 8, or 9* to Remote Occupancy and normally open (N/O) or normally closed (N/C).

Also set *MENU* → *Schedules* → *occupancy source* to DI on/off. Input 8 or 9 is recommended for easy of installation. Refer to Fig. 33 and Table 2 for wire terminations at J5.

Power Exhaust (output): Connect the accessory Power Exhaust contactor coil(s) per Fig. 46.

Power Exhaust

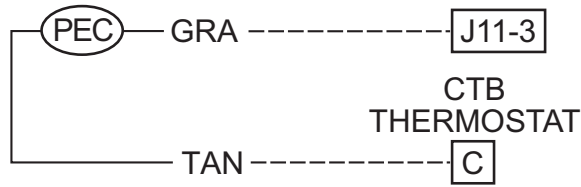

C10362

Fig. 46 - RTU-MP Power Exhaust Connections

Space Relative Humidity Sensor - The RH sensor is not used with 548J*14D models at this time.

Communication Wiring - Protocols

General —

Protocols are the communication languages spoken by control devices. The main purpose of a protocol is to communicate information in the most efficient method possible. Different protocols exist to provide different kinds of information for different applications. In the BAS application, many different protocols are used, depending on manufacturer. Protocols do not change the function of a controller; just make the front end user different.

The RTU-MP can be set to communicate on four different protocols: BACnet, Modbus, N2, and LonWorks. Switch 3 (SW3) on the board is used to set protocol and baud rate. Switches 1 and 2 (SW1 and SW2) are used to set the board's network address. See Fig. 47 for the switch setting

per protocol. The 3rd party connection to the RTU-MP is through plug J19.

NOTE: Power must be cycled after changing the SW1-3 switch settings.

Refer to the *RTU-MP 3rd Party Integration Guide* for more detailed information on protocols, 3rd party wiring, and networking.

Local Access —

BACview⁶ Handheld: The BACview⁶ is a keypad/display interface used to connect to the RTU-MP to access the control information, read sensor values, and test the RTU, see Fig. 48. This is an accessory interface that does not come with the MP controller and can only be used at the unit. Connect the BACview⁶ to the RTU-MP's J12 local access port. There are 2 password protected levels in the display (User and Admin). The user password is defaulted to 0000 but can be changed. The Admin password is 1111 and cannot be changed. There is a 10 minute auto logout if a screen is idle. Contact your Bryant applications engineer for details on navigation and screen content.

Virtual BACview: Virtual BACview is a freeware computer program that functions as the BACview⁶ Handheld. The USB Link interface (USB-L) is required to connect a computer to the RTU-MP board. The link cable connects a USB port to the J12 local access port. This program functions and operates identical to the handheld.

RTU-MP Troubleshooting —

Communication LEDs The LEDs indicate if the controller is speaking to the devices on the network. The LEDs should reflect communication traffic based on the baud rate set. The higher the baud rate the more solid the LEDs will appear.

SW3 Protocol Selection

PROTOCOL	DS8	DS7	DS6	DS5	DS4	DS3	DS2	DS1
BACnet MS/TP (Master)	Unused	OFF	OFF	OFF	ON	OFF	Select Baud	Select Baud
Modbus (Slave)	Unused	OFF	OFF	ON	ON	OFF	Select Baud	Select Baud
N2 (Slave)	Unused	OFF	OFF	OFF	ON	ON	OFF	OFF
LonWorks	Unused	ON	ON	OFF	ON	OFF	OFF	OFF


NOTE:

DS = Dip Switch

BACnet MS/TP SW3 example shown

Baud Rate Selections

BAUD RATE	DS2	DS1
9600	OFF	OFF
19,200	ON	OFF
38,400	OFF	ON
76,800	ON	ON

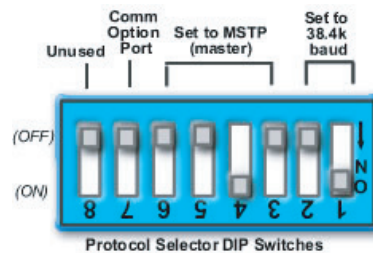

C07166

Fig. 47 - RTU-MP SW3 Dip Switch Settings

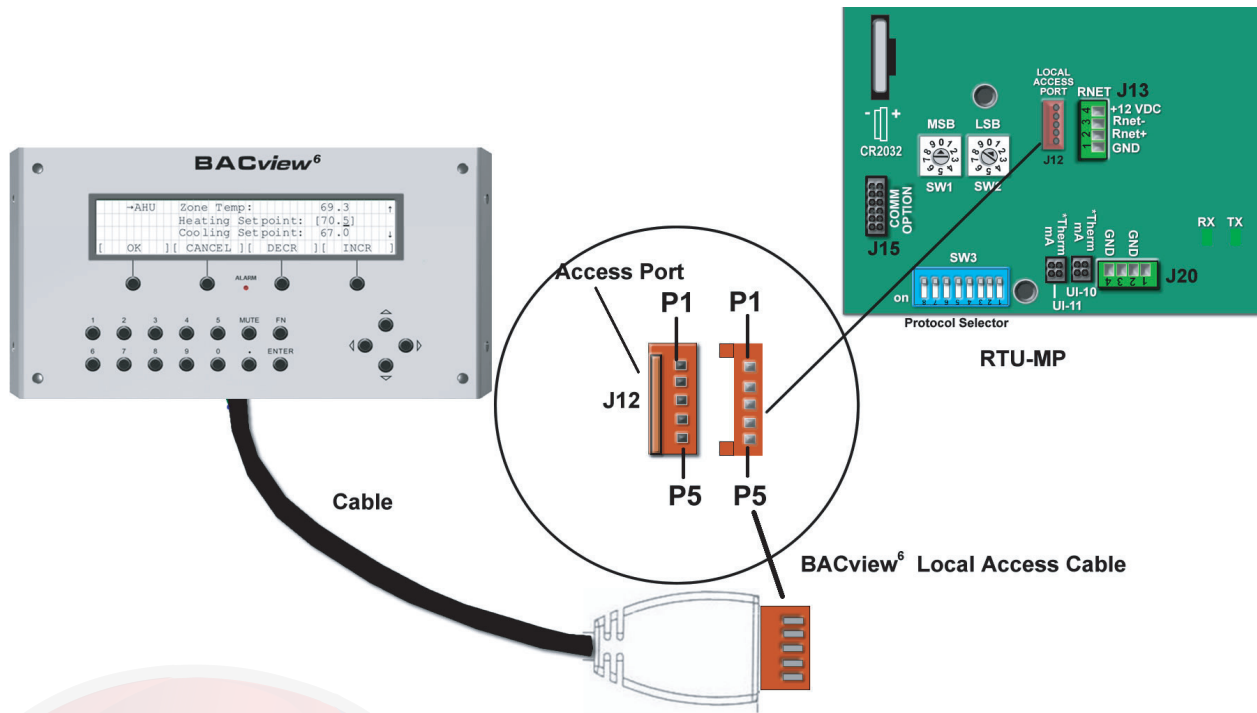


Fig. 48 - BACview⁶ Handheld Connections

C07170

Table 3 – LEDs

The LEDs on the RTU-MP show the status of certain functions

If this LED is on...	Status is...
Power	The RTU MP has power
Rx	The RTU MP is receiving data from the network segment
Tx	The RTU MP is transmitting data over the network segment
DO#	The digital output is active

The **Run** and **Error** LEDs indicate control module and network status

If Run LED shows...	And Error LED shows...	Status is...
2 flashes per second	Off	Normal
2 flashes per second	2 flashes, alternating with Run LED	Five minute auto-restart delay after system error
2 flashes per second	3 flashes, then off	Control module has just been formatted
2 flashes per second	4 flashes, then pause	Two or more devices on this network have the same ARC156 network address
2 flashes per second	On	Exec halted after frequent system errors or control programs halted
5 flashes per second	On	Exec start-up aborted, Boot is running
5 flashes per second	Off	Firmware transfer in progress, Boot is running
7 flashes per second	7 flashes per second, alternating with Run LED	Ten second recovery period after brownout
14 flashes per second	14 flashes per second, alternating with Run LED	Brownout
On	On	Failure. Try the following solutions: <ul style="list-style-type: none"> • Turn the RTU-MP off, then on. • Format the RTU-MP. • Download memory to the RTU-MP. • Replace the RTU-MP.

NOTE: Contact your Bryant applications engineer for details on configuration of RTU-MP, operating sequences and troubleshooting information, as well as details on configuration and troubleshooting of connected networks.

Smoke Detectors

Smoke detectors are available as factory-installed options on 548J*14D models. Smoke detectors may be specified for Supply Air only or for Return Air without or with economizer or in combination of Supply Air and Return Air. Return Air smoke detectors are arranged for vertical return configurations only. All components necessary for operation are factory-provided and mounted. The unit is factory-configured for immediate smoke detector shutdown operation; additional wiring or modifications to unit terminal board may be necessary to complete the unit and smoke detector configuration to meet project requirements.

Units equipped with factory-optional Return Air smoke detectors require a relocation of the sensor module at unit installation. See “**Completing Installation of Return Air Smoke Sensor:**” on page 29 for details.

System —

The smoke detector system consists of a four-wire controller and one or two sensors. Its primary function is to shut down the rooftop unit in order to prevent smoke from circulating throughout the building. It is not to be used as a life saving device.

Controller —

The controller (see Fig. 49) includes a controller housing, a printed circuit board, and a clear plastic cover. The controller can be connected to one or two compatible duct smoke sensors. The clear plastic cover is secured to the housing with a single captive screw for easy access to the wiring terminals. The controller has three LEDs (for Power, Trouble and Alarm) and a manual test/reset button, all located on the cover face.

Sensor —

The sensor (see Fig. 50) includes a plastic housing, a printed circuit board, a clear plastic cover, a sampling tube inlet and an exhaust tube. The sampling tube (when used) and exhaust tube are attached during installation. The sampling tube varies in length depending on the size of the rooftop unit. The clear plastic cover permits visual inspections without having to disassemble the sensor. The cover attaches to the sensor housing using four captive screws and forms an airtight chamber around the sensing electronics. Each sensor includes a harness with an RJ45 terminal for connecting to the controller. Each sensor has four LEDs (for Power, Trouble, Alarm and Dirty) and a manual test/reset button (on the left-side of the housing).

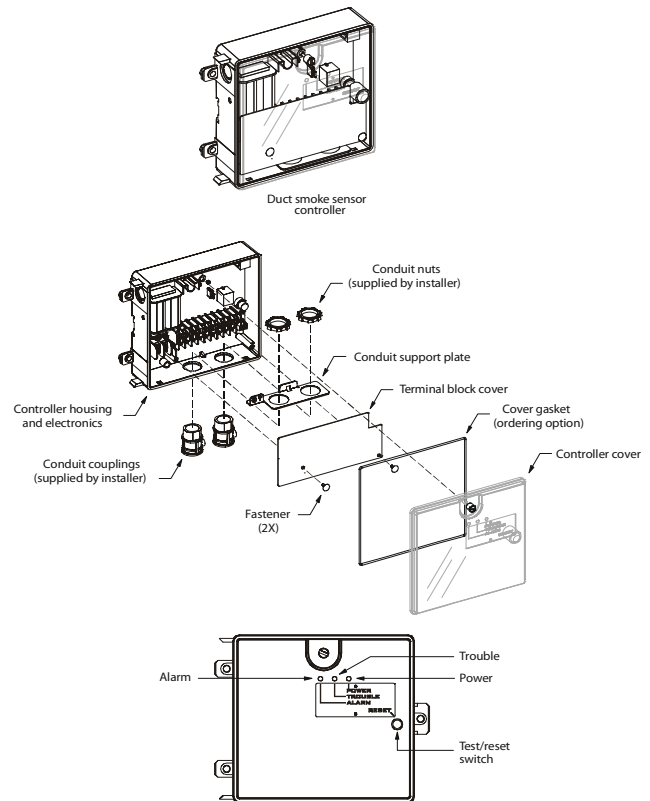


Fig. 49 - Controller Assembly

C08208

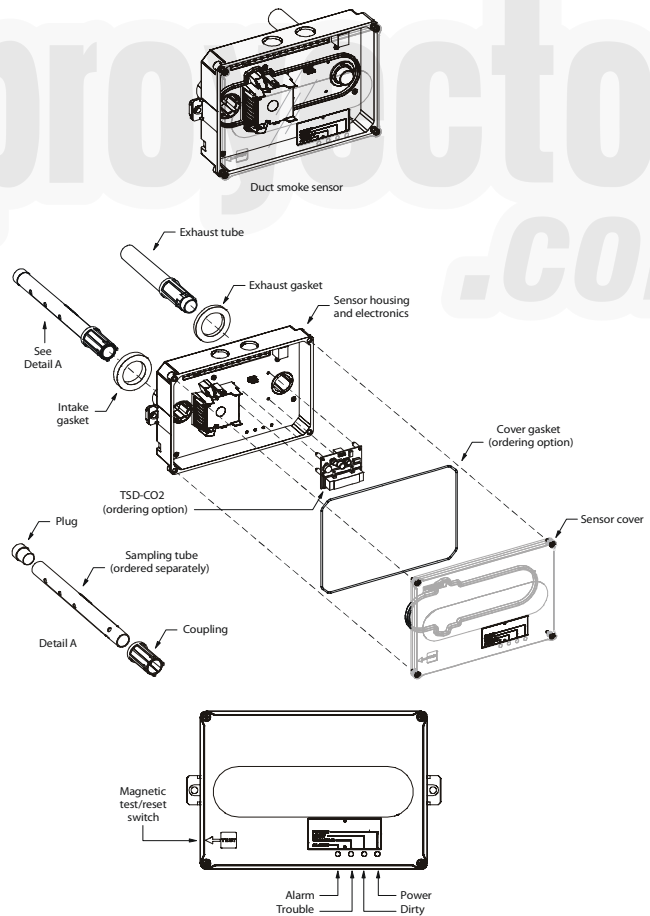


Fig. 50 - Smoke Detector Sensor

C08209

548J*14D

Air is introduced to the duct smoke detector sensor's sensing chamber through a sampling tube that extends into the HVAC duct and is directed back into the ventilation system through a (shorter) exhaust tube. The difference in air pressure between the two tubes pulls the sampled air through the sensing chamber. When a sufficient amount of smoke is detected in the sensing chamber, the sensor signals an alarm state and the controller automatically takes the appropriate action to shut down fans and blowers, change over air handling systems, notify the fire alarm control panel, etc.


The sensor uses a process called differential sensing to prevent gradual environmental changes from triggering false alarms. A rapid change in environmental conditions, such as smoke from a fire, causes the sensor to signal an alarm state but dust and debris accumulated over time does not.

For installations using two sensors, the duct smoke detector does not differentiate which sensor signals an alarm or trouble condition.

Smoke Detector Locations

Supply Air —

The Supply Air smoke detector sensor is located to the left of the unit's indoor (supply) fan. See Fig. 51. Access is through the left side blower access panel. There is no sampling tube used at this location. The sampling tube inlet extends through the side plate of the fan housing (into a high pressure area). The controller is located on a bracket to the right of the return filter, accessed through the lift-off filter panel.

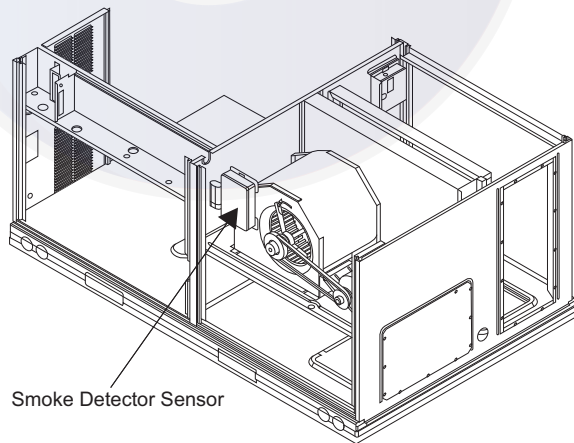

C08245


Fig. 51 - Typical Supply Air Smoke Detector Sensor Location

Return Air without Economizer —

The sampling tube is located across the return air opening on the unit basepan. See Fig. 52. The holes in the sampling tube face downward, into the return air stream. The sampling tube is connected via tubing to the return air sensor that is mounted on a bracket high on the partition between return filter and controller location. (This sensor is shipped in a flat-mounting location. Installation requires that this sensor be relocated to its operating location and the tubing to the sampling tube be connected. See “**Completing Installation of Return Air Smoke Sensor:**” on page 29 for details.)

Return Air with Economizer —

The sampling tube is inserted through the side plates of the economizer housing, placing it across the return air opening on the unit basepan. See Fig. 52. The holes in the sampling tube face downward, into the return air stream. The sampling tube is connected via tubing to the return air sensor that is mounted on a bracket high on the partition between return filter and controller location. (This sensor is shipped in a flat-mounting location. Installation requires that this sensor be relocated to its operating location and the tubing to the sampling tube be connected. See the following installation procedure.)

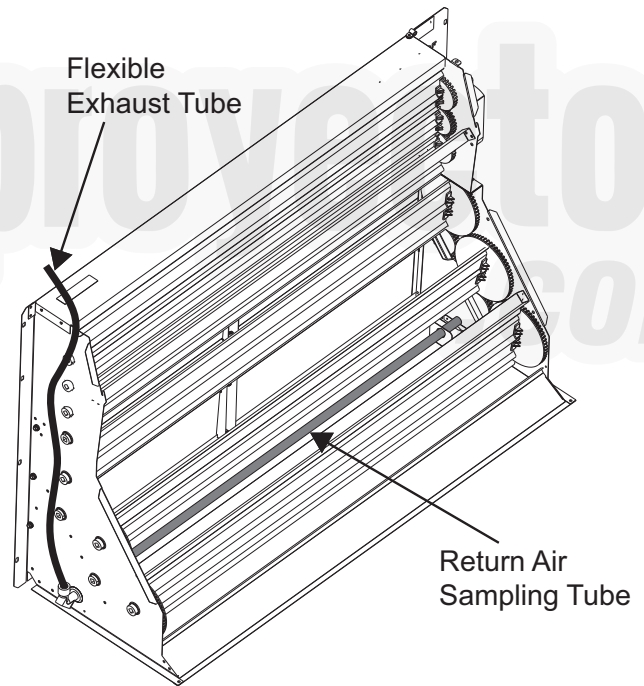

C10330

Fig. 52 - Return Air Sampling Tube Location

Completing Installation of Return Air Smoke Sensor:

1. Unscrew the two screws holding the Return Air Sensor detector plate. See Fig. 53. Save the screws.
2. Remove the Return Air Sensor and its detector plate.
3. Rotate the detector plate so the sensor is facing outwards and the sampling tube connection is on the bottom. See Fig. 54.
4. Screw the sensor and detector plate into its operating position using screws from Step 1. Make sure the sampling tube connection is on the bottom and the exhaust tube is on the top. See Fig. 54.
5. Connect the flexible tube on the sampling inlet to the sampling tube on the basepan.

Additional Application Data —

Refer to Catalog No. HKRNKA-1XA for discussions on additional control features of these smoke detectors including multiple unit coordination.

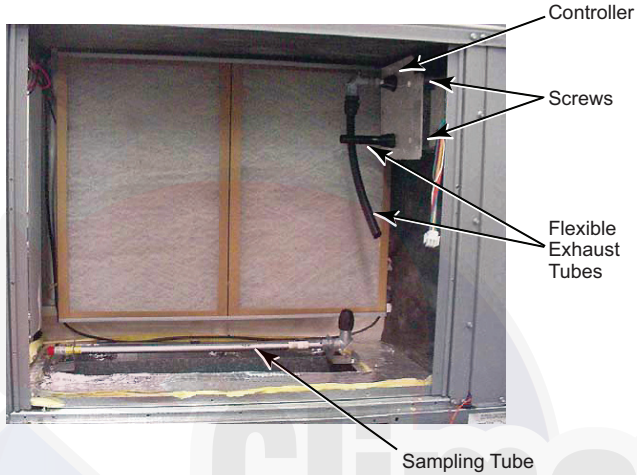


Fig. 53 - Return Air Detector Shipping Position

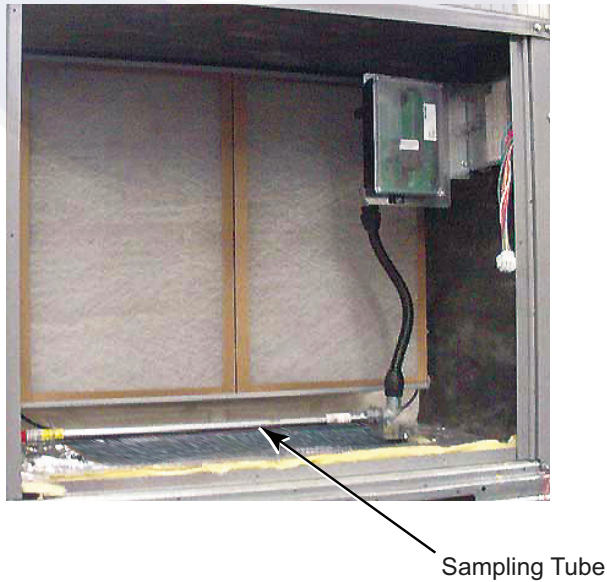


Fig. 54 - Return Air Sensor Operating Position

Table 4 – Unit Wire/Fuse or HACR Breaker Sizing Data

UNIT	NOM. V – Ph – Hz	IFM TYPE	ELEC. HTR			PE	NO C.O. or UNPWR C.O.							
			CRHEATER ***A00	Nom (kW)	FLA	FLA	NO PE.				w/ PE. (pwrd fr/unit)			
							MCA	FUSE or HACR BRKR	DISC. SIZE		MCA	FUSE or HACR BRKR	DISC. SIZE	
									FLA	LRA			FLA	LRA
548J*14D	208/230 – 3 – 60	STD	NONE	–	–	3.8	62.4	80	65	366	66.2	80	70	370
			291A00	12.4/16.5	34.4/39.7		105.4/112.0	110/125	105/111	400/406	109.2/115.8	110/125	109/115	404/410
			288A00,291A00	19.9/26.5	55.3/63.8		131.5/142.2	150/150	129/139	477/494	135.3/146.0	150/150	133/143	481/498
			294A00	25.2/33.5	69.9/80.6		149.8/163.2	150/175	146/158	436/447	153.6/167.0	175/175	150/162	440/451
			288A00,294A00	32.7/43.5	90.7/104.7		175.8/193.3	200/200	170/186	547/575	179.6/197.1	200/200	174/190	551/579
		291A00,294A00	37.6/50.0	104.3/120.3	192.8/182.7	200/200	185/204	575/607	196.6/186.5	200/200	190/208	579/611		
		MED	NONE	–	–	3.8	62.4	80	65	366	66.2	80	70	370
			291A00	12.4/16.5	34.4/39.7		105.4/112.0	110/125	105/111	400/406	109.2/115.8	110/125	109/115	404/410
			288A00,291A00	19.9/26.5	55.3/63.8		131.5/142.2	150/150	129/139	477/494	135.3/146.0	150/150	133/143	481/498
			294A00	25.2/33.5	69.9/80.6		149.8/163.2	150/175	146/158	436/447	153.6/167.0	175/175	150/162	440/451
			288A00,294A00	32.7/43.5	90.7/104.7		175.8/193.3	200/200	170/186	547/575	179.6/197.1	200/200	174/190	551/579
		291A00,294A00	37.6/50.0	104.3/120.3	192.8/182.7	200/200	185/204	575/607	196.6/186.5	200/200	190/208	579/611		
		HIGH	NONE	–	–	3.8	75.3	90	80	402	79.1	100	85	406
			291A00	12.4/16.5	34.4/39.7		118.3/124.9	125/125	120/126	436/442	122.1/128.7	125/150	124/130	440/446
			288A00,291A00	19.9/26.5	55.3/63.8		144.4/155.1	150/175	144/154	513/530	148.2/158.9	150/175	148/158	517/534
294A00	25.2/33.5		69.9/80.6	162.7/176.1	175/200		161/173	472/483	166.5/179.9	175/200	165/177	476/487		
288A00,294A00	32.7/43.5		90.7/104.7	188.7/206.2	200/225		184/201	583/611	192.5/210.0	200/225	189/205	587/615		
291A00,294A00	37.6/50.0	104.3/120.3	205.7/195.6	225/225	200/219	611/643	209.5/199.4	225/225	204/223	615/647				
548J*14D	460 – 3 – 60	STD	NONE	–	–	1.8	29.7	40	31	184	31.5	40	33	186
			292A00	16.5	19.9		54.5	60	54	204	56.3	60	56	206
			289A00,292A00	26.5	31.9		69.5	70	68	248	71.3	80	70	250
			295A00	33.5	40.3		80.0	90	77	224	81.8	90	79	226
			289A00,295A00	43.5	52.3		95.0	100	91	289	96.8	100	93	291
		292A00,295A00	50.0	60.2	89.9	100	100	304	91.7	100	102	306		
		MED	NONE	–	–	1.8	29.7	40	31	184	31.5	40	33	186
			292A00	16.5	19.9		54.5	60	54	204	56.3	60	56	206
			289A00,292A00	26.5	31.9		69.5	70	68	248	71.3	80	70	250
			295A00	33.5	40.3		80.0	90	77	224	81.8	90	79	226
			289A00,295A00	43.5	52.3		95.0	100	91	289	96.8	100	93	291
		292A00,295A00	50.0	60.2	89.9	100	100	304	91.7	100	102	306		
		HIGH	NONE	–	–	1.8	36.5	45	39	202	38.3	45	41	204
			292A00	16.5	19.9		61.3	70	62	222	63.1	70	64	224
			289A00,292A00	26.5	31.9		76.3	80	76	266	78.1	80	78	268
295A00	33.5		40.3	86.8	90		85	242	88.6	90	87	244		
289A00,295A00	43.5		52.3	101.8	110		99	307	103.6	110	101	309		
292A00,295A00	50.0	60.2	96.7	100	108	322	98.5	110	110	324				
575 – 3 – 60	STD	NONE	–	–	3.8	24.0	30	25	136	27.8	30	30	140	
		293A00	16.5	15.9		43.9	45	43	152	47.7	50	48	156	
		290A00,293A00	26.5	25.5		55.9	60	55	187	59.7	60	59	191	
		296A00	33.5	32.2		64.3	70	62	168	68.1	70	67	172	
		290A00,296A00	43.5	41.8		76.3	80	73	220	80.1	90	78	224	
	293A00,296A00	50.0	48.1	72.1	80	81	232	75.9	80	85	236			
	MED	NONE	–	–	3.8	24.0	30	25	136	27.8	30	30	140	
		293A00	16.5	15.9		43.9	45	43	152	47.7	50	48	156	
		290A00,293A00	26.5	25.5		55.9	60	55	187	59.7	60	59	191	
		296A00	33.5	32.2		64.3	70	62	168	68.1	70	67	172	
		290A00,296A00	43.5	41.8		76.3	80	73	220	80.1	90	78	224	
	293A00,296A00	50.0	48.1	72.1	80	81	232	75.9	80	85	236			
	HIGH	NONE	–	–	3.8	30.4	35	32	148	34.2	40	37	152	
		293A00	16.5	15.9		50.2	60	51	164	54.0	60	55	168	
		290A00,293A00	26.5	25.5		62.2	70	62	199	66.0	70	66	203	
296A00		33.5	32.2	70.6		80	69	180	74.4	80	74	184		
290A00,296A00		43.5	41.8	82.6		90	80	232	86.4	90	85	236		
293A00,296A00	50.0	48.1	78.5	90	88	244	82.3	90	92	248				

NOTE: See page 32 for table legend and notes.

Table 4 – Unit Wire/Fuse or HACR Breaker Sizing Data (cont)

UNIT	NOM. V – Ph – Hz	IFM TYPE	ELEC. HTR			PE	w/ PWRD C.O.							
			CRHEATER ***A00	Nom (kW)	FLA	FLA	NO PE.				w/ PE. (pwrd fr/unit)			
							MCA	FUSE or HACR BRKR	DISC. SIZE		MCA	FUSE or HACR BRKR	DISC. SIZE	
									FLA	LRA			FLA	LRA
548J*14D	208/230 – 3 – 60	STD	NONE	–	–	3.8	67.2	80	71	371	71.0	80	75	375
			291A00	12.4/16.5	34.4/39.7		110.2/116.8	125/125	110/116	405/411	114.0/120.6	125/125	115/121	409/415
			288A00,291A00	19.9/26.5	55.3/63.8		136.3/147.0	150/150	134/144	482/499	140.1/150.8	150/175	139/149	486/503
			294A00	25.2/33.5	69.9/80.6		154.6/168.0	175/175	151/164	441/452	158.4/171.8	175/175	156/168	445/456
			288A00,294A00	32.7/43.5	90.7/104.7		180.6/198.1	200/200	175/191	552/580	184.4/201.9	200/225	180/196	556/584
		291A00,294A00	37.6/50.0	104.3/120.3	197.6/187.5	200/200	191/209	580/612	201.4/191.3	225/200	195/214	584/616		
		MED	NONE	–	–	3.8	67.2	80	71	371	71.0	80	75	375
			291A00	12.4/16.5	34.4/39.7		110.2/116.8	125/125	110/116	405/411	114.0/120.6	125/125	115/121	409/415
			288A00,291A00	19.9/26.5	55.3/63.8		136.3/147.0	150/150	134/144	482/499	140.1/150.8	150/175	139/149	486/503
	294A00		25.2/33.5	69.9/80.6	154.6/168.0		175/175	151/164	441/452	158.4/171.8	175/175	156/168	445/456	
	HIGH	NONE	–	–	3.8	80.1	100	86	407	83.9	100	90	411	
		291A00	12.4/16.5	34.4/39.7		123.1/129.7	125/150	125/131	441/447	126.9/133.5	150/150	130/136	445/451	
		288A00,291A00	19.9/26.5	55.3/63.8		149.2/159.9	150/175	149/159	518/535	153.0/163.7	175/175	154/163	522/539	
		294A00	25.2/33.5	69.9/80.6		167.5/180.9	175/200	166/178	477/488	171.3/184.7	175/200	170/183	481/492	
		288A00,294A00	32.7/43.5	90.7/104.7		193.5/211.0	200/225	190/206	588/616	197.3/214.8	200/225	194/210	592/620	
	291A00,294A00	37.6/50.0	104.3/120.3	210.5/200.4	225/225	206/224	616/648	214.3/204.2	225/225	210/228	620/652			
	460 – 3 – 60	STD	NONE	–	–	1.8	31.9	40	34	186	33.7	40	36	188
			292A00	16.5	19.9		56.7	60	56	206	58.5	60	59	208
289A00,292A00			26.5	31.9	71.7		80	70	250	73.5	80	72	252	
295A00			33.5	40.3	82.2		90	80	226	84.0	90	82	228	
289A00,295A00			43.5	52.3	97.2		100	94	291	99.0	100	96	293	
292A00,295A00		50.0	60.2	92.1	100	103	306	93.9	100	105	308			
MED		NONE	–	–	1.8	31.9	40	34	186	33.7	40	36	188	
		292A00	16.5	19.9		56.7	60	56	206	58.5	60	59	208	
		289A00,292A00	26.5	31.9		71.7	80	70	250	73.5	80	72	252	
	295A00	33.5	40.3	82.2		90	80	226	84.0	90	82	228		
HIGH	NONE	–	–	1.8	38.7	45	41	204	40.5	50	43	206		
	292A00	16.5	19.9		63.5	70	64	224	65.3	70	66	226		
	289A00,292A00	26.5	31.9		78.5	80	78	268	80.3	90	80	270		
	295A00	33.5	40.3		89.0	90	88	244	90.8	100	90	246		
	289A00,295A00	43.5	52.3		104.0	110	102	309	105.8	110	104	311		
292A00,295A00	50.0	60.2	98.9	110	111	324	100.7	110	113	326				
575 – 3 – 60	STD	NONE	–	–	3.8	25.7	30	27	138	29.5	35	32	142	
		293A00	16.5	15.9		45.6	50	45	154	49.4	50	50	158	
		290A00,293A00	26.5	25.5		57.6	60	56	189	61.4	70	61	193	
		296A00	33.5	32.2		66.0	70	64	170	69.8	70	69	174	
		290A00,296A00	43.5	41.8		78.0	80	75	222	81.8	90	80	226	
	293A00,296A00	50.0	48.1	73.8	80	82	234	77.6	80	87	238			
	MED	NONE	–	–	3.8	25.7	30	27	138	29.5	35	32	142	
		293A00	16.5	15.9		45.6	50	45	154	49.4	50	50	158	
		290A00,293A00	26.5	25.5		57.6	60	56	189	61.4	70	61	193	
		296A00	33.5	32.2		66.0	70	64	170	69.8	70	69	174	
290A00,296A00		43.5	41.8	78.0		80	75	222	81.8	90	80	226		
293A00,296A00	50.0	48.1	73.8	80	82	234	77.6	80	87	238				
HIGH	NONE	–	–	3.8	32.1	40	34	150	35.9	40	39	154		
	293A00	16.5	15.9		51.9	60	53	166	55.7	60	57	170		
	290A00,293A00	26.5	25.5		63.9	70	64	201	67.7	70	68	205		
	296A00	33.5	32.2		72.3	80	71	182	76.1	80	76	186		
	290A00,296A00	43.5	41.8		84.3	90	82	234	88.1	90	87	238		
293A00,296A00	50.0	48.1	80.2	90	90	246	84.0	90	94	250				

548J*14D

NOTE: See page 32 for table legend and notes.

Legend and Notes for Table 4

LEGEND:

BRKR	-	Circuit breaker
CO	-	Convenient outlet
DISC	-	Disconnect
FLA	-	Full load amps
IFM	-	Indoor fan motor
LRA	-	Locked rotor amps
MCA	-	Minimum circuit amps
PE	-	Power exhaust
PWRD CO	-	Powered convenient outlet
UNPWR CO	-	Unpowered convenient outlet



NOTES:

1. In compliance with NEC requirements for multimotor and combination load equipment (refer to NEC Articles 430 and 440), the overcurrent protective device for the unit shall be fuse or HACR breaker. Canadian units may be fuse or circuit breaker.

2. Unbalanced 3-Phase Supply Voltage

Never operate a motor where a phase imbalance in supply voltage is greater than 2%. Use the following formula to determine the percentage of voltage imbalance.

$$\% \text{ Voltage Imbalance} = 100 \times \frac{\text{max voltage deviation from average voltage}}{\text{average voltage}}$$

Example: Supply voltage is 230-3-60



AB = 224 v
BC = 231 v
AC = 226 v

$$\text{Average Voltage} = \frac{(224 + 231 + 226)}{3} = \frac{681}{3} = 227$$

Determine maximum deviation from average voltage.

(AB) 227 - 224 = 3 v

(BC) 231 - 227 = 4 v

(AC) 227 - 226 = 1 v

Maximum deviation is 4 v.

Determine percent of voltage imbalance.

$$\% \text{ Voltage Imbalance} = 100 \times \frac{4}{227} = 1.76\%$$

This amount of phase imbalance is satisfactory as it is below the maximum allowable 2%.

IMPORTANT: If the supply voltage phase imbalance is more than 2%, contact your local electric utility company immediately.

548J*14D

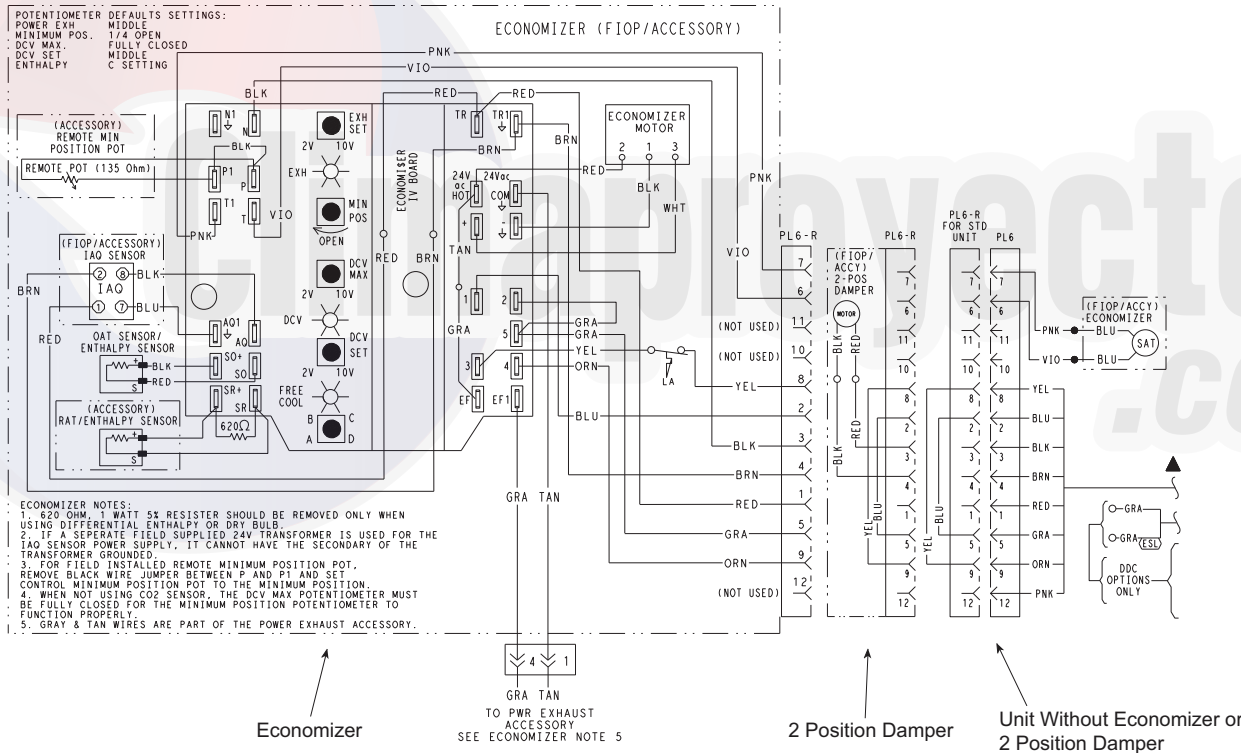


Fig. 55 - EconoMi\$er™ IV Wiring

C10333

Step 11 — Adjust Factory-Installed Options

Smoke Detectors —

Smoke detector(s) will be connected at the Central Terminal Board (CTB), at terminals marked “Smoke Shutdown”. Remove jumper JMP 3 when ready to energize unit.

EconoMi\$er IV Occupancy Switch —

Refer to Fig. 55 for general EconoMi\$er IV wiring. External occupancy control is managed through a connection on the Central Terminal Board.

If external occupancy control is desired, connect a time clock or remotely controlled switch (closed for Occupied, open for Unoccupied sequence) at terminals marked OCCUPANCY on CTB. Remove or cut jumper JMP 2 to complete the installation.

Step 12 — Install Accessories

Available accessories include:

- Roof Curb (must be installed before unit)
- Thru-base connection kit (must be installed before unit is set on curb; see page 15)
- Manual outside air damper
- Two-Position motorized outside air damper (see page 9)
- EconoMi\$er IV (with control and integrated barometric relief; see page 8)
- EconoMi\$er2 (without control/for external signal and integrated barometric relief; see page 8)
- Power Exhaust
- Differential dry-bulb sensor (EconoMi\$er IV)
- Outdoor enthalpy sensor
- Differential enthalpy sensor
- Electric Heaters (see page 16)
- Single Point kits (see page 17)
- Thermostat / Sensors (see pages 21-22)
- CO₂ sensor (see pages 22-24)
- Louvered hail guard
- Phase monitor control

Refer to separate installation instructions for information on installing these accessories.

Pre-Start and Start-Up

This completes the mechanical installation of the unit. Refer to the unit's Service Manual for detailed Pre-Start and Start-up instructions.

548J*14D

Climaproyectos
.com





548J*14D

